



# Installation Operation Maintenance

CMAC SE - HE

Air-to-water or Air-sourced multi-pipe units with scroll compressors

Cooling capacity 45 - 779 kW

Heating capacity (heat pump mode) 49 - 881 kW

**BALANCE**<sup>TM</sup>



July 2021

**CG-SVX042C-GB**

**TRANE**  
TECHNOLOGIES

# Table of Contents

General information .....	4
1.1 Purpose of the Manual.....	4
1.2 Delivery of the unit.....	4
1.3 Unit identification.....	4
1.4 Warranty .....	5
Mechanical installation.....	6
2.1 Shipping .....	6
2.2 Responsibility.....	6
2.3 Safety .....	6
2.4 Operating limits & Operating maps .....	6
CMAC Operating Maps.....	7
2.5 Handling and lifting .....	9
2.6 Positioning.....	10
2.7 Minimum space requirements.....	10
2.8 Installation .....	12
2.9 Safety regulations.....	13
2.10 General precautions.....	14
2.11 Water piping.....	17
2.12 Water treatment.....	18
2.13 Antifreeze protection on the heat exchangers.....	18
2.14 Flow switch installation .....	19
2.15 Hydraulic data .....	21
2.16 HYDRAULIC VERSIONS .....	23
Hydronic kit .....	23
2.17 Refrigerant circuit safety valves .....	42
2.18 Heat exchanger pressure drop.....	42
2.19 Control and safety calibration.....	42
Electrical installation .....	44
3.1 Electrical components .....	49
3.2 Electrical connections.....	49
3.3 Electrical Recommendations .....	49
Unit operation .....	50
4.1 Operator responsibilities.....	50
4.2 Unit description.....	50
4.4 Compressor oil load .....	53

## Table of Contents

Pre-startup checks .....	54
5.1 General .....	54
5.2 Electrical supply .....	55
5.3 Startup preliminary procedures .....	56
5.4 Check list – mandatory operation control before start up .....	57
5.5 Refrigerant replacement procedure .....	61
5.6 Refrigerant loading .....	63
Start up .....	64
6.1 Start up .....	64
6.2 Start up of the plant per unit.....	64
6.3 Start up procedure .....	64
System maintenance.....	66
7.1 General .....	66
7.2 Maintenance .....	67
7.3 Sight check of the liquid receivers .....	67
7.4 Standard controls .....	68
7.5 Unit test sheet.....	69
7.6 Recommended spare parts.....	70
7.7 Improper use.....	70
7.8 Ordinary maintenance .....	71
7.9 Dehydration filter repositioning .....	72
7.10 Disposal .....	72
Important information regarding the refrigerant used.....	73
Additional Refrigerant Emission Control .....	73
Plant sketches .....	74
9.1 Standard version .....	74
9.2 Single pump version .....	75
9.3 Single pump + stands by pumps version .....	76
9.4 Hydraulic connections .....	77
Dimensional drawing and weight .....	78
Troubleshooting.....	82
Notes.....	85



# General information

## 1.1 Purpose of the Manual

The purpose of this Manual is to allow the installer and the qualified operator to carry out all required operations in order to ensure proper installation, operation and maintenance CMAC SE-HE multi-pipe units, without risking any damage to people, animals and/or objects.

This Manual is an important supporting document for qualified personnel but it is not intended to replace such personnel. All activities must be carried out in compliance with local laws and regulations.

This publication has been prepared only as a support and does not constitute a binding offer to Trane. Trane has compiled the content to the best of their knowledge. No express or implied warranty is given for the completeness, accuracy, reliability of the content. All data and specifications in it shown are subject to change without notice. Trane explicitly rejects any liability for any direct or indirect damage, in the broadest sense of the term, arising from or related to the use and / or interpretation of this publication. All content is copyrighted by Trane.

**It is strongly recommended to sign a maintenance contract with an authorized service center to ensure an efficient and trouble-free operation.**

**All units have label applied on the frame of unit and inside electrical panel.**

**WIRING, LABEL AND OVERALL DESIGN OF SPECIFIC TO BE CONSIDERED AS AN INTEGRAL PART OF THIS MANUAL.**

**In case of discrepancy between this manual and the documents cited prevail as shown on the wiring diagram and outline drawing.**

## 1.2 Delivery of the unit

**On arrival, immediately inspect the unit before signing the delivery note and fill in the Receiving Card that can be found inside the electrical panel.**

Specify any visible damage on the delivery note, and send a registered letter of protest to the last carrier of the goods within 7 days of delivery. A set of photographs is useful for proper analysis and may be helpful in ascertaining responsibility.

Notify the local TRANE sales office at the same time.

**The delivery note and Receiving Card must be clearly signed and countersigned by the driver.**

*Also all accessories separately delivered for local installation must be carefully verified and checked.*

Any concealed damage shall be notified by a registered letter of protest to the last carrier of the goods within 7 days of delivery. Notify the local TRANE sales office at the same time.

**Important notice:** No shipping claims will be accepted by TRANE if the above mentioned procedure is not respected.

Check on the unit nameplate, before connecting it to earth, that the model and power supply voltage are as ordered. Responsibility for any damage after acceptance of the unit cannot be attributed to Trane.

For more information, refer to the general sales conditions of your local TRANE sales office.

Perform the following checks upon receipt of the unit, for your protection in the event that it is incomplete (any missing parts) or has incurred damage during transport:

- a) In the event that the unit has been damaged, do not remove the damaged material. A set of photographs is helpful in ascertaining responsibility.
- b) Immediately report the extent of the damage to the transporter and immediately request that they inspect the unit.
- c) Immediately report the extent of the damage to the Trane representative, so that arrangements can be made for the required repairs. In no case must the damage be repaired before the unit has been inspected by the representative of the transportation company.

## 1.3 Unit identification

The unit is identifiable through:

- Packaging label: the identification data of the product.
- Technical Label: the technical data of the product.

## General information

### *TECHNICAL LABEL*

It contains the serial number, the production year, the electric data, the main technical data, logo and manufacturer address.

Tampering and/or rehandling the label does not allow the identification of the product, and makes difficult any installation and maintenance operation. In case of discrepancy between this manual and the label on the unit in terms of electrical data and refrigerant charge, the data on the label supersedes the data in the manual.

### *SERIAL NUMBER*

The serial number identifies specific characteristics of the unit and its components. It allows identification of spare parts for repairs.

### **Thermal Performance**

Trane units are tested at the factory, in separate stations, according to an internal procedure. Each performance verification performed on the system is only possible if they are reproduced and maintained in the same conditions (constant load, constancy of temperatures and flow rates of evaporation - condensation and recovery, quality and tolerance of the measuring instruments, etc..) Of the salt test.

The test conditions are those specified by the customer when ordering: in the absence of precise information you should refer to the nominal values specified in the technical bulletin in force on the date of the Order Confirmation.

## **1.4 Warranty**

- A. Warranty is based on the general terms and conditions of the manufacturer. The warranty is void if the equipment is repaired or modified without the written approval of the manufacturer, if the operating limits are exceeded or if the control system or the electrical wiring is modified. Damage due to misuse, lack of maintenance or failure to comply with the manufacturer's instructions or recommendations is not covered by the warranty obligation. If the user does not conform to the rules of this manual, it may entail cancellation of warranty and liabilities by the manufacturer.
- B. Warranty is twelve (12) months as from the date of first start up at installation place or eighteen (18) months after delivery at the project or other delivery location indicated by the customer. The date the unit is operated for the first time means the date reported in the "1st start up form" contained into the "unit log book". This form should be filled in and sent, within 8 days from the start up, to Trane.
- C. The warranty is valid if all the installation and start-up instructions have been adhered to (both those which may have come from Trane and those coming from current practice), and if the "1st start up form" has been filled in and sent to the Trane after sales department.
- D. The warranty is subject to any faults or defects being reported within eight days from their discovery. The warranty will only be applied if and when the purchaser suspends use of the equipment as soon as a defect has been found.
- E. The warranty is valid in case the commissioning and first start-up of the CMAC unit is carried out by a Trane authorised assistance center.
- F. The warranty is subject to regular maintenance of the unit which is appropriately indicated in the "unit log book" located inside the electrical panel.
- G. Warranty automatically ends in case of payments not fulfilled, non-performance of the contract and even if the units show tampering without written approval from Trane.



# Mechanical installation

## 2.1 Shipping

The stability of the unit during shipping must be ensured. If the unit is shipped with a wooden cross-plank on its base, this cross-plank must only be removed after the final destination has been reached.

## 2.2 Responsibility

Trane declines all present and future responsibility for any damage to persons, animals or things caused by negligence of operators failing to follow the installation and maintenance instructions in this Manual.

All safety equipment must be regularly and periodically checked in accordance with this manual and with local laws and regulations regarding safety and environment protection.

## 2.3 Safety

The unit must be securely fixed to the ground.

It is essential to observe the following instructions:

- The unit can only be lifted using the hoist points marked in yellow that are fixed to its base. These are the only points that can support the entire weight of the unit.
- Do not allow unauthorised and/or unqualified personnel access to the unit.
- It is forbidden to access the electrical components without having opened the unit's main switch and switched off the power supply.
- It is forbidden to access the electrical components without using an insulating platform. Do not access the electrical components if water and/or moisture are present.
- All operations on the refrigerant circuit and on components under pressure must be carried out only by qualified personnel.
- Repositioning of a compressor or addition of lubricating oil must be carried out only by qualified personnel.
- Sharp edges and the surface of the condenser section could cause injury. Avoid direct contact.
- Switch off the unit's power supply, by opening the main switch, before servicing the cooling ventilators and/or compressors. Failure to observe this rule could result in serious personal injury.
- Avoid introducing solid objects into the water pipes while the unit is connected to the system.
- A mechanical filter must be applied to the water pipe to be connected to the heat exchanger inlet.
- The unit is supplied with safety valves, that are installed both on the high-pressure and on the low-pressure sides of the refrigerant gas circuit.

### **WARNING!**

**The installation of the unit must be avoided in any place that can be considered dangerous during maintenance, such as (but not only) covers without parapets or railings or without proper clearances.**

## 2.4 Operating limits & Operating maps

### **Storage**

The units can be stored within the following environmental conditions:

Min ambient temperature	:	-10°C
Max ambient temperature	:	53°C
Max relative humidity	:	95% not condensable

### **WARNING!**

**Storage at temperatures below the minimum specified can cause damage to some parts including the electronic controller and its LCD display.**

**Storage at temperatures above the maximum indicated causes the opening of the safety valves placed on the suction line of compressors.**

**The storage in a very high humidity space (condensation) can damage electronic components.**

### **Operation**

CMAC SE-HE unit operation is permitted within the limits indicated in the operating maps.


### **WARNING!**

**The operation outside the limits specified may cause the activation of protections and disrupt the operation of the unit and, in extreme cases, damage the unit.**

**In case of doubt, consult your local Trane Service department.**

**These operating limits apply to unit operating at full load.**

## CMAC Operating Maps

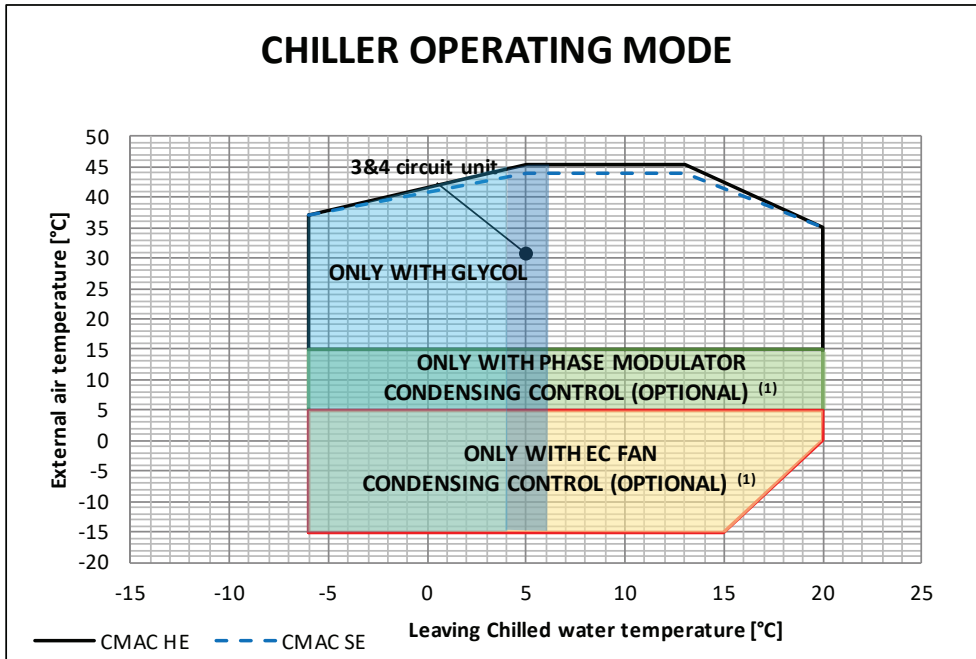



The minimum outdoor air temperature is based on low wind speeds (wind not exceeding 15 km/h). Greater wind speeds may result in a drop in head pressure, therefore increasing the minimum starting and/or operating outdoor air temperature.

In case of higher wind speeds it may be necessary to install wind barriers to avoid the operating limitations.

(1) In this area the fans modulate in order to control the condensing/evaporating temperature. The performances may be different from the declared ones.

**Note:** A table with required glycol percentages is provided in chapter 2.20.

## Mechanical installation

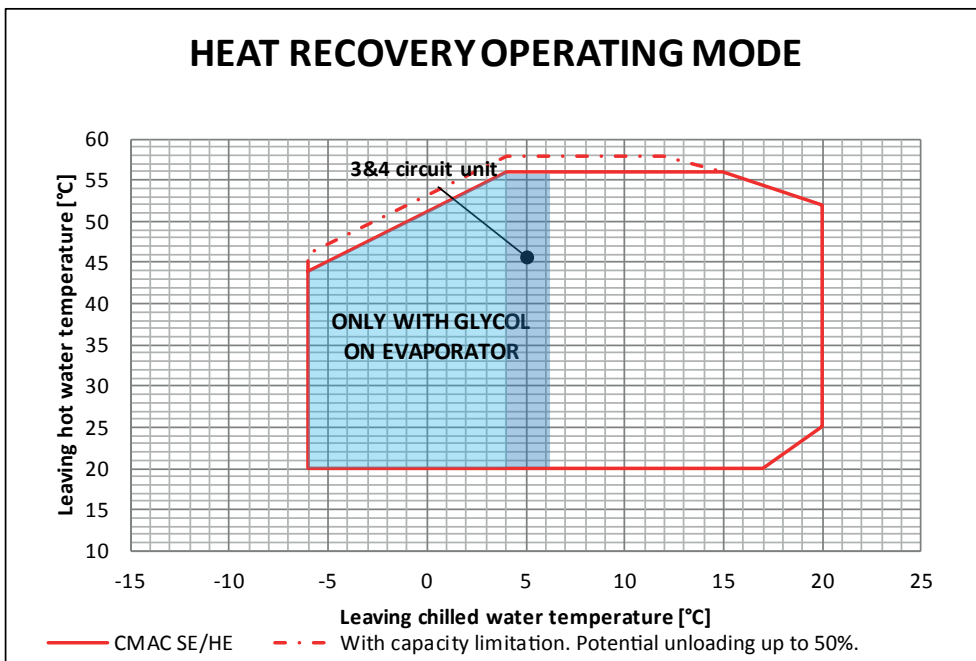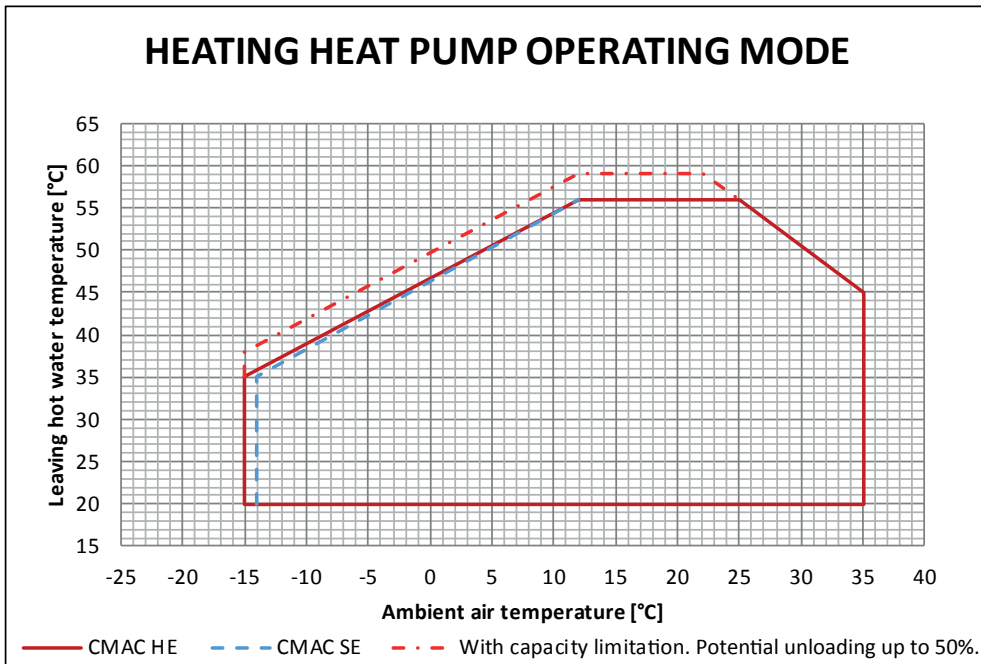

The minimum outdoor air temperature is based on low wind speeds (wind not exceeding 15 km/h). Greater wind speeds may result in a drop in head pressure, therefore increasing the minimum starting and/or operating outdoor air temperature.


In case of higher wind speeds it may be necessary to install wind barriers to avoid the operating limitations.




## Mechanical installation

### 2.5 Handling and lifting

Check the unit weight and the ability to load the lifting device. Do not push or pull the unit from any other part than the base frame. Be careful when handling the obstacles placed in the path that may damage the units (bumps, ramps, hills, etc. ...) Verify the perfect stability during the handling operations of the unit.

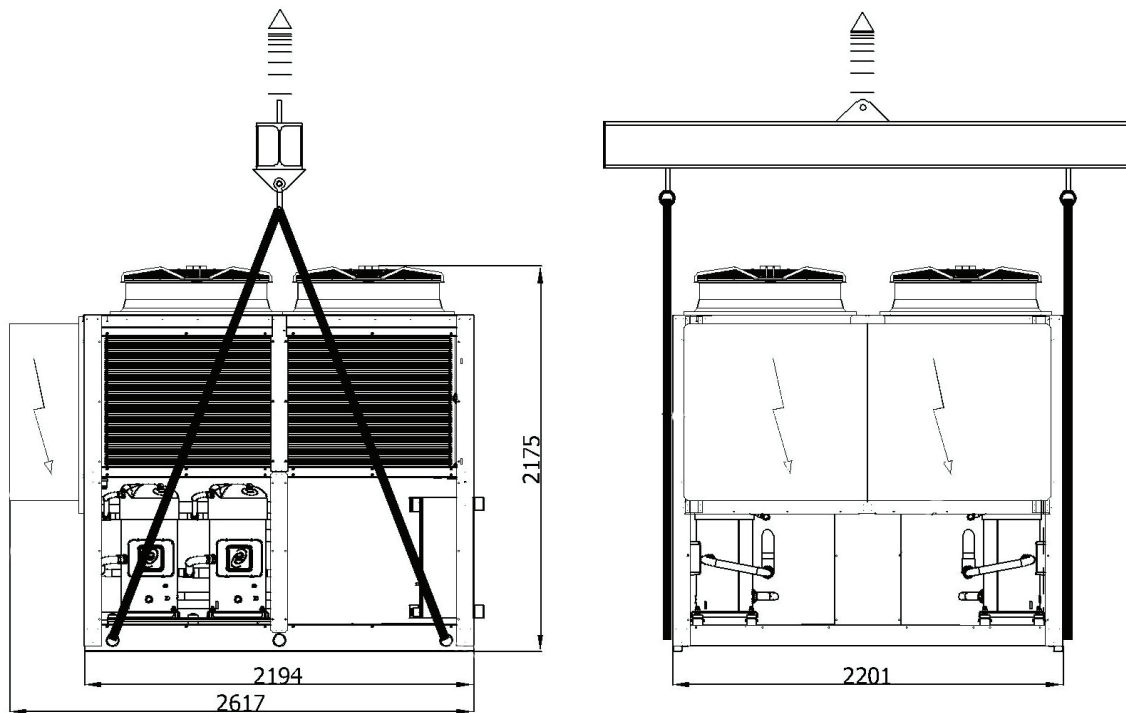

Make sure that during transport the CMAC unit ALWAYS remains in the correct position! For example horizontal positioning of the unit can lead to irreversible damage to the compressors. Damage arising from incorrect transport will not be under warranty by the manufacturer. **Immediately report an incorrect receipt of goods.** An arrow positioned upward indicates the vertical position of the unit.

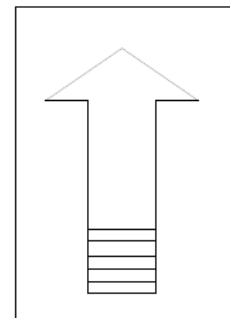

#### WARNING!

The lifting ropes and the spreader bar and/or balance must be sized to hold the weight of the unit safely. Check the weight of the unit on the nameplate of the unit. The weights given in the tables refer to standard units, without any options. The unit may have specific accessories that increase the overall weight (pumps, copper / copper coils, etc..).

The unit must be lifted with the utmost attention and care. Avoid abrupt lifting.

Do not use forklift trucks to lift the unit from below.

If equipment for lifting from above is not available, using rollers may move the unit.

## Mechanical installation

### 2.6 Positioning

All CMAC SE-HE multi-pipe units are designed for installation outdoors, on balconies or on the ground, provided that the area is free from obstacles that could hamper air flow towards the condenser coils.

The unit must be installed on a robust and perfectly level foundation; should the unit be installed on balconies and/or attics, it could be necessary to use weight distribution beams.

For installation on the ground, a strong cement base that is at least 250 mm wider and longer than the unit must be foreseen. Also, this base must be able to support the weight of the unit as declared in the technical specifications.

If the unit is installed in places that are easily accessible for people and animals, it is advisable to install coil and compressor section protection grates.

To ensure the best possible performance on the installation site, the following precautions and instructions must be followed:

- Avoid air flow recirculation.
- Make sure that there are no obstacles to hamper air flow.
- Air must circulate freely to ensure proper intake and expulsion.
- Ensure strong and solid flooring to reduce noise and vibrations as much as possible.
- Avoid installation in particularly dusty environments, in order to reduce soiling of condenser coils.
- The water in both water circuits must be particularly clean and all traces of oil and rust must be removed.

Installation of a mechanical water filter is mandatory for the unit inlet water piping.

### 2.7 Minimum space requirements

Dimensional drawing shall be respected to avoid causing:

- Noise
- Incorrect heat exchange and ventilation
- Difficult maintenance or inaccessibility to components

It is fundamental to respect minimum distances on all CMAC SE-HE units, in order to ensure optimum ventilation for the condenser coils.

Every side of the unit must be accessible for maintenance operations.


Vertical air expulsion must not be obstructed as this would significantly reduce capacity and efficiency.

If the unit is positioned in such a way as to be surrounded by walls or with obstacles of the same height as the unit, it must be installed at a distance of at least 2500 mm. If these obstacles are higher, the unit must be installed at a distance of at least 3000 mm.

When two or more units are positioned side by side, a distance of at least 3600 mm between condenser coils is recommended.

## Mechanical installation

In any case, the microprocessor will allow the unit to adapt to the new condition producing the maximum available capacity (which would, however, lower than the nominal capacity of the unit) even with a lateral distance less than the recommended.

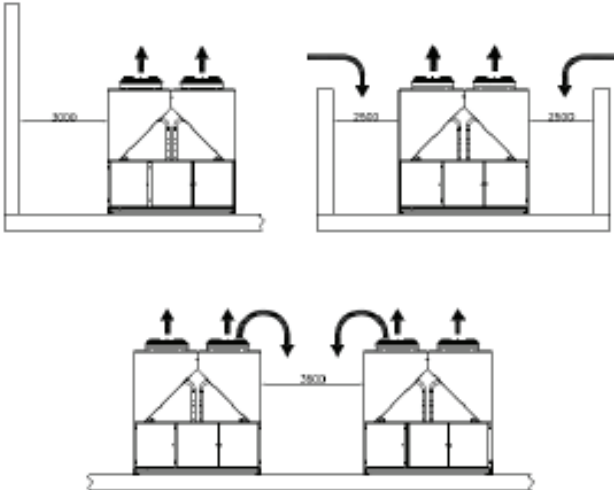


### Condensate

The unit in order to easily discharge the condensate caused by the heat pump operation, especially during the defrosting cycle. Avoid the condensate drain in location where people transit.

### Anti-vibration

In order to reduce the transmission of vibrations to the supporting structures, install and mount shock absorbers in every fastening point. Rubber shock absorbers are recommended for units installed on the ground, spring shock absorbers for units installed on roofs.

Screw nut and lock nut to adjust the proper leveling of the unit. The units positioned incorrectly can cause damage to the compressor to incorrect leveling of the oil.

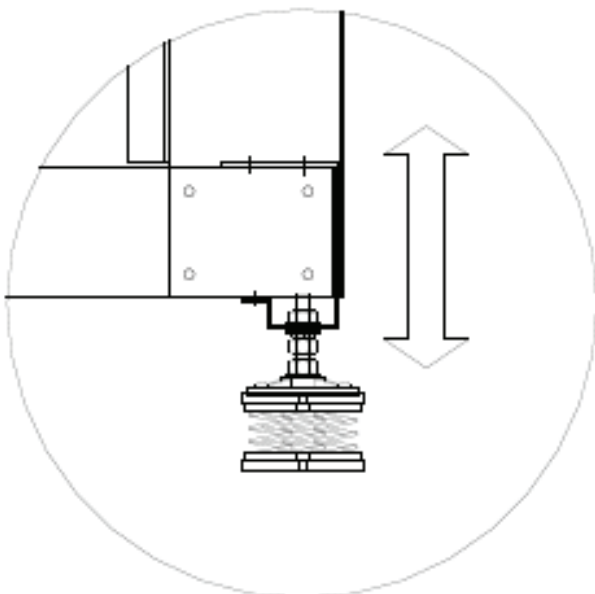


## Mechanical installation

### 2.8 Installation

#### Installation side selection

Before installing the unit, agree with the customer the location where it will be placed, ensuring the following points:

- the foundation must be able to support the weight of the unit;
- safety distances between the unit and other equipment or structures to ensure that the air in and out from the fans is free to circulate.

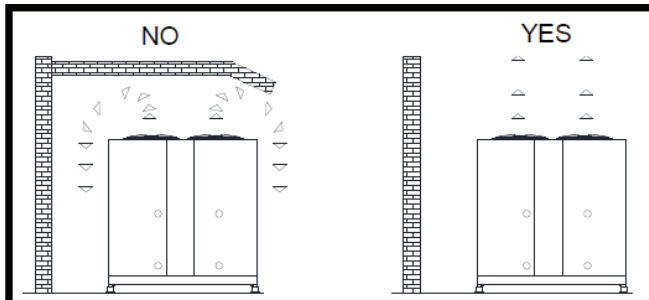

#### Positioning

*Before handling the unit, verify the lifting capacity of the means respecting the information on the packaging.*

*For handling the unit on horizontal base use forklift or other means in an adequate way paying attention on the unit weight. In case of lifting, insert bars in the proper holes of the unit base in order to permit the positioning of the lifting ropes and of the safety cotter pin.*

*In order not to damage the unit structure by the belts, use proper protections to be put between the belts and the unit. Position the unit in the place indicated by the client by interposing between the base and the support, a gum mattress (thickness min. 10 mm.) or antivibration feet (optional). Fix the unit verifying that the base is plan and without inclinations.*

*Verify the easy access to the hydraulic and electric part. In case of installation in places where there could be gust, fixing the unit to the support properly using guy rope if needed.*

#### Handling and positioning

The units have been designed to be lifted from above by means of eyebolts and holes in the base frame.

Use retractor bars to keep the lifting wires or chains away from the unit.

Lifting procedures provided with the unit have to be respected.

#### Precautions for dominant winds

Avoid obstacles on suction and discharge sides of the units. Respect the servicing spaces as shown on the units dimensional drawings.

In case of presence of dominant winds in the installation area it is strictly necessary to avoid (for units with horizontal flow fans) that such winds blow in front of the unit (fans discharge side). In case of unit with vertical flow fans it is strictly necessary to avoid installations where the dominant winds could cause rejected hot air to come back to the condensing coils.

If needed, install windbreak barriers (in this case contact our offices).

#### Precautions against direct sunshine

The direct sunshine can raise the condensation temperature and it causes the unit stopping or the missing set-up because of the high-pressure switch intervention.

#### Precautions against chimney and hot air discharge

Avoid the unit installation lee side near chimney and liquid and gas discharge.

## Mechanical installation

### 2.9 Safety regulations

#### **Preamble.**

All Trane units are designed, built and inspected in compliance with the European Community Directives n° 98/37/CE (three phase power supply), EN 60335 Part 1 and 2, low voltage directive 73/23/CEE, electromagnetic compatibility directive EMC 89/336/CEE, Pressure Equipment Directive 97/23/CEE. Before using the unit read carefully the recommendations reported in the following manual.

#### **Definition**

##### Owner:

The legal representative of the company, body or natural person who owns the plant in which the Trane unit is installed: he or she is responsible for the control and respect of all the safety regulations indicated in this manual as well as the national ones in force. :

##### Installer:

The legal representative of the company appointed by the owner to position and hydraulically, electrically etc. connect the Trane unit to the plant: he or she is responsible for handling and the correct installation of the unit in accordance with the indications in this manual and with the national regulations in force. :

##### Operator:

A person authorised by the owner to carry out all the operations of regulation and control on the Trane unit which are specifically mentioned in this manual. He or she should keep to actions described in the manual and limit his or her action to what is explicitly allowed.

##### Technician:

A person who is directly authorised by Trane or, secondarily, for all EU countries except for Italy, by the distributor of the Trane product, under their own responsibility, to carry out all ordinary or extraordinary maintenance operations, as well as regulations, controls, repairs and parts repositioning which may be necessary during the lifetime of the unit.

#### **Access to dangerous areas**

The access to the unit dangerous areas is usually obstructed through protection panels, which are removable, by using a tool. Axial fans are protected with accident prevention grilles.

Finned coil, for units not equipped with coil protection grilles, is completely accessible with danger for cuts and abrasions.

For all the units which allow access to the cooling piping or to the packaged condensing coils with fins, without security gratings (optional) or closing panelling, the following precautions must be taken:

- mark the areas with contact risks;
- apply warning signs.

The danger zone must be of a suitable size to avoid any contact, even accidental contact.

In the presence of safety valves without relevant remote controls, the operating area must be of a size which considers a range of action of the discharge flow of 3 metres.

Trane declines any responsibility for damage to things and unauthorised personnel in case of absence of clear and static limiting systems of the risk areas and of the relevant warning and danger signs.

## Mechanical installation

### 2.10 General precautions

The operator must only intervene on the unit controls; he or she must not open any panels except for the one which gives access to the command module.

The installer must only intervene on the connections between the plant and the unit; he or she must not open any unit panels nor carry out any commands.

The following precautions should be made when approaching or working on the unit:

- do not wear jewellery, baggy clothes or any other accessory which can get caught up;
- use appropriate protection (gloves, glasses etc.) when using an open flame (welding) or compressed air;
- if the unit is located in a closed environment, wear hearing protection;
- before disconnecting, rehandling tubes, filters, joints or other line parts intercept the connection tubes, empty them until the pressure reaches that of the atmosphere;
- do not use your hands to check for possible pressure losses;
- always use tools which are in good condition; make sure the instructions have been fully understood before using them;
- make sure that any tools, electrical cables or other loose objects have been removed before closing the unit and starting it up again.

**Table 1 – Precautions against risks due to the refrigerant**

Safety data	
<b>Toxicity</b>	Not important
<b>Risks for skin touching</b>	Splashes or sprinkles can cause chill burns. The risk of absorptions through the skin is not relevant. Those refrigerants could take some lightly irritating effects and in liquid stage they have a strong skinning effect. In this case it is necessary to rinse with fresh water the contaminated parts of the skin. The refrigerant in liquid stage in contact with wet clothes cause freezing and adherence to the skin. In this case it is necessary to put off the contaminated clothes to avoid freezing. Please contact a doctor in case of irritation of the contaminated parts.
<b>Risks for contact with the eyes</b>	Vapors don't take any effect. Splashes or sprinklers can cause chill burns. In those cases it is necessary to rinse the eyes with water or with solution for ocular washings for 10 minutes. The intervention of a doctor is needed.
<b>Risks for ingestion</b>	Should it happen, it causes chill burns. It does not cause vomiting. The person must be kept awake. It is needed to rinse the mouth with fresh water and to drink almosto 0,25 liters. The intervent of a doctor is needed.
<b>Risks for inhalation</b>	High concentration of vapours in air can lead to anaesthetic effects up to a loss of conscience. Long exposures could give rise to cardiac arrhythmia and sometimes even to death. High concentrations can create a reduction of oxygen in air, with consequent possibility of suffocation. Should it happen the person must be taken to the open air and let him to take a rest. Administer oxygen if needed. In case the breathing has interrupted or become irregular, it is necessary to apply the artificial breathing. In case of cardiac arrest a heart massage must be applied. Contact a doctor immediately.
<b>Conditions to avoid</b>	Use in presence of exposed flames, and of elevates levels of humidity.
<b>Dangerous reactions</b>	Possibility of violent reactions with the sodium, the potassium, the barium and with other alkaline substances, incompatible materials and all the alloys containing more than 2% of magnesium.
<b>Protection wearing - Behavior in case of losses or escapes</b>	Wear protection apparel and self respirators. Insulate the source of the loss, if this operation can be done in safety conditions. Small quantitative of refrigerant escaped at liquid state can be allowed to evaporate only if the room is well ventilated. In case of great losses ventilate the room immediately. Plug the loss with sand, soil or other absorbent material; avoid that the liquid refrigerant can enter in water-drainages or losing pools.
<b>Disassembly</b>	The best procedure is the recovery and the recycle. If this is not possible the refrigerant must be conferred to an accredited system for its destruction in order to neutralize acid and toxic by-products.

## Mechanical installation

### ***Precautions against residual risks***

Prevention from risks due to the control system

- make sure the instructions for use have been understood before carrying out any work on the control panel;
- always keep the instruction manual close at hand when working on the control panel;
- start up the unit only after having certified that it is correctly connected to the plant;
- inform the technician promptly of any alarms which appear on the unit;
- do not reset the alarms to manual restart without having first identified the cause and removed it.

### ***Prevention against residual mechanical risks***

- install the unit in accordance with the provisions of the following manual;
- carry out all the maintenance operations provided for by this manual regularly;
- wear a protective helmet before entering inside the unit;
- before opening a unit panel make sure that it is firmly connected by means of a hinge;
- do not touch the air condensation coils without having first put on protective gloves;
- do not remove the protections to the handling parts while the unit is running;
- before restarting the unit make sure that the handling part protections are in the correct position.

### ***Prevention against residual electrical risks***

- connect the unit to the mains in accordance with the provisions of this manual;
- carry out all maintenance operations regularly;
- before opening the control panel disconnect the unit from the mains by means of the external knife switch;
- check that the unit has been earthen correctly before starting it up;
- control all the electrical connections, the connection cables paying particular attention to the state of isolation; replace the cables which are clearly worn or damaged;
- carry out periodic checks of the wiring inside the panel;
- do not use cables with an inappropriate section or flying connections not even for a limited period or in an emergency.

### ***Prevention against residual risks of a different nature***

- the residual risk due to pressure are mainly coming from non functioning of the safety devices. To prevent them it is necessary to follow the checks and repositionings as following indicated (§12.1 and 13);
- to protect from safety devices exhausting it is not allowed to remove the protections while the unit is in operation and to approach the unit without wearing the right protections. In case of accidental contact with refrigerant due to the safety valves exhaust it is necessary to follow the above indicated (§2.5);
- carry out the plant connections to the unit by following the indications reported on the following manual and on the panels of the unit itself;
- if a part is disassembled, make sure that it is correctly reassembled before restarting the unit;
- do not touch the discharge line of the compressor, the compressor itself or any other tube or component which is inside the unit without putting on protective gloves;
- keep a fire extinguisher which is able to put out fires on electrical equipment near the unit;
- on units installed inside, connect the refrigerant circuit shut off valve to a network of tubes which are able to lead the possible spillage of refrigerating fluid outside;
- eliminate any fluid loss inside or outside the unit;
- collect the discharge liquid and clean up any possible oil leakage;
- periodically clean the compressor casing of the accumulated dirt deposits;
- do not keep inflammable liquids near the unit;
- do not dispose of the refrigerant fluid and the lubricating oil in the environment;
- welding should only be carried out on empty tubes; do not approach the tubes containing refrigerant fluid with flames or other sources of heat;
- do not bend or strike tubes containing pressurised fluids.

## Mechanical installation

### **Precautions to be observed during maintenance operations**

- isolate the unit from the mains electricity by using the external knife switch;
- place a notice on the external knife switch which says "do not use - maintenance in progress";
- make sure that any possible on-off commands are disabled;
- use appropriate safety equipment (helmet, isolating gloves, protective glasses, safety shoes etc.).

If measurements or controls must be carried out which require the unit to be running the following observations must be followed:

- operate with the electrical panel open for as short a time as is possible;
- close the electrical panel as soon as the individual measurement or control has been carried out;
- for units which are located outside, do not carry out interventions in dangerous atmospheric conditions such as rain, snow, fog etc.

The following precautions should also be taken at all times:

- never dispose of fluids contained in the refrigerant circuit into the environment;
- when replacing an EPROM or electronic card always use appropriate equipment (extractor, anti static bracelet, etc.);
- if a compressor, the evaporator, the condensation coils or any other heavy part is to be replaced, make sure that the lifting equipment matches the weight to be lifted;
- in the air cooled units with an independent compressor compartment, do not open the ventilator compartment without having first isolated the unit using the knife switch on the side of the panel and only after having placed a sign which says "do not use - maintenance in progress";
- if modifications must be carried out to the cooling, hydraulic or electrical circuit of the unit, as well as to its command logic, contact Trane;
- if particularly complicated assembly or disassembly operations are to be carried out contact Trane;
- always use original spare parts bought directly from Trane or from official dealers of the companies reported in the list of recommended spare parts;
- if the unit is to be moved after a year of being in the site or if it has to be dismantled contact Trane.

### **Precautions against foliage and external body**

Avoid the unit installation nearby plants which could obstacle the correct air charge and discharge.

### **Precaution against frost risk of the hydraulic pipes**

It is necessary to insulate pipes in the plant to avoid extreme heat loss and to protect them from weather conditions. The problem of wather pipes freezing could appear in two different situations:

- Unit standby, with mode on, but electrically connected: in this case, the unit has frost resistances, which protect the wather locally contained in the exchangers and in the pipes from ice formation. These resistances do not guarantee the protection against the frost in the outdoor connection pipes, to be prevent by frost protection systems. Trane suggest to insert frost thermostatic resistances on every outdoor pipes. In the following table there are the indicative electric power per pipe linear meter:

dn	inch	W/mt
8	1/4"	5
10	3/8"	5
15	1/2"	5
20	3/4"	10
25	1"	13
40	1" 1/2	30
50	2"	50
65	2" 1/2	80
80	3"	120
100	4"	200
125	5"	300
150	6"	450
200	8"	750

- Electrically unconnected unit: in this case the frost resistances of the unit could not guarantee the protection. So it is absolutely necessary unload the unit content for A.C.S., instead for air conditioning it is necessary to add the correct glycol quantity indicated in the chapter: "ethylene glycol correction table".



## Mechanical installation

### **Precaution for very low outdoor temperature**

In case of installation conditions with a lower temperature:

1. If there are storages, insert electric resistances to be calculated by :

$$Pr_{Watt} = V \times (10 - t_{min}) / 860$$

where: PrWatt is the resistance power (Watt) and tmin is the lower temperature (°C)

2. If there are not storages, maintain the temperature higher than 10°C the water temperature by inserting thermostatic resistance with power calculated as in case 1.

### **Control of compressor fastening**

The compressors are fitted on shock absorbers. After receiving the unit check if there are blockages to fasten the compressors during the transportation. If there are, it is necessary to remove blockages put to fasten the compressors feets before the start-up otherwise the warranty is not valid.

### **Acoustic Protections**

Isolate the base of the unit properly applying the anti-vibration mounts (provided optionally). Install flexible joints on water connections.

## **2.11 Water piping**

Piping must be designed with the lowest number of curves and the lowest number of vertical changes of direction. In this way, installation costs are reduced considerably and system performance is improved.

The hydraulic system should have:

1. Anti-vibration supports in order to reduce transmission of vibrations to the underlying structure.
2. Sectioning valves to isolate the unit from the hydraulic system during servicing.
3. Manual or automatic air bleeding device at the system's highest point. Drainage device at the system's lowest point. Both the evaporator and the heat recovery device must not be positioned at the system's highest point.
4. A device that can maintain the hydraulic system under pressure (expansion tank, etc.)
5. Water temperature and pressure indicators on the unit to aid servicing and maintenance operations.
6. A filter or device that can remove extraneous particles from the water before it enters the pump (Please consult the pump manufacturer's recommendations for an appropriate filter to prevent cavitation). Use of a filter prolongs the life of the pump and helps keep the hydraulic system in best condition.
7. Another filter must be installed on the pipe conveying inlet water to the unit, near the evaporator and heat recovery heat exchanger (if installed). The filter avoids solid particles entering the heat exchanger, as this could damage it or reduce its heat exchanging capacity.
8. All the other hydraulic piping outside the unit must be sufficiently protected against freezing.
9. If the unit is installed in order to replace another, the entire hydraulic system must be emptied and cleaned before the new unit is installed. Regular tests and proper chemical treatment of water are recommended before starting up the new unit.
10. In the event that glycol is added to the hydraulic system as anti-freeze protection, pay attention to the fact that intake pressure will be lower, the unit's performance will be lower and water pressure drops will be greater. All unit-protection methods, such as anti-freeze, and low-pressure protection will need to be reset. Before insulating water piping, check that there are no leaks.

### **WARNING!**

Install a mechanical water filter at the water inlet of each heat exchanger. Failure to install the filter allows access of solid particles and / or welding slag inside the heat exchanger. We recommend the installation of a filter having a filtering net with holes not exceeding 0.5 mm in diameter.

Trane can not be held responsible for any damage to heat exchangers due to the lack of good quality water filters.

## Mechanical installation

### 2.12 Water treatment

Before putting the unit into operation, clean the hydraulic circuit. Dirt, scales, corrosion residue and other extraneous material can accumulate inside the heat exchanger and reduce its heat exchanging capacity. Pressure drops can increase, as well, thus reducing water flow. Proper water treatment therefore reduces the risk of corrosion, erosion, scaling, etc. The most appropriate water treatment must be determined locally, according to the type of system and to the local characteristics of the process water.

Trane is not responsible for damage to or malfunctioning of equipment caused by failure to treat water or by improperly treated water.

**Table 2 – Recommended water quality limits**

PH (25°C)	6,8÷8,0	Total Hardness (mg CaCO <sub>3</sub> / l)	< 200
Electrical conductivity S/cm (25°C)	< 800	Iron (mg Fe / l)	< 1.0
Chloride ion (mg Cl <sup>-</sup> / l)	< 200	Sulfur ion (mg S <sub>2</sub> <sup>-</sup> / l)	None
Sulphate ion (mg SO <sub>24</sub> <sup>-</sup> / l)	< 200	Ammonium ion (mg NH <sub>4</sub> <sup>+</sup> / l)	< 1.0
Alkalinity (mg CaCO <sub>3</sub> / l)	< 100	Silica (mg SiO <sub>2</sub> / l)	< 50

### 2.13 Antifreeze protection on the heat exchangers

#### Evaporator and recovery exchangers anti-freeze protection

Two or more protection methods should be foreseen when designing the system as whole:

1. Continuous water flow circulation inside water piping and exchangers.
2. Addition of an appropriate amount of glycol inside the water circuits.
3. Additional heat insulation and sufficient heating of exposed piping.
4. Emptying and cleaning of the heat exchangers during the winter season.

It is the responsibility of the installer and/or of local maintenance personnel to ensure two or more of the described antifreeze methods. Continuously verify, through routine checks, that appropriate anti-freeze protection is maintained.

#### IMPORTANT

If unit has the possibility to run in Heating/Heat pump mode, it is mandatory to keep water flow present on the evaporator, all the time.

If the unit controller is set to Heating Only, evaporator pump relay command is switched to Open position. It is mandatory to connect evaporator freeze avoidance relay to evaporator pump operation and/or keep evaporator running when unit runs in heating mode (interlock evaporator pump command with heat recovery pump command on top).

Failure to follow the instructions above could result in damage to some of the unit's components. Damage from freezing is not covered by the warranty.

**CAUTION:** The unit water pipes are not protected against the risk of water freeze-up when the unit is not electrically powered and when the power and control of the external water pumps is not managed by the CMAC unit controller. The owner or local maintenance personnel must provide appropriate solutions to prevent freezing.

The desuperheater hot water side on 6-pipe units is not protected from freezing.

## Mechanical installation


### 2.14 Flow switch installation

To ensure adequate water flow through the evaporator, install a flow switch on the water circuit. The flow switch may be either installed on both the inlet pipe of the water on that output. The purpose of the flow switch is to stop the unit in case of an interruption of the water flow while protecting the evaporator from freezing. Install a flow switch on the heating water circuit to ensure adequate water flow through the recovery heat exchanger. The flow on recovery circuit prevents shutting down the unit for high pressure.


The flow switches can be mounted in any position far from elbows or bottlenecks and with the arrow in the direction of flow. For installations on vertical piping is necessary to calibrate the device to compensate for the weight of the headstock. If the unit is mounted to the bottom, we must make WARNING deposits that can form. The appliance must be installed in a straight pipe with no filters, valves, etc.,. Have at least 5 times its diameter, both upstream and downstream.

Blade type flow switches are available as loose accessories and are suitable for harsh environments and for pipes with diameters from 1" to 8". The flow switch has a contact which must be wired, by the contractor, on the jobsite. Check the unit wiring diagram for more information. See the instruction sheet inside the flow switch box for information about positioning and settings.


Dimensions (mm)

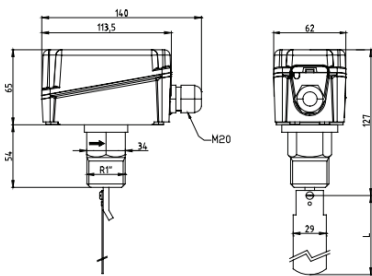

Mounting instructions

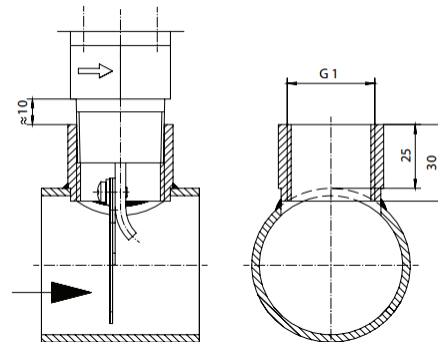

Paddle (model without "T" piece)

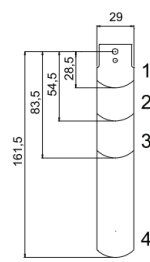


TUBAZIONE	PALETTE
1"	1
1 1/4"	1
1 1/2"	1
2"	1,2
2 1/2"	1,2
3"	1,2,3
4"	1,2,3
4" Z	1,2,3,4
5"	1,2,3
5" Z	1,2,3,4
6"	1,2,3
6" Z	1,2,3,4
8"	1,2,3
8" Z	1,2,3,4

## Mechanical installation

### Electrical connection

Connect to the contact to the white and red of the microswitch (fig. 1). The red-white contact opens when the flow drops below the set value. In the absence of flow the contact red-blue closes and can be used as a contact signal or alarm.

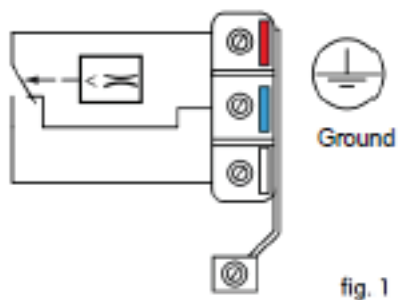

Screw for load control

The flow switch is available as loose accessory. It must be calibrated in accordance to the water pipe diameter of the system. The cut-out value must be  $\geq$  the minimum flow necessary to ensure the protection of the system.

In case the unit is used as a minimum flow controller must be placed downstream of a further control device for the activation of the alarm condition.

### Installing the filter

To ensure proper operation of the heat exchanger, it is mandatory to install a water filter on the input of the evaporator near the unit (max 2 meters). The component is required and must be mounted before making circular adequate flow of water through.

## Mechanical installation

### 2.15 Hydraulic data

#### MAXIMUM AND MINIMUM WATER FLOW AND RECOMMENDED WATER CONTENT

CMAC SE	Plant side cold water heat exchanger				Plant side hot water heat exchanger			
	V [m <sup>3</sup> ]	K	Q min [m <sup>3</sup> /h]	Q max [m <sup>3</sup> /h]	V [m <sup>3</sup> ]	K	Q min [m <sup>3</sup> /h]	Q max [m <sup>3</sup> /h]
50	0.39	221.6	4.8	12.9	1.2	189.9	4.3	14.3
55	0.44	217.9	5.5	14.6	1.4	186.4	4.9	16.2
65	0.51	212.4	6.4	17.1	1.6	181.0	5.7	19.1
85	0.67	204.5	8.3	22.2	2.1	145.3	7.5	25.0
110	0.89	76.5	11.1	29.5	2.7	68.4	9.6	31.9
140	1.08	74.3	13.6	36.2	3.4	67.3	12.0	40.1
155	1.19	52.8	14.9	39.7	3.8	48.8	13.2	44.0
175	1.36	52.7	17.0	45.4	4.3	47.7	15.2	50.6
210	1.60	23.4	20.0	53.3	5.3	21.0	18.5	61.6
260	1.95	23.1	24.3	64.8	6.4	20.7	22.5	75.1
305	2.30	13.3	28.8	76.7	7.6	12.2	26.6	88.7
350	2.69	11.1	33.6	89.6	8.7	10.2	30.6	101.8
370	2.84	11.1	35.5	94.7	9.2	10.2	32.3	107.7
435	3.27	10.2	40.9	109.1	10.8	9.4	37.8	126.0
495	3.70	7.7	46.2	123.3	12.3	6.6	42.9	143.0
525	3.90	7.5	48.7	129.9	13.0	6.5	45.6	152.1
50 L	0.38	221.6	4.7	12.7	1.2	190.0	4.2	14.0
55 L	0.43	217.8	5.4	14.3	1.4	186.4	4.8	15.9
65 L	0.50	212.4	6.2	16.6	1.6	181.0	5.6	18.7
85 L	0.65	204.4	8.1	21.7	2.1	145.3	7.4	24.5
110 L	0.85	76.5	10.6	28.4	2.7	68.4	9.3	31.1
140 L	1.05	74.3	13.1	34.8	3.4	67.3	11.7	39.1
155 L	1.14	52.8	14.3	38.1	3.7	48.8	12.9	43.0
175 L	1.31	52.7	16.4	43.8	4.3	47.7	14.9	49.7
210 L	1.57	23.4	19.6	52.2	5.1	21.0	18.0	60.0
260 L	1.87	23.1	23.4	62.4	6.3	20.7	21.9	73.0
305 L	2.20	13.3	27.5	73.4	7.4	12.2	25.9	86.2
350 L	2.58	11.1	32.3	86.0	8.5	10.2	29.8	99.2
370 L	2.71	11.1	33.9	90.4	9.0	10.2	31.5	105.0
435 L	3.09	10.2	38.6	103.0	10.4	9.4	36.5	121.7
495 L	3.57	7.7	44.7	119.1	12.0	6.6	41.9	139.6
525 L	3.76	7.5	46.9	125.2	12.7	6.5	44.5	148.2
50 S	0.38	221.6	4.7	12.6	1.2	190.0	4.2	13.9
55 S	0.43	217.8	5.3	14.2	1.4	186.4	4.7	15.8
65 S	0.49	212.3	6.2	16.4	1.6	181.0	5.6	18.5
85 S	0.65	204.4	8.1	21.6	2.1	145.3	7.3	24.3
110 S	0.85	76.5	10.6	28.2	2.6	68.5	9.3	30.9
140 S	1.04	74.3	12.9	34.5	3.3	67.3	11.7	38.9
155 S	1.13	52.8	14.2	37.7	3.7	48.8	12.8	42.6
175 S	1.31	52.7	16.4	43.8	4.2	47.7	14.8	49.5
210 S	1.55	23.4	19.4	51.6	5.1	21.0	17.9	59.7
260 S	1.86	23.1	23.2	61.9	6.2	20.7	21.7	72.5
305 S	2.17	13.3	27.1	72.4	7.3	12.2	25.7	85.6
350 S	2.56	11.1	32.0	85.2	8.4	10.2	29.5	98.4
370 S	2.68	11.1	33.6	89.5	8.9	10.2	31.2	104.1
435 S	3.05	10.2	38.1	101.6	10.4	9.4	36.3	121.1
495 S	3.55	7.7	44.3	118.2	11.9	6.6	41.7	138.8
525 S	3.72	7.5	46.5	124.1	12.6	6.5	44.2	147.3

#### LEGEND:

**L:** low noise version  
**S:** super low noise version  
**V:** recommended water content of the plant (cold side and hot side) with dT 5°C on the heat exchanger  
**Q min:** minimum water flow to the heat exchanger  
**Q max:** maximum water flow to the heat exchanger  
**dpw = K·Q<sup>2</sup> / 1000**

**Q = 0,86 P/ΔT**  
*P: heating or cooling capacity [kW]*  
*ΔT at Heat exchanger:*  
*3°C minimum*  
*8°C maximum for Evaporator*  
*10°C maximum for Heat Recovery*  
**dpw:** pressure drop [kPa]

## Mechanical installation

### MAXIMUM AND MINIMUM WATER FLOW AND RECOMMENDED WATER CONTENT

CMAC HE	Plant side cold water heat exchanger				Plant side hot water heat exchanger			
	V [m <sup>3</sup> ]	K	Q min [m <sup>3</sup> /h]	Q max [m <sup>3</sup> /h]	V [m <sup>3</sup> ]	K	Q min [m <sup>3</sup> /h]	Q max [m <sup>3</sup> /h]
50	0.41	87.7	5.2	13.8	1.3	84.6	4.4	14.7
60	0.47	78.5	5.9	15.7	1.4	75.7	5.0	16.8
70	0.56	76.6	7.0	18.7	1.7	73.8	6.0	20.1
90	0.73	73.5	9.1	24.3	2.3	70.7	7.9	26.3
120	0.95	55.5	11.9	31.6	3.0	51.5	10.3	34.5
130	1.05	54.6	13.1	35.0	3.3	49.4	11.5	38.2
145	1.12	43.5	14.1	37.5	3.6	41.7	12.6	41.9
165	1.29	23.9	16.2	43.1	4.0	23.0	14.1	47.1
180	1.41	23.7	17.7	47.1	4.4	22.7	15.5	51.8
220	1.71	23.3	21.4	57.2	5.4	23.0	18.9	63.1
260	2.05	17.4	25.7	68.5	6.5	17.0	22.7	75.6
320	2.49	6.6	31.2	83.1	8.0	6.3	27.9	92.9
355	2.76	6.5	34.5	91.9	8.8	6.3	30.9	103.1
375	2.93	6.5	36.6	97.5	9.4	6.3	32.8	109.4
455	3.49	6.4	43.6	116.2	11.3	6.1	39.6	132.0
500	3.87	7.9	48.3	128.9	12.5	7.6	43.6	145.3
535	4.06	9.0	50.8	135.5	13.3	8.6	46.5	155.1
575	4.40	6.3	55.0	146.7	14.3	6.0	50.1	167.1
600	4.57	4.9	57.1	152.3	14.9	4.7	52.1	173.6
660	4.99	5.0	62.4	166.4	16.5	4.7	57.7	192.3
710	5.52	1.6	69.0	183.9	17.7	1.6	61.9	206.2
755	5.82	1.6	72.7	193.9	18.8	1.6	65.6	218.8
800	6.11	1.6	76.4	203.8	19.8	1.6	69.4	231.4
840	6.40	1.6	80.0	213.3	20.9	1.5	73.1	243.6
880	6.68	1.6	83.5	222.7	21.9	1.5	76.8	255.9
50 S	0.41	87.7	5.1	13.5	1.2	84.6	4.3	14.5
60 S	0.46	78.4	5.7	15.3	1.4	75.7	5.0	16.5
70 S	0.54	76.6	6.8	18.0	1.7	73.8	5.9	19.6
90 S	0.71	73.5	8.9	23.6	2.2	70.7	7.7	25.7
120 S	0.91	55.5	11.4	30.4	2.9	51.5	10.0	33.5
130 S	1.01	54.5	12.7	33.8	3.2	49.4	11.2	37.3
145 S	1.08	43.5	13.6	36.2	3.5	41.7	12.2	40.6
165 S	1.26	23.9	15.8	42.1	4.0	23.0	13.8	46.1
180 S	1.37	23.7	17.2	45.8	4.3	22.7	15.2	50.7
220 S	1.65	23.3	20.6	54.9	5.3	23.0	18.4	61.4
260 S	1.94	17.4	24.3	64.7	6.3	17.0	22.0	73.3
320 S	2.39	6.6	29.9	79.7	7.7	6.3	27.0	90.0
355 S	2.64	6.5	33.0	88.1	8.6	6.3	29.9	99.8
375 S	2.79	6.5	34.9	93.0	9.1	6.3	31.7	105.8
455 S	3.34	6.4	41.7	111.3	10.9	6.1	38.3	127.5
500 S	3.71	7.9	46.4	123.6	12.1	7.6	42.3	141.1
535 S	3.89	9.0	48.6	129.6	12.8	8.6	45.0	149.9
575 S	4.21	6.3	52.6	140.3	13.9	6.0	48.5	161.8
600 S	4.35	4.9	54.4	145.1	14.4	4.7	50.4	167.9
660 S	4.73	5.0	59.1	157.6	15.9	4.8	55.6	185.4
710 S	5.28	1.6	66.0	175.9	17.1	1.6	59.9	199.6
755 S	5.55	1.6	69.3	184.9	18.1	1.6	63.5	211.6
800 S	5.82	1.6	72.7	193.9	19.2	1.6	67.1	223.5
840 S	6.07	1.6	75.9	202.3	20.1	1.5	70.5	235.0
880 S	6.32	1.6	79.1	210.8	21.1	1.5	73.9	246.4

#### LEGEND:

**S** super low noise version  
**V:** recommended water content of the plant (cold side and hot side) with dT 5°C on the heat exchanger  
**Q min:** minimum water flow to the heat exchanger  
**Q max:** maximum water flow to the heat exchanger  
**dpw = K·Q<sup>2</sup> / 1000**

**Q = 0,86 P/ΔT**  
*P: heating or cooling capacity [kW]*  
*ΔT at heat exchanger :*  
*3°C minimum*  
*8°C maximum for Evaporator*  
*10°C maximum for Heat Recovery*  
**dpw:** pressure drop [kPa]

**Important:** In every working condition the variation of the water flow rate must be as low as possible. Variation must be less than 1% of the nominal flow rate per minute (see tables/curves in section 2.17)

## Mechanical installation

### 2.16 HYDRAULIC VERSIONS

CMAC SE-HE units are also available in multiple hydraulic versions, characterized by complete kits of all major hydraulic components for an easier installation, with reduced time, cost and space.

The wide range of hydraulic versions available make the unit suitable for any type of installation

- 1 pump for chilled water circuit + 1 pump for hot water circuit, low head pressure
- 1 pump for chilled water circuit + 1 pump for hot water circuit, medium head pressure
- 1 pump for chilled water circuit + 1 pump for hot water circuit, high head pressure
- 2 pumps for chilled water circuit + 2 pumps for hot water circuit, low head pressure
- 2 pumps for chilled water circuit + 2 pumps for hot water circuit, medium head pressure
- 2 pumps for chilled water circuit + 2 pumps for hot water circuit, high head pressure

### Hydronic kit

Centrifugal pumps with 2 poles, available in low, medium or high head pressure.

Pumps with cast iron body and impeller entirely welded using laser technology. Three phase electric motor with IP55 protection and insulation class F, suitable for continuous service.

Series motors with higher efficiency IE3 technology.

- Differential pressure switch on exchanger
- Water discharge and shut-off valve
- Taps on pumps suction / delivery which allow the replacement of a damaged pump eliminating the plant shutdown differently from other types of common use
- Check valve (only for double pump versions)
- Relief valve
- Safety valve (operating pressure 6 bars for low/medium head pressure pump versions and 9 bars for high head pressure pump version).
- Water gauges
- Expansion vessel

The stand-by pump accessory is also available, including 2 additional pumps (one for the cold circuit and the other for the hot circuit) in standby mode to the first, equipped with the automatic changeover including also the pressure switch for the intervention of the second pump.

The pumps operate with the balance of the related working hours. In case of failure of one pump the controller in automatic switches on the additional pump. The control panel is equipped with fuses and contactor with thermal protection.

### HYDRONIC ACCESSORIES ON REQUEST

- "Y" water strainer (sold separately), consists of body and stainless steel mesh, with replaceable filter through the inspection cap.
- Automatic water filling (sold separately).

## Mechanical installation

### CMAC SE

#### LOW HEAD PRESSURE PUMP

#### COOLING MODE

Mod.	Pf [kW]	qw [m <sup>3</sup> /h]	dpw [kPa]	Ref. curve	Expansion vessel [l]	F.L.I. [kW]	F.L.A. [A]	Hp [kPa]	Hu [kPa]
50	45	8	13	A	24	0.95	1.7	139	126
55	51	9	17	A	24	0.95	1.7	133	117
65	60	10	22	A	24	0.95	1.7	123	101
85	78	13	36	B	24	1.77	3.3	159	123
110	103	18	24	B	24	1.77	3.3	133	109
140	126	22	35	C	24	1.72	3.8	147	112
155	139	24	30	C	24	1.72	3.8	141	111
175	159	27	39	C	24	1.72	3.8	130	91
210	187	32	24	D	2 x 24	2.55	4.7	166	142
260	227	39	35	D	2 x 24	2.55	4.7	151	116
305	268	46	28	E	2 x 24	3.44	6.4	180	151
350	313	54	32	F	2 x 24	4.52	8.7	182	150
370	331	57	36	F	2 x 24	4.52	8.7	177	142
435	382	65	44	F	2 x 24	4.52	8.7	164	120
495	431	74	42	G	2 x 24	6.09	10.6	201	159
525	454	78	46	G	2 x 24	6.09	10.6	193	147

#### HEATING MODE

Mod.	Pt [kW]	qw [m <sup>3</sup> /h]	dpw [kPa]	Ref. curve	Expansion vessel [l]	F.L.I. [kW]	F.L.A. [A]	Hp [kPa]	Hu [kPa]
50	49	8.6	13.9	A	24	0.95	1.7	135	121
55	56	9.7	17.6	A	24	0.95	1.7	127	109
65	66	11.4	23.7	A	24	0.95	1.7	114	90
85	86	15.0	32.8	B	24	1.77	3.3	150	117
110	110	19.1	25.0	B	24	1.77	3.3	124	99
140	138	24.1	39.0	C	24	1.72	3.8	140	101
155	152	26.4	34.0	C	24	1.72	3.8	133	99
175	174	30.4	44.0	C	24	1.72	3.8	120	76
210	212	36.9	28.7	D	2 x 24	2.55	4.7	155	127
260	259	45.0	41.9	D	2 x 24	2.55	4.7	135	93
305	306	53.2	34.5	E	2 x 24	3.44	6.4	163	128
350	351	61.1	38.1	F	2 x 24	4.52	8.7	171	133
370	371	64.6	42.5	F	2 x 24	4.52	8.7	166	123
435	434	75.6	53.9	F	2 x 24	4.52	8.7	147	93
495	493	85.8	48.7	G	2 x 24	6.09	10.6	176	128
525	524	91.2	54.1	G	2 x 24	6.09	10.6	164	110


<b>Pf</b>	Cooling capacity (kW)
<b>Pt</b>	Heating capacity (kW)
<b>qw</b>	Water flow (m <sup>3</sup> /h)
<b>dpw</b>	Pressure drop (kPa)
<b>F.L.I.</b>	Full load electrical power
<b>F.L.A.</b>	Full load operating current
<b>Hp</b>	Pump head pressure
<b>Hu</b>	Available pressure



## Mechanical installation

### CMAC SE

#### LOW HEAD PRESSURE PUMP

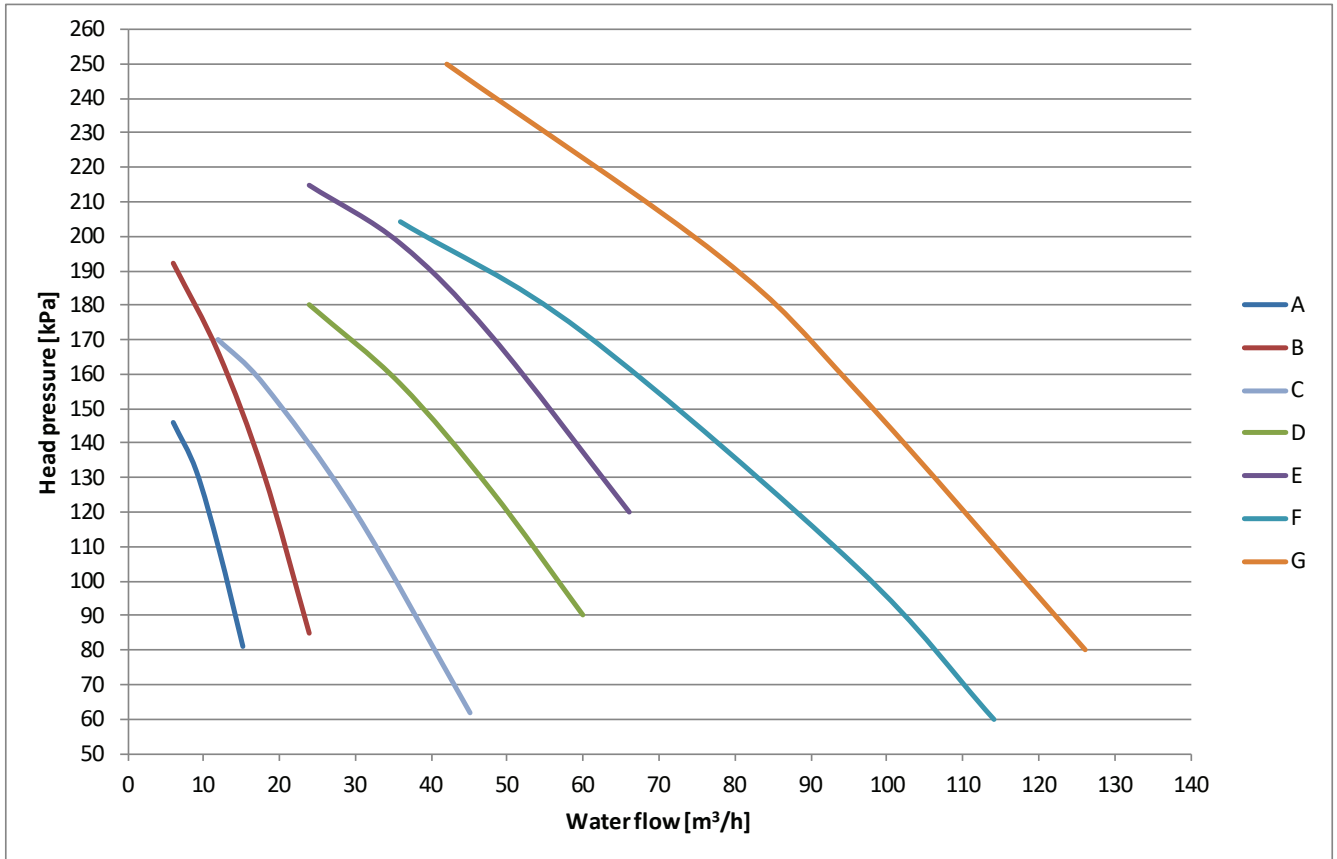

- A = Unit size 50-55-65
- B = Unit size 85-110
- C = Unit size 140-155-175
- D = Unit size 210-260
- E = Unit size 305
- F = Unit size 350-370-435
- G = Unit size 495-525

## Mechanical installation

### CMAC SE

### MEDIUM HEAD PRESSURE PUMP

### COOLING MODE

Mod.	Pf	qw	dpw	Ref. curve	Expansion vessel	F.L.I.	F.L.A.	Hp	Hu
	[kW]	[m <sup>3</sup> /h]	[kPa]		[l]	[kW]	[A]	[kPa]	[kPa]
50	45	8	13	A	24	1.28	2.3	176	163
55	51	9	17	A	24	1.28	2.3	173	156
65	60	10	22	B	24	1.77	3.3	174	152
85	78	13	36	C	24	1.72	3.8	194	158
110	103	18	24	D	24	2.55	4.7	216	192
140	126	22	35	D	24	2.55	4.7	204	169
155	139	24	30	D	24	2.55	4.7	198	168
175	159	27	39	D	24	2.55	4.7	187	148
210	187	32	24	E	2 x 24	3.44	6.4	206	182
260	227	39	35	E	2 x 24	3.44	6.4	194	159
305	268	46	28	F	2 x 24	4.52	8.7	222	194
350	313	54	32	G	2 x 24	6.09	10.6	235	203
370	331	57	36	G	2 x 24	6.09	10.6	231	195
435	382	65	44	G	2 x 24	6.09	10.6	217	173
495	431	74	42	G	2 x 24	6.09	10.6	201	159
525	454	78	46	G	2 x 24	6.09	10.6	193	147

### HEATING MODE


Mod.	Pt	qw	dpw	Ref. curve	Expansion vessel	F.L.I.	F.L.A.	Hp	Hu
	[kW]	[m <sup>3</sup> /h]	[kPa]		[l]	[kW]	[A]	[kPa]	[kPa]
50	49	9	14	A	24	1.28	2.3	173	160
55	56	10	18	A	24	1.28	2.3	169	151
65	66	11	24	B	24	1.77	3.3	169	145
85	86	15	33	C	24	1.72	3.8	185	153
110	110	19	25	D	24	2.55	4.7	212	187
140	138	24	39	D	24	2.55	4.7	197	158
155	152	26	34	D	24	2.55	4.7	190	156
175	174	30	44	D	24	2.55	4.7	176	132
210	212	37	29	E	2 x 24	3.44	6.4	198	169
260	259	45	42	E	2 x 24	3.44	6.4	182	140
305	306	53	35	F	2 x 24	4.52	8.7	203	168
350	351	61	38	G	2 x 24	6.09	10.6	224	186
370	371	65	43	G	2 x 24	6.09	10.6	218	175
435	434	76	54	G	2 x 24	6.09	10.6	198	144
495	493	86	49	G	2 x 24	6.09	10.6	176	128
525	524	91	54	G	2 x 24	6.09	10.6	164	110

<b>Pf</b>	Cooling capacity (kW)
<b>Pt</b>	Heating capacity (kW)
<b>qw</b>	Water flow (m <sup>3</sup> /h)
<b>dpw</b>	Pressure drop (kPa)
<b>F.L.I.</b>	Full load electrical power
<b>F.L.A.</b>	Full load operating current
<b>Hp</b>	Pump head pressure
<b>Hu</b>	Available pressure

## Mechanical installation

### CMAC SE

#### MEDIUM HEAD PRESSURE PUMP

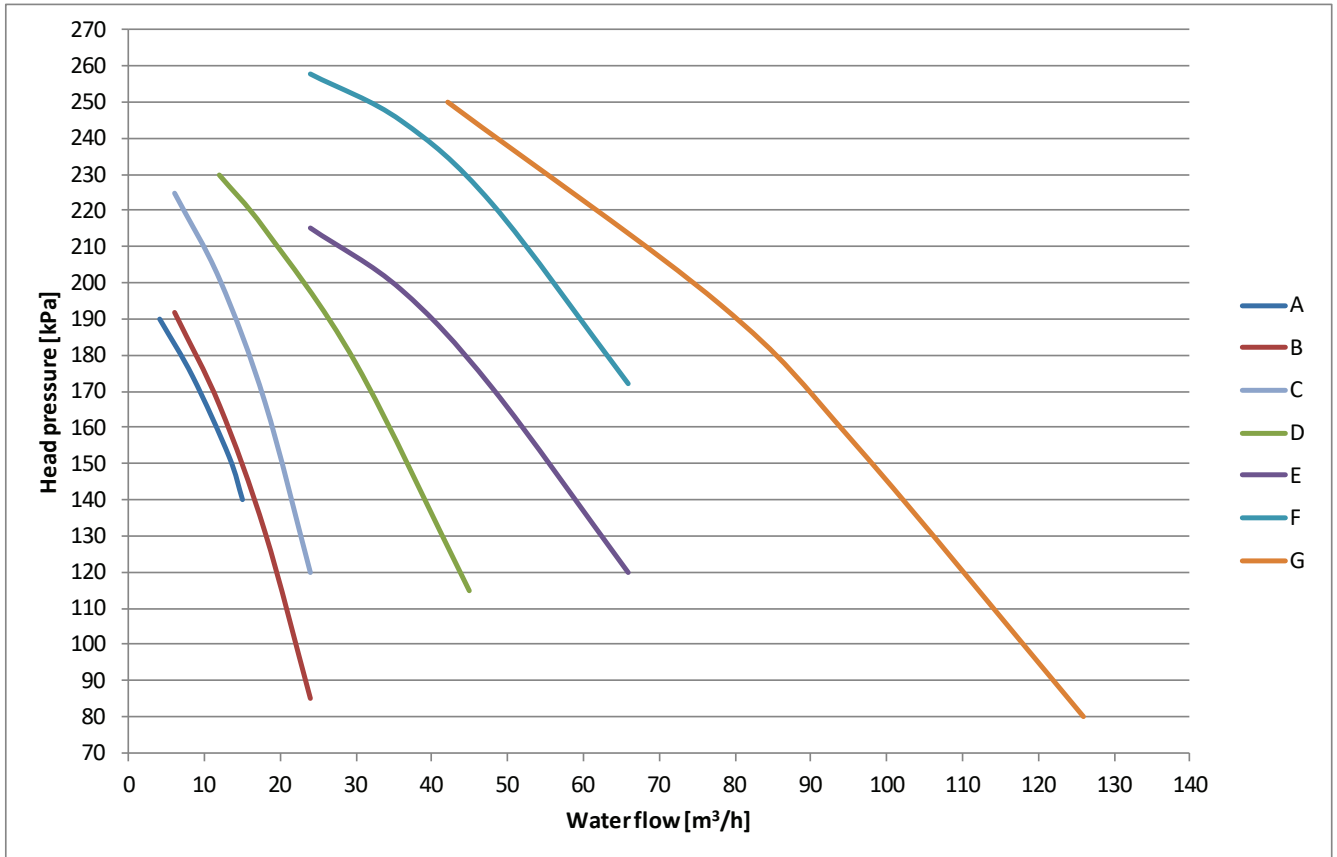

A = Unit size 50-55

B = Unit size 65

C = Unit size 85

D = Unit size 110-140-155-175

E = Unit size 210-260

F = Unit size 305

G = Unit size 350-370-435-495-525

## Mechanical installation

### CMAC SE

### HIGH HEAD PRESSURE PUMP

### COOLING MODE

Mod.	Pf	qw	dpw	Ref. curve	Expansion vessel	F.L.I.	F.L.A.	Hp	Hu
	[kW]	[m <sup>3</sup> /h]	[kPa]		[l]	[kW]	[A]		
50	45	8	13	A	24	1.73	3.2	215	201
55	51	9	17	B	24	2.2	4.3	275	258
65	60	10	22	B	24	2.2	4.3	266	244
85	78	13	36	B	24	2.2	4.3	244	208
110	103	18	24	C	24	3.44	6.4	238	214
140	126	22	35	C	24	3.44	6.4	227	192
155	139	24	30	C	24	3.44	6.4	221	191
175	159	27	39	D	24	3.44	6.4	247	208
210	187	32	24	D	2 x 24	3.44	6.4	229	205
260	227	39	35	E	2 x 24	4.52	8.7	238	203
305	268	46	28	F	2 x 24	6.09	10.6	284	255
350	313	54	32	F	2 x 24	6.09	10.6	263	230
370	331	57	36	F	2 x 24	6.09	10.6	253	218
435	382	65	44	G	2 x 24	8.26	13.6	265	221
495	431	74	42	H	2 x 24	10.12	17.2	304	261
525	454	78	46	H	2 x 24	10.12	17.2	298	252


### HEATING MODE

Mod.	Pt	qw	dpw	Ref. curve	Expansion vessel	F.L.I.	F.L.A.	Hp	Hu
	[kW]	[m <sup>3</sup> /h]	[kPa]		[l]	[kW]	[A]		
50	49	9	14	A	24	1.73	3.2	210	196
55	56	10	18	B	24	2.2	4.3	270	252
65	66	11	24	B	24	2.2	4.3	259	235
85	86	15	33	B	24	2.2	4.3	229	196
110	110	19	25	C	24	3.44	6.4	234	209
140	138	24	39	C	24	3.44	6.4	220	181
155	152	26	34	C	24	3.44	6.4	212	178
175	174	30	44	D	24	3.44	6.4	235	191
210	212	37	29	D	2 x 24	3.44	6.4	209	180
260	259	45	42	E	2 x 24	4.52	8.7	225	183
305	306	53	35	F	2 x 24	6.09	10.6	264	230
350	351	61	38	F	2 x 24	6.09	10.6	240	202
370	371	65	43	F	2 x 24	6.09	10.6	228	185
435	434	76	54	G	2 x 24	8.26	13.6	250	196
495	493	86	49	H	2 x 24	10.12	17.2	285	236
525	524	91	54	H	2 x 24	10.12	17.2	275	221

<b>Pf</b>	Cooling capacity (kW)
<b>Pt</b>	Heating capacity (kW)
<b>qw</b>	Water flow (m <sup>3</sup> /h)
<b>dpw</b>	Pressure drop (kPa)
<b>F.L.I.</b>	Full load electrical power
<b>F.L.A.</b>	Full load operating current
<b>Hp</b>	Pump head pressure
<b>Hu</b>	Available pressure

## Mechanical installation

### CMAC SE HIGH HEAD PRESSURE PUMP

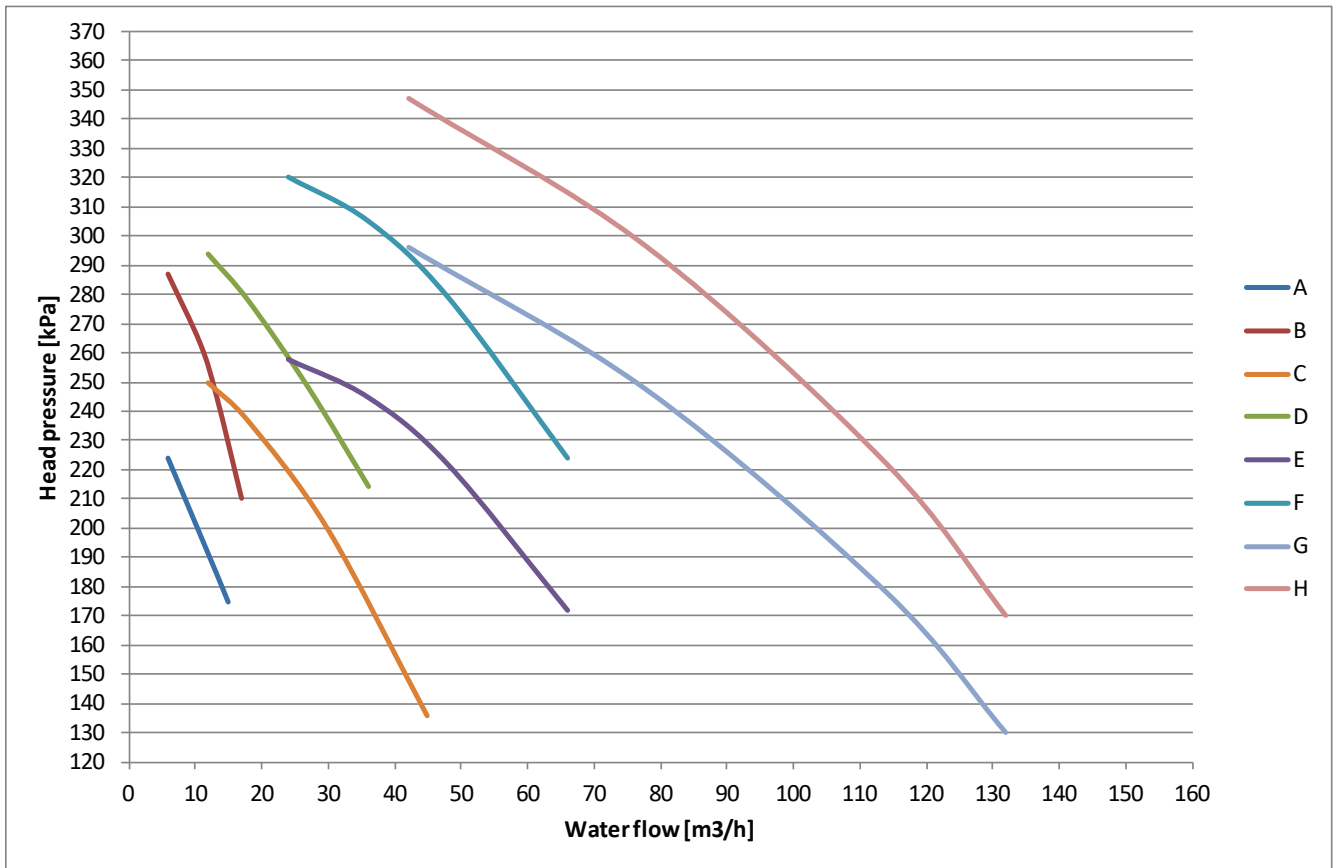

- A = Unit size 50
- B = Unit size 55-65-85
- C = Unit size 110-140-155
- D = Unit size 175-210
- E = Unit size 260
- F = Unit size 305-350-370
- G = Unit size 435
- H = Unit size 495-525

## Mechanical installation

### CMAC HE

### LOW HEAD PRESSURE PUMP

### COOLING MODE

Mod.	Pf	qw	dpw	Ref. curve	Expansion vessel	F.L.I.	F.L.A.	Hp	Hu
	[kW]	[m <sup>3</sup> /h]	[kPa]		[l]	[kW]	[A]	[kPa]	[kPa]
50	48	8	6	A	24	0.95	1.7	136	130
60	55	9	7	A	24	0.95	1.7	129	122
70	65	11	10	A	24	0.95	1.7	116	106
90	85	15	16	B	24	1.77	3.3	152	137
120	111	19	20	B	24	1.77	3.3	125	105
130	122	21	24	C	24	1.72	3.8	149	125
145	131	22	22	C	24	1.72	3.8	145	123
165	151	26	16	C	24	1.72	3.8	135	119
180	165	28	19	C	2 x 24	1.72	3.8	127	108
220	200	34	27	D	2 x 24	2.55	4.7	161	134
260	239	41	29	D	2 x 24	2.55	4.7	145	116
320	291	50	16	E	2 x 24	3.44	6.4	171	154
355	321	55	20	F	2 x 24	4.52	8.7	180	160
375	341	59	22	F	2 x 24	4.52	8.7	175	153
455	406	70	31	F	2 x 24	4.52	8.7	157	126
500	451	77	47	G	2 x 24	6.09	10.6	194	147
535	474	81	60	G	2 x 24	6.09	10.6	186	126
575	513	88	49	G	2 x 24	6.09	10.6	171	123
600	533	91	41	G	2 x 24	6.09	10.6	164	123
660	582	100	50	H	2 x 24	8.26	13.6	207	157
710	643	110	20	I	2 x 24	12.27	19.9	203	183
755	678	116	22	I	2 x 24	12.27	19.9	198	176
800	713	122	24	L	2 x 24	16.33	26.8	239	215
840	746	128	26	L	2 x 24	16.33	26.8	233	207
880	779	134	29	L	2 x 24	16.33	26.8	226	198

<b>Pf</b>	Cooling capacity (kW)
<b>Pt</b>	Heating capacity (kW)
<b>qw</b>	Water flow (m <sup>3</sup> /h)
<b>dpw</b>	Pressure drop (kPa)
<b>F.L.I.</b>	Full load electrical power
<b>F.L.A.</b>	Full load operating current
<b>Hp</b>	Pump head pressure
<b>Hu</b>	Available pressure

## Mechanical installation

### CMAC HE LOW HEAD PRESSURE PUMP HEATING MODE


Mod.	Pt [kW]	qw [m <sup>3</sup> /h]	dpw [kPa]	Ref. curve	Expansion vessel [l]	F.L.I. [kW]	F.L.A. [A]	Hp [kPa]	Hu [kPa]
50	51	9	7	A	24	0.95	1.7	133	127
60	58	10	8	A	24	0.95	1.7	124	117
70	69	12	11	A	24	0.95	1.7	108	98
90	91	16	18	B	24	1.77	3.3	145	128
120	119	21	22	B	24	1.77	3.3	112	90
130	132	23	26	C	24	1.72	3.8	144	118
145	144	25	26	C	24	1.72	3.8	137	111
165	162	28	18	C	24	1.72	3.8	127	109
180	178	31	22	C	2 x 24	1.72	3.8	117	95
220	217	38	33	D	2 x 24	2.55	4.7	153	120
260	260	45	35	D	2 x 24	2.55	4.7	134	100
320	320	56	20	E	2 x 24	3.44	6.4	156	137
355	355	62	24	F	2 x 24	4.52	8.7	170	146
375	377	66	27	F	2 x 24	4.52	8.7	164	137
455	455	79	38	F	2 x 24	4.52	8.7	141	102
500	501	87	57	G	2 x 24	6.09	10.6	173	116
535	534	93	74	G	2 x 24	6.09	10.6	160	85
575	576	100	60	G	2 x 24	6.09	10.6	142	82
600	598	104	51	G	2 x 24	6.09	10.6	133	82
660	662	115	63	H	2 x 24	8.26	13.6	172	109
710	710	124	24	I	2 x 24	12.27	19.9	191	167
755	754	131	27	I	2 x 24	12.27	19.9	184	157
800	797	139	30	L	2 x 24	16.33	26.8	220	190
840	839	146	33	L	2 x 24	16.33	26.8	210	177
880	881	154	36	L	2 x 24	16.33	26.8	201	165

Pf	Cooling capacity (kW)
Pt	Heating capacity (kW)
qw	Water flow (m <sup>3</sup> /h)
dpw	Pressure drop (kPa)
F.L.I.	Full load electrical power
F.L.A.	Full load operating current
Hp	Pump head pressure
Hu	Available pressure

## Mechanical installation

### CMAC HE

#### LOW HEAD PRESSURE PUMP

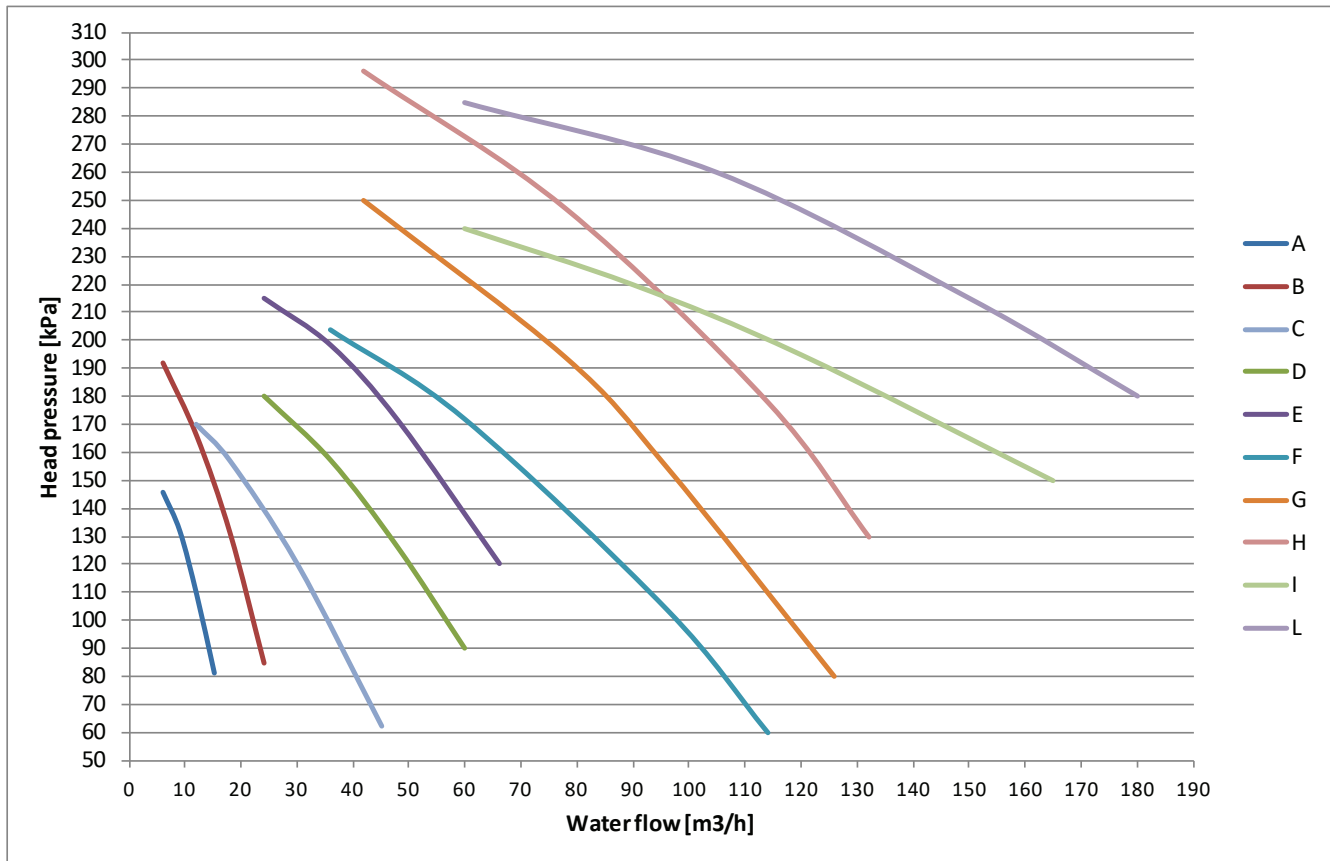

- A = Unit size 50-60-70
- B = Unit size 90-120
- C = Unit size 130-145-165
- D = Unit size 220-260
- E = Unit size 320
- F = Unit size 355-375-455
- G = Unit size 500-535-575-600
- H = Unit size 660
- I = Unit size 710-755
- L = Unit size 840-880



## Mechanical installation

**CMAC HE  
MEDIUM HEAD PRESSURE PUMP  
COOLING MODE**

Mod.	Pf [kW]	qw [m <sup>3</sup> /h]	dpw [kPa]	Ref. curve	Expansion vessel [l]	F.L.I. [kW]	F.L.A. [A]	Hp [kPa]	Hu [kPa]
50	48	8	6	A	24	1.28	2.3	174	168
60	55	9	7	A	24	1.28	2.3	170	163
70	65	11	10	B	24	1.77	3.3	170	160
90	85	15	16	C	24	1.72	3.8	188	172
120	111	19	20	D	24	2.55	4.7	212	192
130	122	21	24	D	24	2.55	4.7	207	183
145	131	22	22	D	24	2.55	4.7	202	180
165	151	26	16	D	24	2.55	4.7	191	175
180	165	28	19	D	2 x 24	2.55	4.7	183	164
220	200	34	27	E	2 x 24	3.44	6.4	203	175
260	239	41	29	E	2 x 24	3.44	6.4	190	161
320	291	50	16	F	2 x 24	4.52	8.7	212	196
355	321	55	20	G	2 x 24	6.09	10.6	233	213
375	341	59	22	G	2 x 24	6.09	10.6	228	206
455	406	70	31	G	2 x 24	6.09	10.6	209	178
500	451	77	47	G	2 x 24	6.09	10.6	194	147
535	474	81	60	G	2 x 24	6.09	10.6	186	126
575	513	88	49	H	2 x 24	8.26	13.6	229	181
600	533	91	41	H	2 x 24	8.26	13.6	223	182
660	582	100	50	I	2 x 24	12.27	19.9	212	162
710	643	110	20	I	2 x 24	12.27	19.9	203	183
755	678	116	22	I	2 x 24	12.27	19.9	198	176
800	713	122	24	L	2 x 24	16.33	26.8	239	215
840	746	128	26	L	2 x 24	16.33	26.8	233	207
880	779	134	29	L	2 x 24	16.33	26.8	226	198

<b>Pf</b>	Cooling capacity (kW)
<b>Pt</b>	Heating capacity (kW)
<b>qw</b>	Water flow (m <sup>3</sup> /h)
<b>dpw</b>	Pressure drop (kPa)
<b>F.L.I.</b>	Full load electrical power
<b>F.L.A.</b>	Full load operating current
<b>Hp</b>	Pump head pressure
<b>Hu</b>	Available pressure

## Mechanical installation

### CMAC HE

### MEDIUM HEAD PRESSURE PUMP


### HEATING MODE

Mod.	Pt	qw	dpw	Ref. curve	Expansion vessel	F.L.I.	F.L.A.	Hp	Hu
	[kW]	[m <sup>3</sup> /h]	[kPa]		[l]	[kW]	[A]		
50	51	9	7	A	24	1.28	2.3	172	166
60	58	10	8	A	24	1.28	2.3	167	160
70	69	12	11	B	24	1.77	3.3	166	155
90	91	16	18	C	24	1.72	3.8	181	163
120	119	21	22	D	24	2.55	4.7	207	185
130	132	23	26	D	24	2.55	4.7	201	175
145	144	25	26	D	24	2.55	4.7	194	168
165	162	28	18	D	24	2.55	4.7	183	165
180	178	31	22	D	2 x 24	2.55	4.7	173	151
220	217	38	33	E	2 x 24	3.44	6.4	196	163
260	260	45	35	E	2 x 24	3.44	6.4	181	146
320	320	56	20	F	2 x 24	4.52	8.7	195	175
355	355	62	24	G	2 x 24	6.09	10.6	223	199
375	377	66	27	G	2 x 24	6.09	10.6	216	189
455	455	79	38	G	2 x 24	6.09	10.6	190	152
500	501	87	57	G	2 x 24	6.09	10.6	173	116
535	534	93	74	G	2 x 24	6.09	10.6	160	85
575	576	100	60	H	2 x 24	8.26	13.6	206	146
600	598	104	51	H	2 x 24	8.26	13.6	198	147
660	662	115	63	I	2 x 24	12.27	19.9	199	136
710	710	124	24	I	2 x 24	12.27	19.9	191	167
755	754	131	27	I	2 x 24	12.27	19.9	184	157
800	797	139	30	L	2 x 24	16.33	26.8	220	190
840	839	146	33	L	2 x 24	16.33	26.8	210	177
880	881	154	36	L	2 x 24	16.33	26.8	201	165

<b>Pf</b>	Cooling capacity (kW)
<b>Pt</b>	Heating capacity (kW)
<b>qw</b>	Water flow (m <sup>3</sup> /h)
<b>dpw</b>	Pressure drop (kPa)
<b>F.L.I.</b>	Full load electrical power
<b>F.L.A.</b>	Full load operating current
<b>Hp</b>	Pump head pressure
<b>Hu</b>	Available pressure

## Mechanical installation

### CMAC HE MEDIUM HEAD PRESSURE PUMP

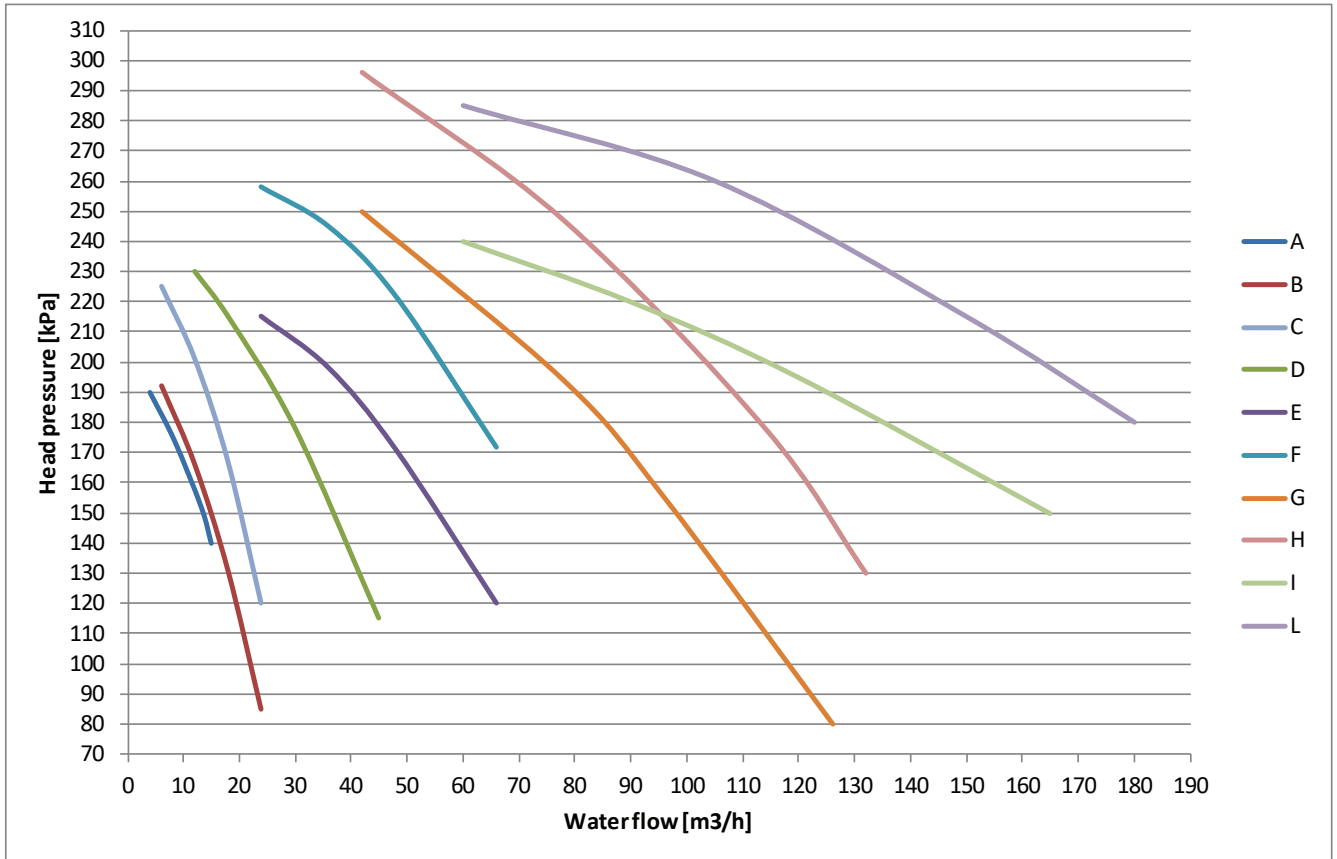

- A = Unit size 50-60
- B = Unit size 70
- C = Unit size 90
- D = Unit size 120-130-145-165-180
- E = Unit size 220-260
- F = Unit size 320
- G = Unit size 355-375-455-500-535
- H = Unit size 575-600
- I = Unit size 710-755
- L = Unit size 800-840-880

## Mechanical installation

### CMAC HE

### HIGH HEAD PRESSURE PUMP

### COOLING MODE

Mod.	Pf	qw	dpw	Ref. curve	Expansion vessel	F.L.I.	F.L.A.	Hp	Hu
	[kW]	[m <sup>3</sup> /h]	[kPa]		[l]	[kW]	[A]		
50	48	8	6	A	24	1.73	3.2	212	206
60	55	9	7	B	24	2.2	4.3	271	264
70	65	11	10	B	24	2.2	4.3	260	251
90	85	15	16	B	24	2.2	4.3	233	218
120	111	19	20	C	24	3.44	6.4	234	214
130	122	21	24	C	24	3.44	6.4	229	205
145	131	22	22	C	24	3.44	6.4	225	203
165	151	26	16	D	24	3.44	6.4	252	236
180	165	28	19	D	2 x 24	3.44	6.4	243	224
220	200	34	27	D	2 x 24	3.44	6.4	220	192
260	239	41	29	E	2 x 24	4.52	8.7	233	204
320	291	50	16	F	2 x 24	6.09	10.6	274	257
355	321	55	20	F	2 x 24	6.09	10.6	259	239
375	341	59	22	F	2 x 24	6.09	10.6	248	226
455	406	70	31	G	2 x 24	8.26	13.6	259	228
500	451	77	47	H	2 x 24	10.12	17.2	299	251
535	474	81	60	H	2 x 24	10.12	17.2	292	233
575	513	88	49	H	2 x 24	10.12	17.2	281	232
600	533	91	41	I	2 x 24	16.33	26.8	268	227
660	582	100	50	I	2 x 24	16.33	26.8	261	212
710	643	110	20	I	2 x 24	16.33	26.8	252	232
755	678	116	22	I	2 x 24	16.33	26.8	245	224
800	713	122	24	L	2 x 24	16.33	26.8	302	277
840	746	128	26	L	2 x 24	16.33	26.8	296	270
880	779	134	29	L	2 x 24	16.33	26.8	290	262

<b>Pf</b>	Cooling capacity (kW)
<b>Pt</b>	Heating capacity (kW)
<b>qw</b>	Water flow (m <sup>3</sup> /h)
<b>dpw</b>	Pressure drop (kPa)
<b>F.L.I.</b>	Full load electrical power
<b>F.L.A.</b>	Full load operating current
<b>Hp</b>	Pump head pressure
<b>Hu</b>	Available pressure

## Mechanical installation

### CMAC HE HIGH HEAD PRESSURE PUMP HEATING MODE


Mod.	Pt [kW]	qw [m <sup>3</sup> /h]	dpw [kPa]	Ref. curve	Expansion vessel [l]	F.L.I. [kW]	F.L.A. [A]	Hp [kPa]	Hu [kPa]
50	51	9	7	A	24	1.73	3.2	209	202
60	58	10	8	B	24	2.2	4.3	268	260
70	69	12	11	B	24	2.2	4.3	254	243
90	91	16	18	B	24	2.2	4.3	221	204
120	119	21	22	C	24	3.44	6.4	230	208
130	132	23	26	C	24	3.44	6.4	223	197
145	144	25	26	C	24	3.44	6.4	217	190
165	162	28	18	D	24	3.44	6.4	243	225
180	178	31	22	D	2 x 24	3.44	6.4	232	210
220	217	38	33	D	2 x 24	3.44	6.4	205	172
260	260	45	35	E	2 x 24	4.52	8.7	224	189
320	320	56	20	F	2 x 24	6.09	10.6	257	237
355	355	62	24	F	2 x 24	6.09	10.6	237	213
375	377	66	27	F	2 x 24	6.09	10.6	224	197
455	455	79	38	G	2 x 24	8.26	13.6	244	206
500	501	87	57	H	2 x 24	10.12	17.2	282	225
535	534	93	74	H	2 x 24	10.12	17.2	272	197
575	576	100	60	H	2 x 24	10.12	17.2	257	197
600	598	104	51	I	2 x 24	16.33	26.8	257	206
660	662	115	63	I	2 x 24	16.33	26.8	246	183
710	710	124	24	I	2 x 24	16.33	26.8	238	214
755	754	131	27	I	2 x 24	16.33	26.8	229	202
800	797	139	30	L	2 x 24	16.33	26.8	285	255
840	839	146	33	L	2 x 24	16.33	26.8	276	244
880	881	154	36	L	2 x 24	16.33	26.8	268	232

<b>Pf</b>	Cooling capacity (kW)
<b>Pt</b>	Heating capacity (kW)
<b>qw</b>	Water flow (m <sup>3</sup> /h)
<b>dpw</b>	Pressure drop (kPa)
<b>F.L.I.</b>	Full load electrical power
<b>F.L.A.</b>	Full load operating current
<b>Hp</b>	Pump head pressure
<b>Hu</b>	Available pressure

## Mechanical installation

### CMAC HE

#### HIGH HEAD PRESSURE PUMP

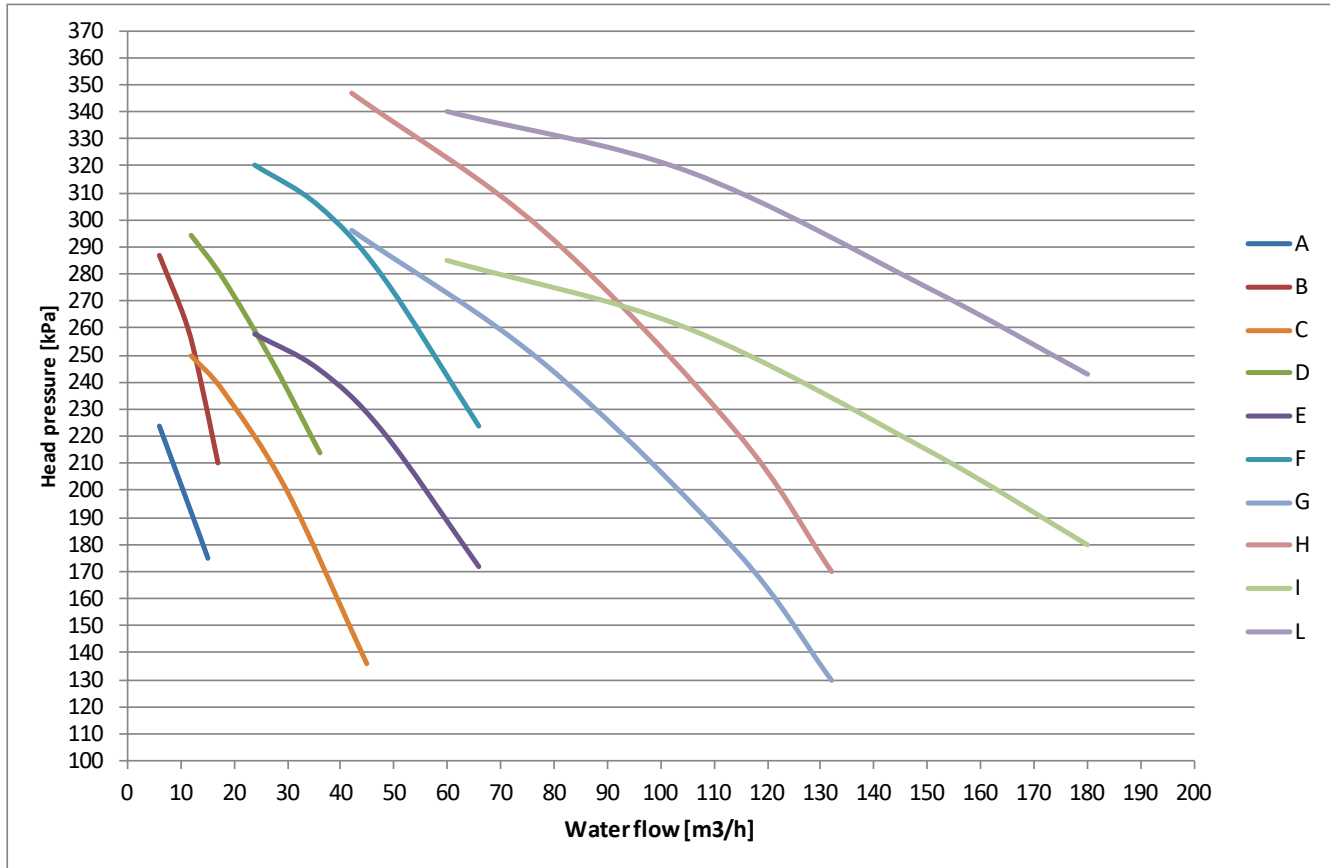

A = Unit size 50

B = Unit size 60-70-90

C = Unit size 120-130-145

D = Unit size 165-180-220

E = Unit size 260

F = Unit size 320-355-375

G = Unit size 455



H = Unit size 500-535-575

I = Unit size 600-660-710-755

L = Unit size 800-840-880

## Mechanical installation

### UNIT HYDRAULIC CIRCUIT - NO PUMP VERSION

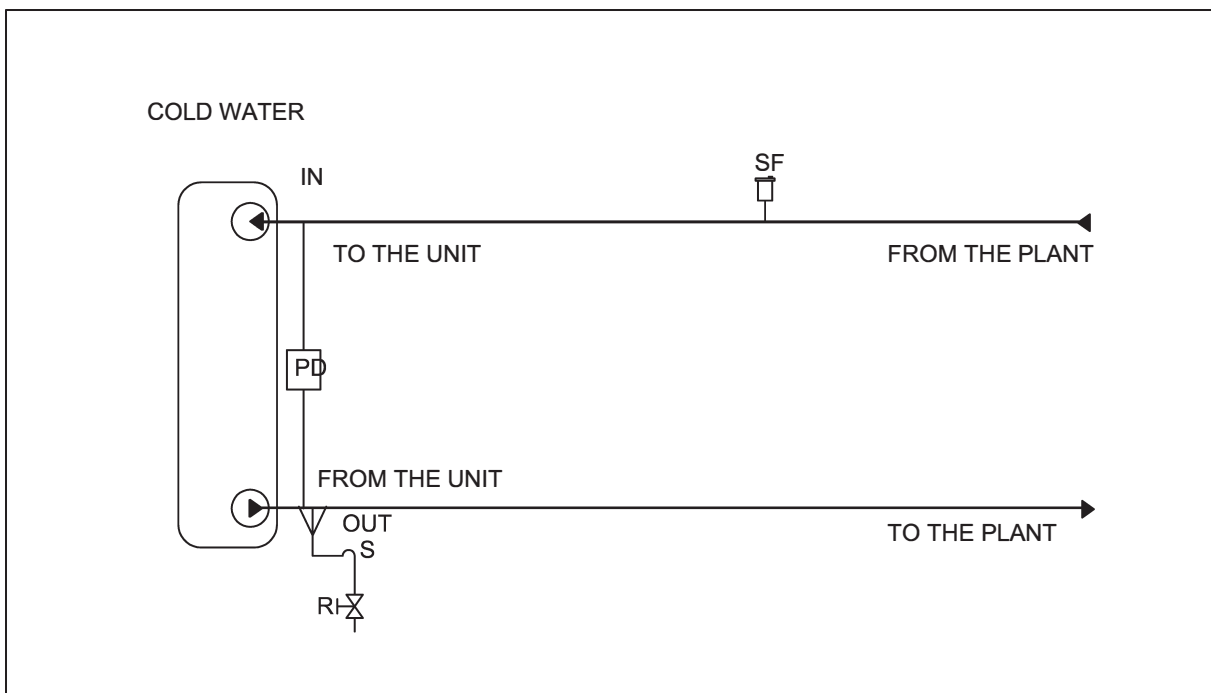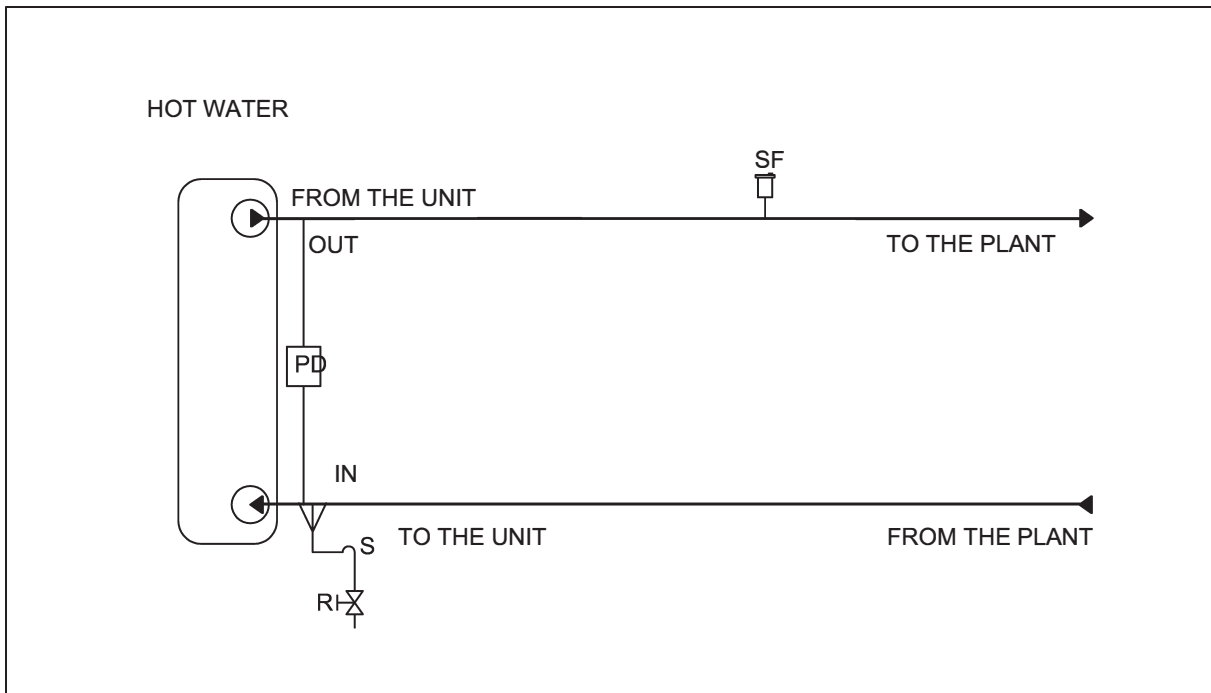



- S = Water discharge
- SF = Relief valve
- PD = Water differential pressure switch
- R = Shut off valve

A water strainer must be always installed on the inlet water pipe.

**WARNING:** Please check the installation sketches available in this manual showing the mandatory hydraulic accessories to be installed on the HVAC system and under customer responsibility.

## Mechanical installation

### UNIT HYDRAULIC CIRCUIT - 1 PUMP HOT WATER SIDE + 1 PUMP COLD WATER SIDE

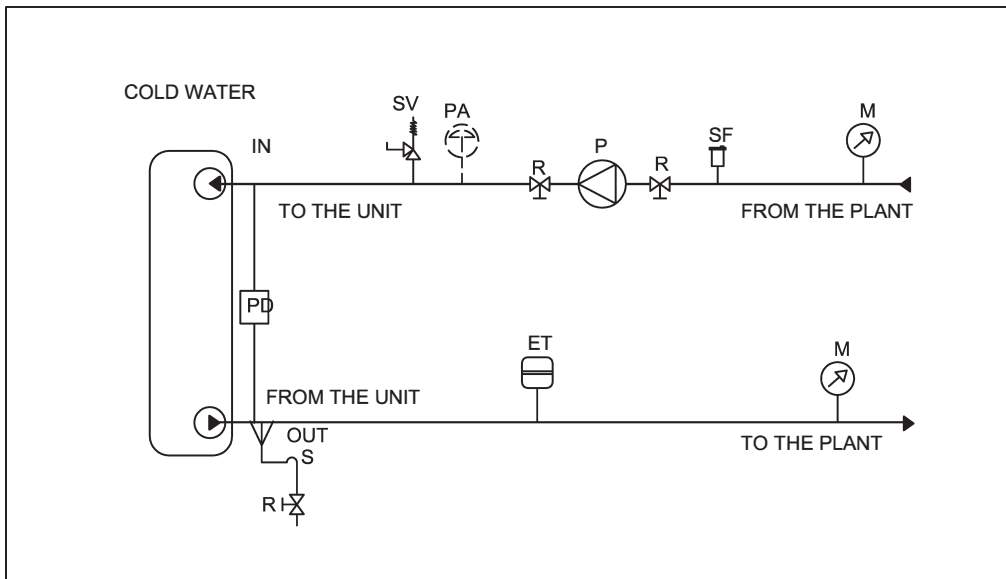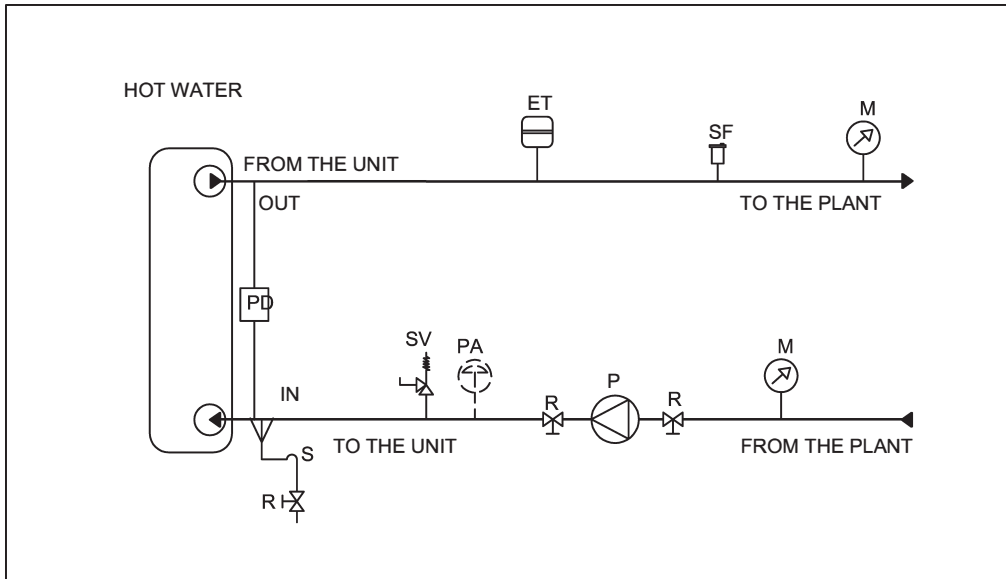

- M = Gauges
- S = Water discharge
- P = Pump
- SV = Safety valve
- SF = Relief valve
- ET = Expansion vessel
- PD = Water differential pressure switch
- R = Shut off valve
- PA = High pressure switch (optional)\*
- 4.6 bar = Low head pressure
- 5.4 bar = Medium head pressure
- 5.4 bar = High head pressure



A water strainer must be always installed on the inlet water pipe.

**WARNING:** Please check the installation sketches available in this manual showing the mandatory hydraulic accessories to be installed on the HVAC system and under customer responsibility.



## Mechanical installation

### UNIT HYDRAULIC CIRCUIT - 2 PUMPS HOT WATER SIDE + 2 PUMPS COLD WATER SIDE

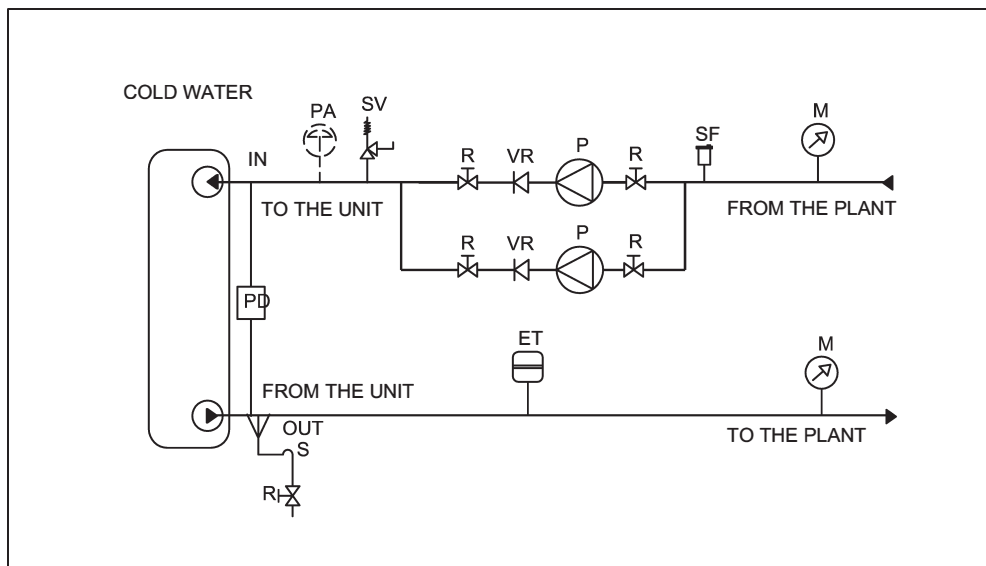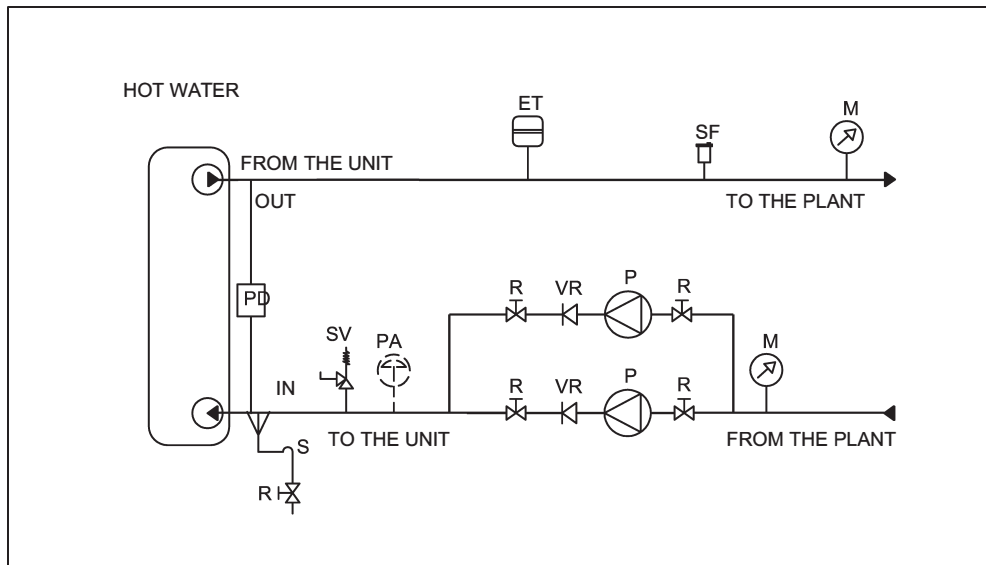

- M = Gauges
- S = Water discharge
- P = Pump
- SV = Safety valve
- SF = Relief valve
- ET = Expansion vessel
- PD = Water differential pressure switch
- R = Shut off valve
- PA = High pressure switch (optional)\*
- 4.6 bar = Low head pressure
- 5.4 bar = Medium head pressure
- 5.4 bar = High head pressure

A water strainer must be always installed on the inlet water pipe.

**WARNING:** Please check the installation sketches available in this manual showing the mandatory hydraulic accessories to be installed on the HVAC system and under customer responsibility.

## Mechanical installation

### 2.17 Refrigerant circuit safety valves

Each system comes with safety valves that are installed on each circuit on the high pressure and low pressure side. The purpose of the valves is to discharge the refrigerant inside the refrigerant circuit in the event of any malfunction.

#### WARNING!

This unit is designed for installation outdoors. However, check that there is sufficient air circulation around the unit.

If the unit is installed in closed or partly covered areas, possible damage from inhalation of refrigerant gases must be avoided. Avoid releasing the refrigerant in the environment.

The safety valves must be connected externally. The installer is responsible for connecting the safety valves to the discharge piping and for establishing their size.

### 2.18 Heat exchanger pressure drop

It is possible to use units with different flow rates from the nominal ones and consequently with different temperature differences from nominal. It is not recommended to operate the unit with thermal jumps too high, since very low water flow may cause the heat exchanger freezing with automatic exclusion of warranty. Too high water flow rates result in excessive water velocity and possible erosion / corrosion. In the first case low speed can lead to underperformance and easy scaling, and in the second case must install pumps with high prevalence energetically little valid.

### 2.19 Control and safety calibration

#### SCALING CORRECTION SCHEDULES

The following table provides information on the organs of action and safety of the unit. Always verify that the unit is within the limits imposed by pressure switches or pressure transducers and periodically check the calibration.

	UM	open	close	value
High pressure switch	barg	41	33	-
Low pressure switch	barg	1,8	2,8	-
Anrifreeze settings	barg	-	-	1
Low pressure safety valve	barg	-	-	24,5
High pressure safety valve	barg			45
N° start compressor max per hour	N			10

UM = measurement unit

#### ETHYLENE GLYCOL CORRECTION SCHEDULE

% Ethylene glycol weight		5%	10%	15%	20%	25%	30%	35%	40%
Freezing temperature	°C	-2	-3,9	-6,5	-8,9	-11,8	-15,6	-19	-23,4
Suggested security limit	°C	3	1	-1	-4	-6	-10	-14	-19
Cooling capacity coefficient	-	0,995	0,99	0,985	0,981	0,977	0,974	0,971	0,968
Power input coefficient	-	0,997	0,993	0,99	0,988	0,986	0,984	0,982	0,981
Flow rate coefficient	-	1,003	1,01	1,02	1,033	1,05	1,072	1,095	1,124
Pressure drop coefficient	-	1,029	1,06	1,09	1,118	1,149	1,182	1,211	1,243

In order to calculate performance with glycoled solutions multiply main sizes by respective coefficients.

## Mechanical installation

### GLYCOL PERCENTAGE DEPENDING ON FREEZING TEMPERATURE

% glycol according to the freezing temperature						
Freezing temperature	0°C	-5°C	-10°C	-15°C	-20°C	-25°C
% Ethylene glycol	5%	12%	20%	28%	35%	40%
Flow rate coefficient	1,02	1,033	1,05	1,072	1,095	1,124

In order to calculate performance with glycoled solutions multiply main sizes by respective coefficients.

### FOULING FACTOR CORRECTION TABLE

Fouling Factor F.F. [m <sup>2</sup> C*W]	Plant side cold heat exchanger			Plant side hot heat exchanger		
	A1	B1	Tmin	A2	B2	Tmax
0	1,00	1,00	0,00	1,00	1,00	0,00
1,80E-05	1,00	1,00	0,00	1,00	1,00	0,00
4,40E-05	1,00	1,00	0,00	0,99	1,03	1,00
8,80E-05	0,96	0,99	0,70	0,98	1,04	1,50
1,32E-04	0,94	0,99	1,00	0,96	1,05	2,30
1,72E-04	0,93	0,98	1,50	0,95	1,06	3,00

A factor	Capacity correction factor
B factor	Compressor power input correction factor
Tmin	Minimum evaporator outlet water temperature increase
T max	Maximum condenser outlet water temperature decrease



# Electrical installation

## **WARNING!**

All electrical connections to the unit must be carried out in compliance with laws and regulations in force.

All installation, management and maintenance activities must be carried out by qualified personnel.

Refer to the specific wiring diagram for the unit that you have purchased and which was sent with the unit. Should the wiring diagram not appear on the unit or should it have been lost, please contact your nearest Trane office, who will send you a copy.

## **WARNING!**

Only use copper conductors. Failure to use copper conductors could result in overheating or corrosion at connection points and could damage the unit.

To avoid interference, all control wires must be connected separately from the power cables. Use different electrical passage ducts for this purpose.

## **WARNING!**

Before servicing the unit in any way, open the general disconnecting switch on the unit's main power supply.

When the unit is off but the disconnecting switch is in the closed position, unused circuits are live, as well.

Never open the terminal board box of the compressors before having opened the unit's general disconnecting switch.

## Electrical installation

### CMAC SE

Model	NOMINAL VALUES									MAXIMUM VALUES (1)			
	Outdoor air temperature 35°C, evaporator water temperature in/out 12/7°C												
	Compressors (2)			Fans		TOTAL				TOTAL			
	F.L.I.	F.L.A.	L.R.A.	E.P.	O.C.	F.L.I.	F.L.A.	S.A.	S.A. with soft starter	F.L.I.	F.L.A.	S.A.	S.A. with soft starter
kW	A	A	kW	A	kW	A	A	A	kW	A	A	A	
50	14	24	142	3	6	17	30	159	60	30	53	170	71
55	16	29	147	3	6	19	35	164	61	33	58	175	72
65	20	35	147	3	6	23	41	171	68	37	66	183	80
85	25	43	197	5	9	30	52	228	90	46	81	242	104
110	37	61	215	5	9	41	70	255	104	63	111	275	125
140	44	69	260	6	12	50	81	307	125	77	136	334	152
155	51	80	320	6	12	57	92	368	144	87	153	394	170
175	54	83	320	9	18	63	101	379	155	99	176	417	193
210	69	115	215	9	18	78	133	318	167	118	209	373	223
260	82	132	320	9	18	91	150	428	204	142	250	491	267
305	106	159	320	9	18	115	177	453	229	170	300	541	317
350	109	169	320	12	24	121	193	471	247	193	340	581	357
370	118	182	413	12	24	130	206	565	276	199	351	674	385
435	148	223	413	12	24	160	247	605	316	218	384	707	418
495	150	232	320	18	36	168	268	546	322	269	476	717	493
525	163	251	320	18	36	181	287	565	341	289	510	751	527

### CMAC SE Low noise

Model	NOMINAL VALUES									MAXIMUM VALUES (1)			
	Outdoor air temperature 35°C, evaporator water temperature in/out 12/7°C												
	Compressors (2)			Fans		TOTAL				TOTAL			
	F.L.I.	F.L.A.	L.R.A.	E.P.	O.C.	F.L.I.	F.L.A.	S.A.	S.A. with soft starter	F.L.I.	F.L.A.	S.A.	S.A. with soft starter
kW	A	A	kW	A	kW	A	A	A	kW	A	A	A	
50	14	25	142	2	5	17	29	158	59	30	53	170	71
55	17	29	147	2	5	19	34	163	60	33	58	175	72
65	21	36	147	2	5	23	41	170	67	37	66	183	80
85	26	44	197	3	7	29	51	226	88	46	81	242	104
110	39	63	215	3	7	42	70	253	103	63	111	275	125
140	46	71	260	5	9	50	80	305	123	77	136	334	152
155	54	82	320	5	9	58	91	366	142	87	153	394	170
175	55	85	320	7	14	62	98	376	152	99	176	417	193
210	73	118	215	7	14	80	132	316	165	118	209	373	223
260	87	136	320	7	14	94	150	426	202	142	250	491	267
305	112	164	320	7	14	119	178	452	228	170	300	541	317
350	115	174	320	9	18	124	192	469	245	193	340	581	357
370	125	188	413	9	18	134	206	563	274	199	351	674	385
435	157	230	413	9	18	166	248	604	315	218	384	707	418
495	157	238	320	14	27	170	265	543	319	269	476	717	493
525	170	258	320	14	27	184	285	562	338	289	510	751	527

## Electrical installation

### CMAC SE Super low noise

Model	NOMINAL VALUES									MAXIMUM VALUES (1)			
	Outdoor air temperature 35°C, evaporator water temperature in/out 12/7°C												
	Compressors (2)			Fans		TOTAL				TOTAL			
	F.L.I.	F.L.A.	L.R.A.	E.P.	O.C.	F.L.I.	F.L.A.	S.A.	S.A. with soft starter	F.L.I.	F.L.A.	S.A.	S.A. with soft starter
kW	A	A	kW	A	kW	A	A	A	kW	A	A	A	
<b>50</b>	15	24	142	2	4	17	29	157	58	30	53	170	71
<b>55</b>	17	29	147	2	4	19	33	163	60	33	58	175	72
<b>65</b>	21	36	147	2	4	23	40	169	66	37	66	183	80
<b>85</b>	26	44	197	3	6	29	50	225	87	46	81	242	104
<b>110</b>	39	62	215	3	6	42	68	252	102	63	111	275	125
<b>140</b>	46	70	260	4	8	50	78	303	121	77	136	334	152
<b>155</b>	54	80	320	4	8	58	89	364	140	87	153	394	170
<b>175</b>	56	83	320	6	13	62	96	374	150	99	176	417	193
<b>210</b>	73	116	215	6	13	80	128	313	162	118	209	373	223
<b>260</b>	88	134	320	6	13	94	146	423	199	142	250	491	267
<b>305</b>	113	161	320	6	13	119	173	449	225	170	300	541	317
<b>350</b>	116	171	320	8	17	124	187	465	241	193	340	581	357
<b>370</b>	126	184	413	8	17	134	201	559	270	199	351	674	385
<b>435</b>	158	225	413	8	17	166	242	599	310	218	384	707	418
<b>495</b>	157	233	320	13	25	170	259	537	313	269	476	717	493
<b>525</b>	171	253	320	13	25	184	278	556	332	289	510	751	527

#### Electrical data referred to 400V - 3PH+N-50Hz

Maximum operating admitted conditions: 10%

Maximum phase unbalance: 3%

**F.L.I.** full load electrical power

**F.L.A.** full load operating current

**L.R.A.** compressor motor locked rotor current (direct starting)

**S.A.** sum of LRA of the most powerful compressor, FLA of other compressor and fans current

**E.P.** electrical power

**O.C.** operating current

(1) maximum operating admitted conditions by the compressors manufacturer

(2) data referred to the biggest compressor for units with different compressors

## Electrical installation

### CMAC HE

Model	NOMINAL VALUES									MAXIMUM VALUES (1)			
	Outdoor air temperature 35°C, evaporator water temperature in/out 12/7°C												
	Compressors (2)			Fans		TOTAL				TOTAL			
	F.L.I.	F.L.A.	L.R.A.	E.P.	O.C.	F.L.I.	F.L.A.	S.A.	S.A. with soft starter	F.L.I.	F.L.A.	S.A.	S.A. with soft starter
kW	A	A	kW	A	kW	A	A	A	kW	A	A	A	
<b>50</b>	13	24	142	3	6	16	30	159	60	30	53	170	71
<b>60</b>	15	28	147	3	6	18	34	164	61	33	58	175	72
<b>70</b>	19	34	147	3	6	22	40	170	67	37	66	183	80
<b>90</b>	24	42	197	5	9	28	51	227	89	46	81	242	104
<b>120</b>	33	57	215	5	9	38	66	253	102	63	111	275	125
<b>130</b>	37	61	260	6	12	43	73	301	119	71	125	323	141
<b>145</b>	42	66	260	6	12	48	78	305	123	77	136	334	152
<b>165</b>	45	72	320	9	18	54	90	370	146	90	159	400	176
<b>180</b>	51	80	320	9	18	60	98	378	154	99	176	417	193
<b>220</b>	65	110	215	9	18	74	128	314	164	118	209	373	223
<b>260</b>	80	129	320	9	18	89	147	425	201	142	250	491	267
<b>320</b>	96	150	320	12	24	108	174	453	229	173	306	547	323
<b>355</b>	106	165	320	12	24	118	189	468	244	193	340	581	357
<b>375</b>	114	177	413	12	24	126	201	562	273	199	351	674	385
<b>455</b>	133	213	413	15	30	148	243	603	314	221	390	713	424
<b>500</b>	147	227	320	18	36	165	263	543	319	269	476	717	493
<b>535</b>	159	244	320	18	36	177	280	560	336	289	510	751	527
<b>575</b>	176	270	413	18	36	194	306	667	378	301	532	855	566
<b>600</b>	185	287	413	18	36	203	323	682	393	308	543	866	577
<b>660</b>	213	327	413	18	36	231	363	721	432	327	576	899	610
<b>710</b>	211	340	320	24	48	235	388	666	442	385	680	921	697
<b>755</b>	229	367	413	24	48	253	415	773	484	398	702	1025	736
<b>800</b>	247	394	413	24	48	271	442	800	511	410	724	1047	758
<b>840</b>	265	422	413	24	48	289	470	827	538	423	746	1069	780
<b>880</b>	284	450	413	24	48	308	498	855	566	435	768	1091	802

## Electrical installation

### CMAC HE Super low noise

Model	NOMINAL VALUES									MAXIMUM VALUES (1)			
	Outdoor air temperature 35°C, evaporator water temperature in/out 12/7°C												
	Compressors (2)			Fans		TOTAL			TOTAL				
	F.L.I.	F.L.A.	L.R.A.	E.P.	O.C.	F.L.I.	F.L.A.	S.A.	S.A. with soft starter	F.L.I.	F.L.A.	S.A.	S.A. with soft starter
kW	A	A	kW	A	kW	A	A	A	kW	A	A	A	
<b>50</b>	14	24	142	2	4	16	28	157	58	30	53	170	71
<b>60</b>	16	28	147	2	4	18	32	162	59	33	58	175	72
<b>70</b>	20	34	147	2	4	22	39	168	65	37	66	183	80
<b>90</b>	25	43	197	3	6	28	49	225	87	46	81	242	104
<b>120</b>	35	57	215	3	6	39	64	250	100	63	111	275	125
<b>130</b>	39	62	260	4	8	43	70	297	115	71	125	323	141
<b>145</b>	44	67	260	4	8	48	75	302	120	77	136	334	152
<b>165</b>	47	72	320	6	13	53	85	365	141	90	159	400	176
<b>180</b>	53	81	320	6	13	60	93	373	149	99	176	417	193
<b>220</b>	69	111	215	6	13	75	124	310	159	118	209	373	223
<b>260</b>	85	130	320	6	13	92	142	421	197	142	250	491	267
<b>320</b>	102	151	320	8	17	110	168	446	222	173	306	547	323
<b>355</b>	112	166	320	8	17	120	183	461	237	193	340	581	357
<b>375</b>	122	179	413	8	17	131	196	556	267	199	351	674	385
<b>455</b>	142	215	413	11	21	152	236	595	306	221	390	713	424
<b>500</b>	155	229	320	13	25	168	254	533	309	269	476	717	493
<b>535</b>	168	246	320	13	25	181	271	550	326	289	510	751	527
<b>575</b>	188	272	413	13	25	201	298	658	369	301	532	855	566
<b>600</b>	198	289	413	13	25	211	314	673	384	308	543	866	577
<b>660</b>	229	329	413	13	25	242	354	713	424	327	576	899	610
<b>710</b>	225	343	320	17	34	242	376	654	430	385	680	921	697
<b>755</b>	245	370	413	17	34	262	403	762	472	398	702	1025	736
<b>800</b>	265	397	413	17	34	282	431	788	499	410	724	1047	758
<b>840</b>	286	425	413	17	34	303	459	816	527	423	746	1069	780
<b>880</b>	307	454	413	17	34	323	487	844	555	435	768	1091	802

#### Electrical data referred to 400V - 3PH+N-50Hz

Maximum operating admitted conditions: 10%

Maximum phase unbalance: 3%

**F.L.I.** full load electrical power

**F.L.A.** full load operating current

**L.R.A.** compressor motor locked rotor current (direct starting)

**S.A.** sum of LRA of the most powerful compressor, FLA of other compressor and fans current

**E.P.** electrical power

**O.C.** operating current

(1) maximum operating admitted conditions by the compressors manufacturer

(2) data referred to the biggest compressor for units with different compressors



## Electrical installation

### 3.1 Electrical components

All power and interface electrical connections are specified in the wiring diagram that is shipped with the unit.

The installer must supply the following components:

- Power supply cables (dedicated duct).
- Interconnection and interface cables (dedicated duct).
- Thermal-magnetic circuit breaker of suitable size (please see electrical data).

### 3.2 Electrical connections

#### Power circuit:

Connect the power supply wires directly to the terminals of the overall place in the framework of the unit. The access panel must be drilled depending on the section of the cable used and its gland. A flexible pipe containing the three supply phases plus ground can also be used.

Ensure total protection against the possible penetration of water into the connection point.

#### Control circuit:

The control circuit is powered with 24 VAC. Each unit is provided with auxiliary transformer control circuit 230/24V. It requires no additional power cable for the control equipment.

Only in the case where it is required to install a separate optional storage tank is necessary to feed separately antifreeze heater.

#### Electric heaters

The unit has an antifreeze heater installed directly into the evaporator. Each circuit also has an electric resistance installed in the compressor in order to keep warm the oil and thus avoid the transmigration of the refrigerant in its interior. Obviously the operation of the electrical resistors is guaranteed only if this constant power supply. If you can not leave the unit powered during the winter stop, apply at least two of the procedures described in the section "Installation - Mechanical" in "Antifreeze protection".

#### Alarm Relay – Electrical connections

The unit is equipped with an alarm relay, which changes state every time an alarm occurs in one of the cooling circuits. Connect the terminals as per the wiring diagram on the unit - terminal "X" - a visual or audible alarm or any external supervision system.

**BMS to monitor its operation.** See the wiring of the unit for wiring.

#### Remote On / Off unit - Electrical connection.

The unit has a digital input that allows remote control of the unit as per the wiring diagram on the unit - terminal "X" -. This input can be connected to a clock start-up, a switch or a BMS. Once closed, the microprocessor starts the boot sequence before turning on the water pump and then the compressors. On opening the contact, the microprocessor starts the shutdown sequence of the unit. The contact must be clean.

#### External reset of the setpoint of the water - Electrical connection (Optional)

The setpoint of the unit can be varied via an external analog signal 4-20 mA.

The signal cable should be connected directly to the terminal strip "X" as per the wiring diagram. The signal cable should be shielded and not in the vicinity of the power cables to the electronic controller.

#### End user electrical board connection - "X"

Please refer to the wiring diagram provided with the unit.

### 3.3 Electrical Recommendations

#### **WARNING! Hazardous Voltage with Capacitor!**

Disconnect all electric power, including remote. Disconnect and discharge all motor start/run and capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power cannot be inadvertently energized.

For variable frequency drives or other energy storing components provided by Trane or others, refer to the appropriate manufacturer's literature for allowable waiting periods for discharges capacitors. Verify with an appropriate voltmeter that all capacitors have discharged.

DC bus capacitors retain hazardous voltages after input power has been disconnected. Follow proper lockout/tagout procedures to ensure the power cannot be inadvertently energized.

After disconnecting input power, wait 5 minutes for units which are equipped with EC fans and wait 20 minutes for units which are equipped with variable frequency drive (0V DC) before touching any internal components. Failure to follow these instructions could result in death or serious injury.

# Unit operation

**THE INTENDED APPLICATION OF MULTI-PIPE UNITS IS ONLY FOR COMFORT COOLING AND HEATING. FOR ANY DIFFERENT REQUEST, PLEASE CONTACT TRANE TECHNICAL SUPPORT.**

## 4.1 Operator responsibilities

It is important that the operator is properly trained and familiar with the equipment before working on the unit. In addition to reading this manual, the operator must study the operation manual of the Tracer UC800 microprocessor and the wiring diagram to understand the sequence of start-up, operation, shutdown sequences, and the criterion of operation of all safety devices. During the initial start-up of the unit an authorized technician is available to answer any questions and educate on the proper functioning. We recommend the operator to maintain a record of the operating data for each unit installed and all maintenance activities and periodic service. If the operator observes abnormal or unusual operating conditions, consult the authorized service technician.

## 4.2 Unit description

### CASING

Casing made with heavy gauge structure in galvanized steel. The powder paint anti-corrosive treatment over the entire frame provides long lasting resistance for outdoor installation, even in aggressive environmental conditions. Its design allows these machines to be manufactured in modular units and, at same time, it ensures a constant air flow through the finned coils and makes for easy maintenance and service.

### COMPRESSORS

Compressor of scroll hermetic type. These compressors are featured from high performance with low noise and vibration levels. The high values of COP are obtained:

- By means of high volumetric efficiency in the whole operating range obtained through the continuous contact between the fix and rotating spirals which avoids the bad space and the expansion of the refrigerant;
- By means of low pressure losses due to the absence of suction and discharge valves and to the continuous compression;
- By means of the reduction of the heat exchanging between the suction and discharge refrigerant, thanks to the complete separation of the refrigerant paths.

The acoustic features are obtained:

- For the absence of the suction and discharge valves;
- For the continuous and progressive compression process;
- For the absence of pistons which ensures the low vibrations level and pulsation of the refrigerant.

The electric motor is suction cooled and equipped with automatic reset thermal protection and electric heater to prevent the dilution of the refrigerant in the oil during the periods when the unit is stopped. The terminals are contained into a box IP 54 protected.

### FANS

With blades statically and dynamically balanced, driven directly by the electric motors, closed type, external rotor and thermal protection for outdoor installation. Class F windings, internal protection according to VDE 0730. These fans are characterized by low speed and "owlet" profile to reduce the effect of vortices, thereby reducing the energy consumed for operation and noise, reducing it by an average of 6dB (A) compared with standard fans. All the units are equipped with condensing and evaporating pressostatic control by means of air flow regulation by step. In this way the unit is promptly adjusted in accordance to the outdoor conditions maximizing the efficiency of the refrigerant cycle.

### PLATE HEAT EXCHANGER – COLD SIDE

Direct expansion, stainless steel AISI 316 brazed plate type with double circuit, externally insulated with closed cell anti-condensation material and equipped with water differential pressure switch and antifreeze protection electric heater.

### HIGH EFFICIENCY PLATE HEAT EXCHANGER – HOT SIDE

Direct expansion, stainless steel AISI 316 brazed plate type with double circuit, externally insulated with closed cell anti-condensation material and equipped with water differential pressure switch and antifreeze protection electric heater.

### SOURCE HEAT EXCHANGER

The condensing / evaporating exchangers are made with finned coil and copper tubes, with corrugated aluminum fins. Thermostatic electrical heaters are installed on the base of the coils to prevent formation of ice on the coils, to reduce the defrost time and improve condensate drainage. The coils are also designed to ensure a proper speed inside the pipes and ensure the correct oil flow in each load condition.

## Unit operation

### REFRIGERANT CIRCUIT

The refrigerant circuit is specific and optimized for the use of a reduced number of solenoids valve and the cross exchange technology, which allows to avoid stops of the units during winter times in case of hot water demand only when cooling is satisfied . Consequently the water temperature of the cold tank doesn't reach the temperature of ice on the evaporator.

The refrigerant circuit is entirely made of copper tubes and includes:

- Refrigerant charge R410A
- Electronic expansion valve
- Filter drier with interchangeable cartridge suitable for the use of ecological fluids and polyesters oils
- Indicator lamp for liquid flow and humidity presence
- Shut off valve on the liquid line complete of balancing pressure system making easier the opening and closing operations
- High pressure switch
- Low pressure switch
- Safety valve on the discharge line
- Safety valve on the suction line
- High pressure transducers
- Low pressure transducers
- Liquid receiver
- Liquid accumulator on the suction line
- 4 way reverse valve
- Cycle configuration valve

### ELECTRICAL PANEL

The electrical panel made in accordance with CEI-EN 60204-1 (CEI44-5; CEI EN 62061) standards, is housed in watertight box, the opening system of the box needs the use of a retractable handle or dedicated tools, in each case the opening is allowed only after disconnection of the power supply through the main switch with door lock handle lockable in OFF position.

The electrical panel includes:

- Protection fuses for the supply line of each compressor
- Protection fuses for the supply line of fans for each refrigerant circuit
- Protection fuses of auxiliary circuit
- Start up contactors for compressors dimensioned according to the maximum stress
- Start up contactors for fans
- Adjustable thermal magnetic circuit breaker for the protection of the pump (only in case of units equipped with hydraulic kit)
- Start up contactors for pump (only in case of units equipped with hydraulic kit)
- Single-phase transformer for the power supply of the auxiliary circuits
- Numbered wires (optional)
- Microprocessor control

The electrical power supply without neutral needs to be 400V/3ph/50Hz.


**WARNING! Hazardous Voltage with Capacitor!**

## Unit operation

### 4.3 Operating modes


Multi-pipe units are made of 2 distinct sections, one for heating (condenser side) and one for cooling (evaporator side). The simultaneous production of hot and chilled water allows the unit to adapt its operation to any requirement of the HVAC system, in a totally autonomous and self-managed way.

Multi-pipe units automatically switch their operating cycle according to the load demands during the whole year, without doing the manual switch from summer to winter mode needed for traditional heat pumps. There are three basic operating modes which are automatically selected in order to minimize the power input and satisfy the thermal load of the plant.

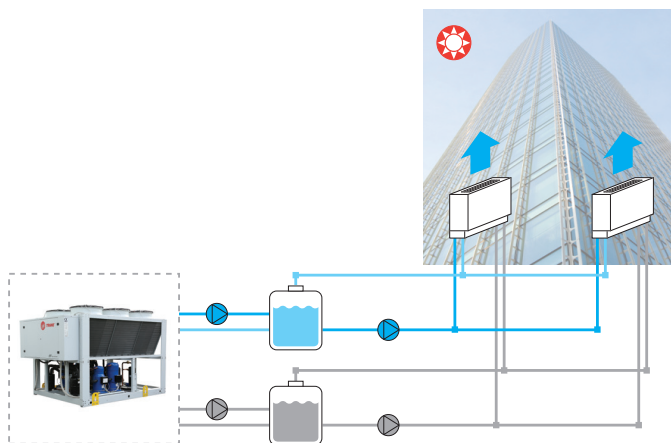

#### ONLY CHILLER MODE

The unit works in chiller mode dissipating the condensation heat through a finned coil heat exchanger (condenser). The water is chilled in a water-refrigerant plate heat exchanger (evaporator).

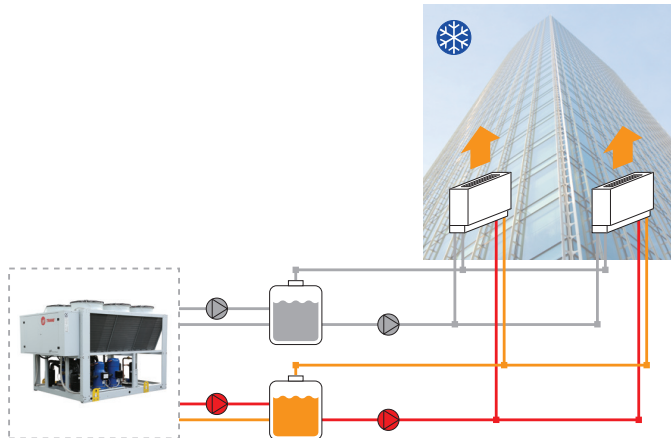


#### ONLY HEAT PUMP MODE

The unit works in heat pump mode only, exploiting the outdoor air energy to heat the water through a water-refrigerant plate heat exchanger (condenser).

Different from traditional reversible heat pumps the hot water is produced in a different heat exchanger from the one used to produce chilled water.

Therefore according to the operating mode, whether the unit works in heat pump mode or in chiller mode, there are dedicated heat exchangers for the chilled or hot water production (evaporator or condenser).

This is required in order to keep the cooling and heating side separated, as needed in a 4-pipe system.

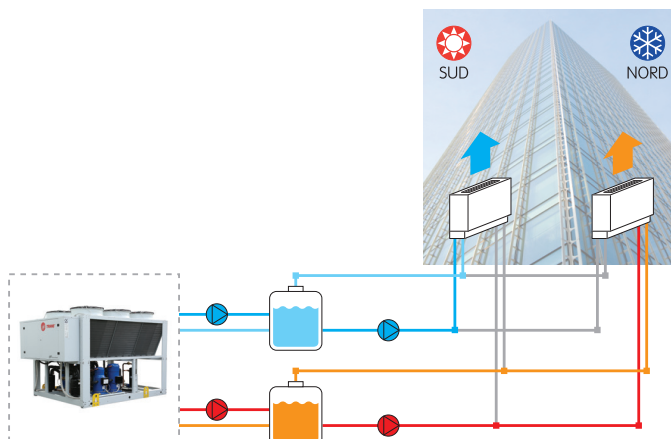

#### CHILLER + TOTAL OR PARTIAL RECOVERY MODE

The unit works as a water-water heat pump in case there is simultaneous demand of hot and chilled water, by controlling the condensation and the evaporation through two different plate heat exchangers each for its own hydraulic circuit of the 4 pipe plant.

## 4.4 Compressor oil load

### Checking the oil charge

For all Trane units compressors are charged with oil at the factory. The scroll compressors are equipped with an oil sight glass from which you can control the level. In tandem or trio performances, pay particular attention to oil level. Not perfectly leveled sight glasses between compressors in parallel, but falling in the upper and lower limits, are considered normal.


Next to the lamp there is a connection on every compressor for draining the oil and a connection for refilling.

To refill oil, there is a ¼" Schrader connection.

To refill oil, it is necessary to discharge the refrigerant in the unit, recovering it in adequate cylinders. Then vacuum until you reach a pressure of about 6 Pa to remove any trace of humidity from the circuit. Then load the unit with a small amount of refrigerant and fill oil from the proper connection for refilling.

Add oil until the oil sight glass is flat within the upper and lower limits indicated by the corresponding notches.

At this point refill the previously discharged amount of refrigerant as in the indications above. Restart the compressor. Run for 20 minutes at full load and check the oil level.

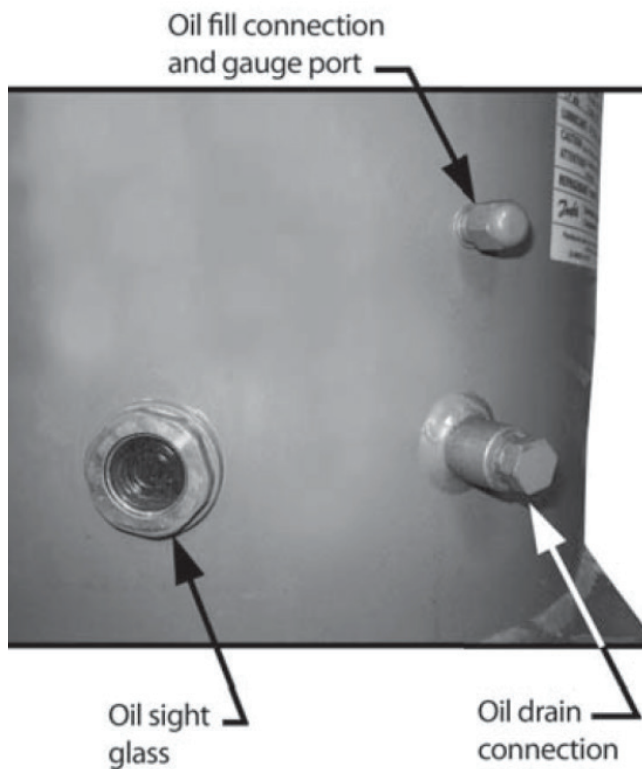

# Pre-startup checks

## 5.1 General

Once the unit has been installed, use the following procedure to check that it has been done properly:

### **WARNING!**

Remove the power supply from the unit before performing any checks.

Failure to open the power switches at this stage can result in serious injury to the operator or even death.

Inspect all the electrical connections to the power circuits and to the compressors including the contactors, fuse carriers and electrical terminals and check that they are clean and well secured. Even though this is done at the factory to every unit that is shipped, vibrations from transport could have loosened some electrical connections.

### **WARNING!**

Check that the electrical terminals of cables are well tightened. A loose cable can overheat and give rise to problems with the compressors.

Open discharge, liquid, liquid injection and intake (if installed) taps.

### **WARNING!**

Do not start up the compressors if the exhaust, liquid, liquid injection and intake taps are closed. Failure to open these taps/ valves can cause serious damage to the compressor.

Place all the thermal-magnetic switches of the fans.

### **IMPORTANT!**

If the thermal-magnetic switches of the fans are forgotten open, both compressors will block due to high pressure when the unit is started up for the first time. Resetting the high-pressure alarm requires opening the compressor compartment and resetting the high-pressure mechanical pressure switch.

The unit comes with a factory-supplied phase monitor that prevents compressors from starting in the event of an erroneous phase sequence. Properly connect the electrical terminals to the disconnect switch so as to ensure alarm-free operation. In the event that, after the unit has been powered on, the phase monitor should set off an alarm, only invert two phases at the general disconnect switch input (Unit input). Never invert the electrical wiring on the monitor.

### **WARNING!**

Starting up with the wrong sequence of phases irreparably compromises operation of the compressor. Ensure that phases L1, L2 and L3 correspond in sequence to R, S and T.

Fill the water circuit and remove air from the system's highest point and open the air valve above the evaporator skirt.

Remember to close it again after filling. The design pressure on the water side of the evaporator is 10.0 bars. Never exceed this pressure at any time during the life of the unit.

### **IMPORTANT!**

Before placing the unit into operation, clean the hydraulic circuit. Dirt, incrustation, corrosion residue and other extraneous material can accumulate in the heat exchanger and reduce its thermal exchange capacity. Pressure drops can also increase, consequently reducing water flow. Thus, correct water treatment reduces the risk of corrosion, erosion, scaling, etc. The most appropriate water treatment must be established locally, according to the type of installation and to the characteristics of the process water locally.

Trane is not responsible for damage or bad operation of the apparatus resulting from failure to treat water or from incorrectly treated water.

Close the door lock main switch placed on the door of the main electrical panel and move the switch

On position. Make sure that the display shows: "Unit in stand-by."

### **WARNING!**

From this moment on, the unit will be electrically powered. Use extreme caution in operations later.

## Pre-startup checks

### 5.2 Electrical supply

The supply voltage of the unit must be equal to that specified on the rating plate  $\pm 10\%$ , while in voltage unbalance between phases must not exceed  $\pm 3\%$ . Measure the voltage differential between the three phases.

In case the measured values are not within the limits make sure the unbalance is corrected before the first start-up of the CMAC.

DO NOT START UP in case the voltage unbalance remains !

#### **WARNING!**

Provide an adequate supply voltage. Inadequate supply voltage may cause malfunction of control components and unwanted interventions thermal protection as well as a substantial reduction of the life of the contactors and electric motors.

#### **Unbalance in power supply voltage**

In a three phase system the excessive unbalance between the phases is the cause of the overheating of the engine. The maximum allowed voltage unbalance is 3%, calculated as follows:

$$\% \text{ Phase unbalance} = \frac{V_{\max} - V_{\text{average}}}{V_{\text{average}}} * 100$$

#### **Unbalance between phases in the power supply**

**Do not operate the electric motors when the unbalance voltage between the phases is greater than 3%.**

**Use the following formula for the control:**

$$\% \text{ Phase unbalance} = \frac{\text{Max deviation from the average voltage}}{\text{Average voltage}} * 100$$

#### **Important**

**If the grid voltage has an imbalance greater than 3%, contact the company for distribution of electricity. Operating the unit with a bias voltage between phases over 3% is inhibited or lose the warranty.**

#### **Electrical resistances power supply**

Each compressor comes with an electrical resistance located in the compressor's lower area. Its purpose is to warm the lubricating oil and thus avoid the transmigration of refrigerant fluid within.

It is therefore necessary to ensure that the resistances are powered at least 24 hours before the planned startup time.

To ensure that they are activated, it is sufficient to keep the unit on by closing the general disconnecting switch Q10.

The microprocessor, however, has a series of sensors that prevent the compressor being started up when the oil temperature is not at least 5°C above the intake-pressure equivalent saturation temperature.

Keep the Q0, Q1, Q2 and Q12 switches in the Off (or 0) position until the unit is to be started up.



## Pre-startup checks

### 5.3 Startup preliminary procedures

#### Initial controls

Before starting the unit, even only momentarily, all the unitry supplied by the chilled water, like the air handling units, pumps, etc. have to be checked. The pump auxiliary contacts and the flow switch have to be connected to the control panel as indicated in the electrical diagram. Before carrying out interventions on the valve regulations, loosen the relevant valve gland. Open the discharge valve of the compressor. Open the liquid shutoff valve placed on the liquid line. Measure the suction pressure. If it is lower than 0.42 MPa jumper and strain the solenoid valve on the liquid line. Bring the suction pressure to 0.45 MPa, then remove the jumper. Charge all the water circuit progressively. Starts up the water pump of the evaporator with the calibration valve shut and then slowly open it.

Discharge the air from the high points of the water circuit and check the direction of the water flow. Carry out calibration of the flow by using a measurer (if present or available) or by means of a combination of the readings of the manometers and the thermometers. In the starting phase calibrate the valve on the pressure difference read on the manometers, carry out drainage of the tubes and then carry out fine calibration on the temperature difference between the water in and the water out. The regulation is calibrated in the factory for water in to the evaporator at 12°C and water out at 7°C. With the general switch open, check that the electrical connections are tightly clamped. Check for any possible refrigerant leaks. Check that the electrical data on the label correspond to those of the mains supply. Check that the thermal charge available is appropriate for starting.

#### Refrigerant seals control

Trane units are sent with the complete charge of refrigerant and are at a sufficient pressure to check the seal after installing. If the system were not under pressure, blow refrigerants (vapour) into it until pressure is reached and look for leakage.


After having eliminated the leakage, the system has to be dehydrated with a vacuum pump up to at least 1mm Hg - absolute pressure (1 Torr o 133.3 Pa). This is the minimum recommended value to dehydrate the plant.

Do not use the compressor to vacuum the system.

#### Refrigerant charge check

Trane units are supplied with a complete charge of refrigerant. If bubbles can be seen through the sight glass with the compressor running with a full charge and steadily, it means that the refrigerant charge is insufficient.

While refrigerant is being added do not exclude any control system and let the water circulate in the evaporator to avoid the formation of ice.

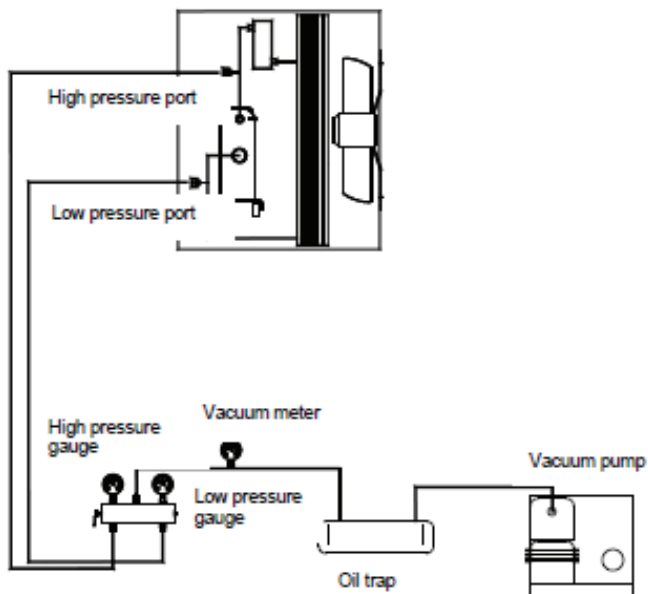



## Pre-startup checks

### 5.4 Check list – mandatory operation control before start up

<b>DATE</b>		<b>N.</b>	
<b>UNIT</b>			

<b>CUSTOMER:</b>	SITE: ADDRESS: POSTCODE: COUNTRY:
------------------	--

#### GENERAL

		COMPLIANCE	
		YES	NO
1	THE HYDRAULIC CIRCUIT IS COMPLETE AND READY TO BE USED AND THE THERMAL LOAD IS AVAILABLE.  PLEASE NOTE THAT <b>THE FIRST START-UP SHALL NOT BE CARRIED OUT UNLESS THE PLANT IS READY AND THE WATER LOAD IS AVAILABLE.</b>		
2	THE UNIT DISPLAYS DENTS OR DAMAGES ON THE EXTERNAL CASING OCCURRED DURING THE TRANSPORTATION OR POSITIONING.  IF ANY, SPECIFY BELOW:  <b>WARNING:</b> PLEASE BE AWARE THAT RELEVANT DAMAGES CAUSED BY THE QUOTED CIRCUMSTANCES MAY RESULT IN THE CALL-OFF OF THE WARRANTY.		
3	THE UNIT HAS BEEN INSTALLED IN ACCORDANCE WITH THE MINIMUM DISTANCE PROVIDED IN THE DIMENSIONAL DRAWING AND TECHNICAL DOCUMENTATION PROVIDED.		
4	THE UNIT IS INSTALLED NEXT TO THE: PHOTOVOLTAIC SYSTEM, ELECTRONIC TRANSMITTERS, ANTENNAS OR SIMILAR DEVICES.		
5	THE UNIT IS POSITIONED ON A PERFECTLY FLAT (NOT INCLINED) SURFACE.		
6	ANTI-VIBRATIONS DAMPERS HAVE BEEN INSTALLED BETWEEN THE UNIT AND THE FLOOR.		
7	THE UNIT DISPLAYS DEFECTS OR DAMAGES RESULTING FROM MODIFICATIONS OR CHANGES (UNIT TAMPERING / UNAUTHORIZED MODIFICATIONS TO THE REFRIGERANT CIRCUIT OR THE HYDRAULIC CIRCUIT OR THE ELECTRICAL PANEL OR CHANGES TO THE UNIT OPERATING PARAMETERS) MADE BY A THIRD PERSON WITHOUT A WRITTEN AUTHORIZATION ISSUED BY TRANE. THE UNIT SHALL BE CONFORM TO TRANE WIRING DIAGRAMS AND TECHNICAL DOCUMENTATION) IN CASE OF RELEVANT DIFFERENCE BETWEEN THE UNIT AND TRANE STANDARD CONFIGURATION PLEASE CONTACT TRANE.  <b>WARNING:</b> PLEASE BE AWARE THAT RELEVANT DAMAGES CAUSED BY THE QUOTED CIRCUMSTANCES MAY RESULT IN THE CALL-OFF OF THE WARRANTY.		
8	THE UNIT HAS BEEN INSTALLED VERY CLOSE TO <b>A MARINE ENVIRONMENT</b> OR AN <b>AGGRESSIVE INSTALLATION ENVIRONMENT</b> (HIGHLY CORROSIVE CHEMICAL AGENT).  <b>WARNING:</b> PLEASE BE AWARE THAT RELEVANT DAMAGES CAUSED BY THE QUOTED CIRCUMSTANCES MAY RESULT IN THE CALL-OFF OF THE WARRANTY.		
9	SPOTTED PRESENCE OF MOLD, MUSHROOMS, BACTERIA, MICROBIAL OF ANY TYPE.		
10	THE UNIT DISPLAYS DAMAGES CAUSED BY: FLOODS, LIGHTNING, FIRE, ANY ACCIDENT BEYOND TRANE'S CONTROL.		

## Pre-startup checks

### ELECTRIC AND ELECTRONIC

11	THE UNIT IS ELECTRICALLY POWERED AND ALL THE RELEVANT ELECTRICAL WIRES ARE PROPERLY CONNECTED.		
12	ELECTRICAL SUPPLY HAS BEEN INSTALLED IN ACCORDANCE WITH THE INSTRUCTIONS PROVIDED IN THE NAME PLATE AND IN THE TECHNICAL DOCUMENTATION. (ELECTRICAL POWER SUPPLY: 230V/400V +/- 10% - MAXIMUM "% OF PHASE IMBALANCE: +/- 3%). IT IS RECOMMENDABLE TO CHECK BY USING A TESTER THE VOLTAGE VALUE (BETWEEN PHASES)		
13	PHASES ARE CONNECTED IN THE PROPER SEQUENCE.		
14	ELECTRICAL CABLES SIZE ARE CONFORM TO FLA MAX VALUE.		
15	BOTH EXTERNAL AND INTERNAL ELECTRICAL WIRES ARE WELL TIGHTENED.		
16	THE COMPRESSOR CRANCKCASE HEATERS HAVE BEEN POWERED AND HEATED AT LEAST 8 HOURS BEFORE THE START-UP.		
17	AN ELECTRONIC SUPERVISOR (OR ANY ADDITIONAL CONTROLLER) HAS BEEN INSTALLED.		
18	THE CONNECTION WIRES ARE SHIELDED.		
19	REMOTE CONTROL DEVICES OR INTERFACES ARE CONNECTED TO THE ELECTRICAL PANEL IN CONFORMITY WITH TRANE WIRING DIAGRAMS.		
20	ELECTRIC DEVICES ARE INTACT AND DON'T DISPLAY ANY DAMAGE.		
21	ELECTRONIC DEVICES ARE INTACT AND DON'T DISPLAY ANY DAMAGE.		
22	WATER PUMPS ARE ELECTRICALLY CONNECTED TO THE ELECTRICAL PANEL IN ACCORDANCE WITH THE WIRING DIAGRAMS PROVIDED BY TRANE.		
23	THE ELECTRICAL ABSORBTION AND THE WATER PUMPS OVERHEATING ARE STANDARD.		

### REFRIGERANT CIRCUIT

24	ALL CONNECTIONS ON THE REFRIGERANT CIRCUITS ARE WELL TIGHTENED.		
25	THE ELECTRONIC LEAKAGE DETECTOR OR THE PRESSURE GAUGE LEVEL INSTALLED ON THE REFRIGERANT CIRCUIT HAVE DETECTED ANY LEAKAGE.  IF ANY, SPECIFY BELOW:		
26	THE COMPRESSOR OIL INDICATOR LIGHT POINTS THE MAXIMUM LEVEL.		
27	THE FILTER INDICATOR LIGHT ON THE LIQUID LINE IS GREEN.  <b>WARNING:</b> THE YELLOW INDICATOR LIGHT INDICATES PRESENCE OF MOISTURE IN THE CIRCUIT. IN THIS CASE PLEASE CONTACT TRANE.		

## Pre-startup checks

### WATER CIRCUIT

28	<p>THE FILTER IS INSTALLED ON BOTH HEAT EXCHANGERS INLET PIPES, AT A MAXIMUM DISTANCE OF 2 METERS FROM THE UNIT.</p>		
	<p>PLEASE NOTE THAT THE FILTER INSTALLATION IS <b>MANDATORY</b>. FOR FURTHER TECHNICAL INFORMATION RELATING THE FILTER PLEASE REFER TO THE TECHNICAL DOCUMENTATIONS.</p>		
29	<p>THE FLOW SWITCH HAS BEEN INSTALLED AND ELECTRICALLY CONNECTED. PLEASE NOTE THAT FLOW SWITCH INSTALLATION IS <b>MANDATORY</b>.</p>		
30	<p>THE VALVES ON THE WATER PLANT MUST BE OPENED. PLEASE BE AWARE THAT IF THE MACHINE IS POWERED (OR IN STAND-BY MODE) PUMPS WILL START IF THE WATER TEMPERATURE IS EQUAL OR BELOW 4°C. CLOSING THE VALVES MAY THEREFORE CAUSE SEVERE DAMAGES.</p>		
31	<p>DRAINAGE VALVES ARE INSTALLED. THE DRAINAGE VALVES ARE INSTALLED ON THE LOWEST POINT. THE UTILIZATION OF AUTOMATIC DRAINAGE VALVES IS RECOMMENDED.</p>		
32	<p>AUTOMATIC OR MANUAL PURGE VALVES ARE INSTALLED.</p>		
	<p>AUTOMATIC OR MANUAL PURGE VALVES ARE INSTALLED ON THE HIGHEST POINT.</p>		
33	<p>THE HYDRAULIC CIRCUIT HAS BEEN FILLED AND PURGED.</p> <p>THE PLANT SHALL BE PURGED SEVERAL TIMES BEFORE STARTING UP THE UNIT. THE FILTER INSTALLED NEXT TO THE HEAT EXCHANGER SHALL BE CLEANED SEVERAL TIMES BEFORE STARTING UP THE UNIT, UNTIL THE CORRECT DELTA T IS ASSURED AND THE HYDRAULIC PRESSURE IS CONFORM TO THE PLANT AND TO THE WATER PRESSURE DROPS. FOR FURTHER TECHNICAL INFORMATIONS PLEASE REFER TO TRANE DOCUMENTATIONS AND PROCEDURE FOR THE FIRST START UP.</p>		
34	<p>HYDRAULIC CONNECTIONS TO THE UNIT ARE COMPLIANT WITH THE UNIT NAME PLATE AND DIMENSIONAL DRAWINGS (HOT WATER INLET, HOT WATER OUTLET, COLD WATER INLET, COLD WATER OUTLET, EXT.).</p>		
35	<p>RUBBER JOINTS ARE INSTALLED ON THE HYDRAULIC CONNECTIONS, IN ORDER TO MINIMIZE VIBRATIONS BETWEEN THE UNIT AND WATER PIPES.</p>		
36	<p>SHUTOFF VALVES ARE INSTALLED ON THE HYDRAULIC CIRCUIT.</p>		
37	<p>THE EXPANSION TANK IS INSTALLED ON THE HYDRAULIC CIRCUIT. EXPANSION TANK CAPACITY CONCURS WITH THE WATER PLANT CAPACITY.</p>		
38	<p>TEMPERATURE PROBES AND PRESSURE GAUGES ARE INSTALLED ON THE HYDRAULIC CIRCUIT, BOTH INLET AND OUTLET SIDE.</p>		
39	<p>THE HYDRAULIC CIRCUIT IS FREE FROM OBSTRUCTION OR ANY KIND OF CONSTRAINT.</p>		
40	<p>BUFFER TANKS ARE INSTALLED IN THE HYDRAULIC CIRCUIT. THE BUFFER TANKS INSTALLATION IS STRONGLY RECOMMENDED IN ORDER TO GUARANTEE THE OPTIMAL UNIT OPERATION.</p> <p>SPECIFY HOT BUFFER TANK CAPACITY:                   LT</p> <p>SPECIFY COLD BUFFER TANK CAPACITY:               LT</p>		
41	<p>THE PRESSURE RELIEF VALVE IS INSTALLED BETWEEN DELIVERY AND RETURN PIPES.</p> <p><b>WARNING:</b> IN ORDER TO AVOID <u>WATER-HAMMER</u>, THE RELIEF VALVE PRESSURE SHALL BE SET UP IN ACCORDANCE WITH THE STANDARD OPERATING PRESSURE OF THE WATER CIRCUIT.</p>		



## Pre-startup checks

42	<p>THE AUXILIARY HEATING SYSTEM IS INSTALLED IN THE WATER CIRCUIT IN ORDER TO AVOID THE START-UP OF THE UNIT WITH WATER TEMPERATURE BELOW 18°C. BEFORE STARTING UP THE UNIT THE INLET WATER TEMPERATURE MUST BE EQUAL OR HIGHER THAN 18°C.</p> <p><b>WARNING:</b> THE UNIT SHALL NEVER WORK (NOT EVEN FOR SHORT PERIODS) WITH AN INLET WATER TEMPERATURE LOWER THAN 18°C.</p>	
43	<p>ANTIFREEZE PROTECTIONS ARE INSTALLED IN THE WATER CIRCUIT (ELECTRICAL HEATERS ARE INSTALLED ON WATER PIPES AND TANKS).</p> <p>FOR FURTHER TECHNICAL INFORMATION PLEASE REFER TO TECHNICAL DOCUMENTATION PROVIDED. PLEASE NOTE THAT ANTIFREEZE PROTECTIONS ARE <b>MANDATORY</b> FOR OUTDOOR AIR TEMPERATURE LOWER THAN 3°C.</p>	
44	<p>THE WATER CIRCUIT IS FILLED WITH ETHYLENE GLYCOL. ETHYLENE GLYCOL "%" SHALL CONFORM WITH THE DATA PROVIDED IN THE TECHNICAL DOCUMENTATION.</p>	
45	<p>ALL WATER PIPES ARE GROUND CONNECTED (IN ORDER TO AVOID ABNORMAL VOLTAGES THAT CAN CAUSE DANGEROUS CORROSIONS).</p>	
46	<p>THE EVAPORATOR WATER FLOW IS COMPLIANT TO THE TECHNICAL DOCUMENTATION PROVIDED BY TRANE.</p>	
47	<p>THE WATER PUMPS ARE CORRECTLY SET UP IN ACCORDANCE WITH THE PLANT WATER FLOW, AVAILABLE HEAD PRESSURE AND PRESSURE DROP.</p>	
48	<p>THE PUMP IMPELLERS ARE MECHANICALLY UNBLOCKED AND UNCLOGGED (FREE FROM ANY KIND OF CONSTRAINTS.)</p>	

<b>DATE:</b>	<b>AUTHORIZED SERVICE:</b> <b>NAME AND SIGNATURE</b>	<b>CUSTOMER:</b> <b>NAME AND SIGNATURE</b>
--------------	---	---

## Pre-startup checks

### 5.5 Refrigerant replacement procedure

1. If the unit has exhausted the refrigerant, it is necessary first of all to establish the causes, before carrying out any replenishment operation. The leak must be looked for and repaired. Oil stains are a good indicator, as they can appear in the vicinity of a leak. However, this is not necessarily always a good search criterion. Searching with soap and water can be a good method for medium to large leaks, while an electronic leak searching device is required to find the position of small leaks.
2. Add refrigerant to the system through the service valve located on the intake pipe or through the Schrader valve located on the evaporator entry pipe.
3. The refrigerant can be added under any load condition between 25 and 100% of the circuit. Intake overheating must be between 4 and 6°C.
4. Add enough refrigerant to fill the liquid pilot lamp entirely, until the passage of bubbles inside stops. Add an extra 2 ÷ 3 kg of refrigerant as a reserve, to fill the undercooler if the compressor is operating at 50 – 100% load.
5. Check the undercooling value by taking the liquid pressure and the liquid's temperature near the expansion valve. The undercooling value must be between 4 and 8 °C and between 10 and 15°C units with an economiser. The undercooling value will be lower 75 to 100% of the load and above 50% of the load.
6. With ambient temperature above 16°C, all fans should be on.
7. A system overcharge will entail a rise in the compressor's discharge pressure, owing to excessive filling of the condenser section pipes.


#### Refrigerant charge

*Charge with unit stopped and in vacuum (refrigerant charge in the liquid phase)*

Completely open the valve for it to close the service connection. Connect the refrigerant cylinder to the service connection without tightening the connection. Half close the liquid shut off valve. If the circuit has been dehydrated and vacuum, load liquid with the cylinder upside down. Weigh and charge the appropriate amount. Open the valve completely. Start the unit and let it run at full load for several minutes. Check that the indicator is clear and without bubbles. Be sure that the transparency condition without bubbles is due to the liquid and not to the vapor. For correct unit operation overheating must be at 4 to 7 ° C and subcooling at 4 - 8 ° C. Too high values of overheating can be caused by a lack of refrigerant, while high values of subcooling may indicate excess charge.

After changing the charge, you should check that the unit works within the declared values: in full load operation , by measuring the temperature of the intake pipe downstream of the bulb of the thermostatic valve; read the equilibrium pressure on the evaporator on the low pressure gauge and the corresponding saturation temperature.

Overheating is equal to the difference between the measured temperatures. Measure then the temperature of the pipe of liquid leaving the condenser and detect on the high-pressure gauge the equilibrium pressure on the condenser and the corresponding saturation temperature. Subcooling is the difference between these temperatures. Charge is in the liquid phase.

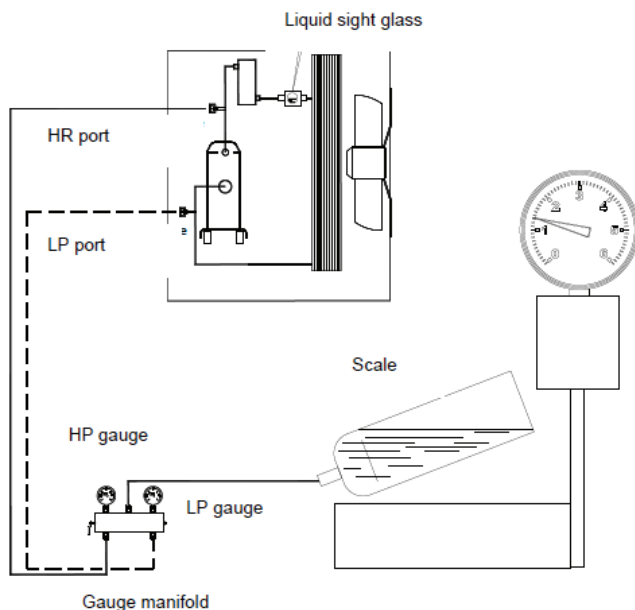

## Pre-startup checks


*Refrigerant charge addition with the unit running (refrigerant charge in the vapour phase)*

Caution: Charge only vapor. Do not charge liquid because it may damage the compressor.

Connect the cylinder to the service connection without tightening the connection. Drain the connecting pipe and tighten the connection. Charge each circuit until the indicator shows liquid without bubbles. The unit now has an adequate charge. Be careful not to overload the circuit. Loading more than necessary leads to higher outlet pressure, higher power consumption and possible damage to the compressor.

Charge is in the vapor phase.

Liquid sight glass

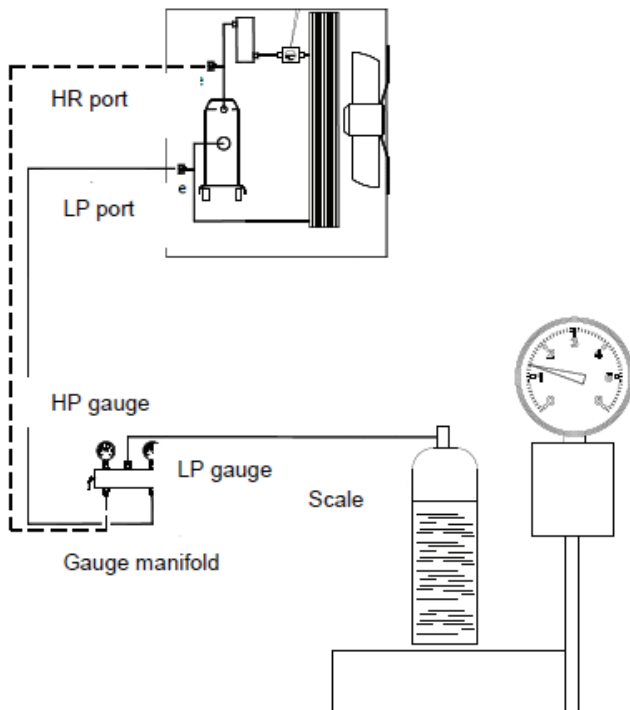

### IMPORTANT!

The symptoms of a low refrigerant charge are:

- Low evaporation pressure.
- High superheat the intake and exhaust (outside the above limits).
- Low value of subcooling.

In this case, add refrigerant R410A in the corresponding circuit. The system is planned charging port between the expansion valve and the evaporator. Charge refrigerant until conditions return to work normal.

Remember to replace the cap closing the valve at the end.

### IMPORTANT!

If the unit has not been provided with integrated pump on board, do not turn off the external pump before You do not 3 minutes have elapsed after turning off the last compressor. The early shutdown of the pump causes a water flow alarm failure.

## Pre-startup checks

### 5.6 Refrigerant loading

#### **WARNING!**

The units are designed to work with R410A refrigerant. DO NOT USE therefore different refrigerants from 'R410A'.

#### **WARNING!**

The addition or removal of refrigerant gas must be done in accordance with the laws and regulations in force.

#### **WARNING!**

When you add or remove the refrigerant from the system, ensure the proper flow of water through the evaporator for the entire period of charge / discharge. The interruption of the flow of water during this procedure would result in the freezing of the evaporator resulting in rupture of its internal pipes.

Damage due to freezing will void the warranty.

#### **WARNING!**

The removal of refrigerant and charging the coil should be made by qualified technicians in the use of material appropriate for the unit. Improper maintenance can lead to uncontrolled pressure loss and fluid. Also does not disperse the refrigerant and the lubricating oil in the environment. Always wear a special system of recovery.

Units are shipped with the total refrigerant charge, but there might be cases where it is necessary recharge the vehicle on the ground.

#### **WARNING!**

Always check the causes that have led to a loss of refrigerant. If necessary, repair the system and then proceed to its charging.

The charging of the unit can be made in any load condition stable (preferably between 70 and 100%) and in every condition of temperature (preferably higher than 20°C). The unit should be maintained turned on for at least 5 minutes to allow the stabilization of the steps of the fans, and then the pressure of condensation.

The units have about 15% of the condensing coils dedicated to the subcooled liquid refrigerant. the value of subcooling is equal to about 5-6°C (10-15°C for units economized).

Once the section subcooling has been completely filled. a further quantity of refrigerant is not increases the efficiency of the system. However a small amount of additional refrigerant (1 ÷ 2 kg) makes the system less sensitive.

Note: By varying the load and the number of active fans, subcooling varied and requires some time to restabilize. However it should never drop below 3°C in all conditions. Furthermore, the value of subcooling may change slightly with changes in temperature of the water and the superheat of suction.

One of the following two scenarios may occur in a unit discharge of refrigerant:

1. If the unit is slightly discharge of refrigerant through the sight glass you can see the passage of bubbles. The circuit as described in the charging process.
2. If the unit is moderately gas discharge, the corresponding circuit could have stops low pressure. Prime the circuit as described in the corresponding charge. 6.1 Start up

Before starting the appliance it is very important verify that you have correctly performed all the operations described in the section "PREPARATION OF STARTING."

Also check that all mechanical and electrical equipment are tightened properly. WARNING particular should be paid to the fundamental components (compressor, heat exchangers, fans, electric motors, pumps, terminal blocks) are detected in the case fixing screws loose, proceed to their tightness before first start up.

The oil heaters should be placed at least 8 hours before starting. Make sure that the compressor crankcase is warm. Check that all valves in the refrigerant circuit are open. Check all equipment connected to the unit.

# Start up

## 6.1 Start up

Start the unit by pressing the ON / OFF button. From the moment you give the request for unit start up, the moment at which you start the (first) compressor, will spend a fixed time. After switching off at the next start of the same compressor will spend a configured time set by the unit controller.

Check the direction of rotation of the fans and compressors. If wrong, reverse two phases of power. Make sure that all safety devices are working properly and control. Check the temperature of the water leaving the evaporator and adjust the settings of control. Check the oil level.

## 6.2 Start up of the plant per unit

During the operation of the system, in order to preserve each component of the unit and to optimize the use of the same, you need to get heat into the circuit before giving cooling energy to utilities.

To this end, it must operate in the following way:

- start the unit;
- wait until the temperature of the inlet water to the unit is that of regime;
- start utilities.

Follow the above procedure at each stop of the plant, of such duration as to raise the temperature of the water contained in it.

## 6.3 Start up procedure

Unit start up (only authorized person)

1. With the switch closed, open the electrical panel and exclude compressor (refer to the wiring diagram on the unit). Close the panel, set switch to "ON" (to give power to the unit).
2. Wait for the start of the microprocessor and control. Make sure that the temperature of the oil is hot enough. The oil temperature must be at least 5°C higher than the saturation temperature of the refrigerant inside the compressor.
3. Place the unit in the "ON" and wait until the unit is indicated on the display-On.
4. Turn the pumps (if with inverter) at max speed.
5. Verify that the loss of load of the evaporator is equal to that of the project and correct if necessary. The loss must be recorded attacks on the charge placed on the evaporator piping and supplied as standard. Do not measure the load losses in points where they are interposed any valves and / or filters.
6. Check for air in cleaning Filters, and then draining the system.
7. Return the pump to the factory setting.
8. Turn off the power (into standby mode) and make sure the pumps stop after about 2 minutes.
9. Verify that the local temperature setpoint is set to the required value by pressing the Set button.
10. Turn the main switch to "OFF". Open the cabinet. Reactivate the compressors. Close the cabinet. Turn the main switch to "ON" (to give power to the unit).
11. Wait for the start of the microprocessor and control. Just put in "ON" circuit # 1
12. When the compressor is started, wait about 1 minute for the system begins to stabilize.
13. Check the pressure of evaporation and condensation of refrigerant.
14. Check the fans start depending on the condensing pressure increase in chiller mode, on the evaporation pressure decrease in Recovery mode. In Chiller + Recovery mode fans are stopped.
15. Verify that, after a period of time necessary for the stabilization of the refrigerant circuit, the liquid indicator placed on the inlet pipe to the expansion valve is completely filled (no bubbles), and that the moisture indicator signs 'Dry'. The passage of bubbles within the liquid indicator, it may indicate a low amount of refrigerant, or an excessive pressure drop through the filter drier, or an expansion valve blocked at the maximum opening position.
16. In addition to checking the sight glass, check the operating parameters of the circuit controlling:
  - a. Overheating compressor suction
  - b. Overheating compressor discharge
  - c. Subcooling of the liquid exiting the condenser coils
  - d. Evaporation pressure
  - e. Condensing pressure



## Start up

Measure the values of pressure and temperature instrumentation suitable vehicle with various pti indicated and make comparison by reading the corresponding values directly on the display of the microprocessor on board.

17. Repeat steps 11 to 16 for the second circuit.

18. To temporarily turn off the unit (turn off daily or weekend) put on standby the unit key, or open the remote contact (terminals shown in the wiring diagram provided with the unit) of the terminal X (Installing a remote switch by the customer ), or set time zones. The microprocessor will activate the shutdown procedure that will take a few seconds. Two minutes after switching off the compressor will turn off the microprocessor / pump and / e. Do not remove the main power to not turn off the electrical resistances of the compressor and the evaporator.

Typical operating conditions when compressors are in full operation.

<b>ECONOMIZED CYCLE</b>	<b>SUCTION SUPERHEATING</b>	<b>DISCHARGE SUPERHEATING</b>	<b>LIQUID SUBCOOLING</b>
NO	5 - 7°C	20-25°C	5-6°C
YES	5 - 7°C	18-23°C	15-20°C



# System maintenance

## **WARNING!**

All activities of ordinary and extraordinary maintenance on the unit must be carried out by qualified and trained personnel.

## **WARNING!**

The causes of repeated shutdowns due to the intervention of the safety devices must be investigated and corrected. The simple reset of alarm occurrences can lead to serious damage to the unit.

## **WARNING!**

A proper charge of refrigerant and oil is essential for an optimal functioning of the unit and for the protection of the environment.

The recovery of oil and any refrigerant discharged from the unit must be carried out in accordance with current regulations.

## **7.1 General**

### **IMPORTANT!**

Beyond the cadences of checks recommended in the following, in order to keep the unit at optimum levels of performance and efficiency and prevent incipient failures, we recommend periodic visits of inspection and control of the unit by qualified personnel.

In particular, we recommend:

4 annual visits to units that operate about 365 days / year (quarterly)

2 visits per year for units with seasonal operation about 180 days / year (one start seasonal and a mid-season)

1 annual visit for units with seasonal operation of about 90 days / year (starting seasonal)

It's important that during the initial start-up and periodically during operation, carry out the checks and routine checks. Among them we must also check the suction and condensation as well as the sight glass located on the liquid line. Check through the microprocessor installed on the unit, the unit is working within normal parameters of superheating and subcooling. A routine maintenance program recommended is shown at the end of this chapter while a card collection of operating data is at the end of this manual. It is suggested to record on a weekly basis all the operating parameters of the unit. The collection of these data will be very useful to technicians, in case it is requested technical assistance.

### **Compressor Maintenance**

#### **IMPORTANT!**

This inspection must be performed by qualified and trained personnel.

The analysis of vibration is a great tool for checking the mechanical conditions of the compressor.

It is recommended to check the value of the vibration immediately after starting and periodically on an annual basis.

#### **Compressor Electrical Connections**

It is very important that all the compressors are wired correctly for proper rotation. These compressors will not tolerate reverse rotation. Verify correct rotation/phasing using a rotation meter.

If wired incorrectly the compressor will make excessive noise, will not pump and will draw about half the normal current. It will also become very hot if allowed to run for an extended period.

**NOTICE: Do not "bump" the compressor to check rotation as incorrect rotation could cause compressor motor failure in as little as 4 to 5 seconds!**

Improper rotation of the compressors is indicated by a compressor module trip, noisy operation, no pressure difference on manifold gauges and low amp draw.

#### **Tandem and Triple Compressor Suction Restrictors**

Since most tandem and triple compressor sets use unequal size compressors, these combinations require the use of a restrictor in the suction line of one or more compressors in order to provide correct oil level balance between compressors when they are operating.

## System maintenance

### Compressor Replacement

If the chiller suffers a failed compressor, use these steps for replacement:

Each compressor has lifting eyes. Both lifting eyes must be used to lift the failed compressor.

After a mechanical failure of a compressor, it is necessary to change the oil in the remaining compressor and also replace the liquid line filter drier. After an electrical failure of a compressor, it will also be necessary to change the oil in the remaining compressor, replace the filters driers and add a suction filter drier with clean-up cores.

Make sure that a heater is correctly installed on the compressor. The heater helps prevent dry starts.

**Note: Do not alter the refrigerant piping in any way as this can affect compressor lubrication.**

### Refrigerant System Open Time

The chillers use POE oil and therefore refrigerant system open time must be kept to a minimum. The following procedure is recommended:

Leave a new compressor sealed until it is ready to be installed in the unit. Maximum system open time is dependent upon ambient conditions, but do not exceed one hour open time.

Plug the open refrigerant line to minimize moisture absorption. Always change the liquid line filter drier. Do not leave POE oil containers open to the atmosphere. Always keep them sealed.

### Electrical Compressor Failure

Replace the failed compressor and change the oil in the other compressor(s). Also add a suction filter with cleanup cores and change the liquid line filter drier. Change filters and oil until the oil no longer test acidic.

## 7.2 Maintenance

The maintenance operations are essential to maintain the efficiency of the refrigeration unit, both from a purely functional and energy consumption. Each unit is equipped with a booklet on the unit, which will be provided by the user, or the person who is authorized on his behalf to the maintenance of the unit, return all records required in order to keep a historical record of the operation of the unit. The lack of records in the booklet will serve as evidence of poor maintenance.

### 7.3 Sight check of the liquid receivers

The risks due to the pressure inside the circuit have been eliminated or (when it is not possible) reduced by means of safety devices. It is important to check periodically the status of these devices and to carry out the components inspections and repositioning as follows.

Check the liquid receivers state at least once a year.

It is important to check that the surface does not get rusty and that neither corrosion nor deformations are visible.

In case the superficial oxidation and the corrosion are not properly controlled and stopped in time, cause a thickness reduction with a consequent reduction of the receivers mechanical resistance.

Use antioxidant paint or products to protect.



## System maintenance

### 7.4 Standard controls

Operations description	Recommended basis
Compressors oil level check	monthly
Inlet temperature check (overheating)	monthly
Water circuits filling check	monthly
Fans and compressors motors electrical input check	monthly
Power supply and auxiliary power voltage check	monthly
Refrigerant charge check through sight glass	monthly
Compressors carter heaters operation check	monthly
Tightening all electrical connections	monthly
Coils cleanliness	monthly
Compressors and liquid circuit solenoid valve check	semiannual
Adjusting and safety thermostat calibration check	Quarterly
Fans (if present) and compressors contactors state check	Quarterly
Evaporator heater operation check	Quarterly
Motor and fan (if present) bearing noise check	semiannual
Pressure vessels conditions check	yearly

#### Temperature and pressure probes

The unit comes factory-equipped with all the sensors listed below. Periodically check that their measurements are correct by means of sample instruments (manometers, thermometers); correct readings if necessary using the microprocessor keyboard. Well-calibrated sensors ensure better efficiency for the unit and a longer lifetime.

Note: refer to the microprocessor use and maintenance manual for a complete description of applications, setting and adjustments.

All sensors are preassembled and connected to the microprocessor. The descriptions of each sensor are listed below:

**Outgoing water temperature sensor** – This sensor is located on the evaporator outgoing water connection and is used for antifreeze protection.

**Ingoing water temperature sensor** – This sensor is located on the evaporator ingoing water connection and is used for monitoring the return water temperature. It is used by the microprocessor to control the unit load according to the system thermal load.

**External air temperature sensor** – This sensor allows to monitor the external air temperature on the microprocessor display.

**High pressure transducer** – This is installed on every circuit and allows to monitor the delivery pressure and to control the ventilators. Should a increase in condensation pressure arise, the microprocessor will control the circuit load in order to allow it to function even if choked. It contributes to complementing the oil control logic.

**Low-pressure transducer** – This is installed on every circuit and allow to monitor the compressor suction pressure along with low pressure alarms. It contributes to complementing the oil control logic.

**Intake sensor** – This is installed optionally (if the electronic expansion valve has been requested) on each circuit, and allows to monitor the intake temperature. The microprocessor manages the electronic expansion valve control by means of this sensor.

**Compressor discharge temperature sensor** – This is installed on each circuit and allows to monitor compressor discharge temperature and oil temperature. The microprocessor shuts down the compressor in case of alarm in the event that the discharge temperature reaches 120°C.

## System maintenance

### 7.5 Unit test sheet

It is advisable to periodically detect the following operating data to verify the correct functionality of the unit in time. These data will also be of great benefit to the technicians who carry out maintenance.

#### Water side measurements

Chilled water setpoint °C \_\_\_\_\_  
Evaporator outgoing water temperature °C \_\_\_\_\_  
Evaporator ingoing water temperature °C \_\_\_\_\_  
Evaporator pressure drop kPa \_\_\_\_\_  
Evaporator water flow rate m<sup>3</sup>/h \_\_\_\_\_

#### Refrigerant side measurements

##### Circuit #1:

Compressor Load \_\_\_\_ %  
N°of active fans \_\_\_\_  
N°of expansion valve cycles (electronic only) \_\_\_\_  
Refrigerant/ Oils pressure  
    Evaporation pressure \_\_\_\_ Bar  
    Condensation pressure \_\_\_\_ Bar  
Oil pressure \_\_\_\_ Bar  
Refrigerant temperature Saturated evaporation temperature \_\_\_\_ °C  
Intake gas pressure \_\_\_\_ °C  
Intake overheating \_\_\_\_ °C  
Saturated condensation temperature \_\_\_\_ °C  
Delivery overheating \_\_\_\_ °C  
Liquid temperature \_\_\_\_ °C  
Undercooling \_\_\_\_ °C

##### Circuit #2

Compressor Load \_\_\_\_ %  
N°of active fans \_\_\_\_  
N°of expansion valve cycles (electronic only) \_\_\_\_  
Refrigerant/ Oils pressure  
    Evaporation pressure \_\_\_\_ Bar  
    Condensation pressure \_\_\_\_ Bar  
Oil pressure \_\_\_\_ Bar  
Refrigerant temperature Saturated evaporation temperature \_\_\_\_ °C  
Intake gas pressure \_\_\_\_ °C  
Intake overheating \_\_\_\_ °C  
Saturated condensation temperature \_\_\_\_ °C  
Delivery overheating \_\_\_\_ °C  
Liquid temperature \_\_\_\_ °C  
Undercooling \_\_\_\_ °C  
External air temperature \_\_\_\_ °C

## System maintenance

### Electrical measurements

#### Analysis of the unit's voltage unbalance:

Phases: **RS ST RT**  
 \_\_\_ V \_\_\_ V \_\_\_ V

Unbalanced  $\frac{V_{max} - V_{medio}}{V_{medio}} \times 100 = \text{___} \%$

Compressors current – Phases: R S T  
 Compressor #1 \_\_\_ A \_\_\_ A \_\_\_ A  
 Compressor #2 \_\_\_ A \_\_\_ A \_\_\_ A  
 Fans Current i: #1 \_\_\_ A #2 \_\_\_ A  
 #3 \_\_\_ A #4 \_\_\_ A  
 #5 \_\_\_ A #6 \_\_\_ A  
 #7 \_\_\_ A #8 \_\_\_ A

## 7.6 Recommended spare parts

Below is a list of the recommended parts for several years' running. Trane is at your disposal to recommend a personalised list of accessories according to the commissioned order, including the part number of the equipment

1 YEAR		2 YEARS		5 YEARS	
COMPONENTS	QUANTITY	COMPONENTS	QUANTITY	COMPONENTS	QUANTITY
Fuses	all	Fuses	all	Fuses	all
Drier filters	all	Drier filters	all	Drier filters	all
Solenoid valves	1 per type	Solenoid valves	all	Solenoid valves	all
Thermostatic or electronic valves	1 per type	Thermostatic or electronic valves	all	Thermostatic or electronic valves	all
Pressure switches	1 per type	Pressure switches	all	Pressure switches	all
Gas gauge	1 per type	Gas gauge	all	Gas gauge	all
Contactors and relays	1 per type	Contactors and relays	all	Contactors and relays	all
Thermal protectors	1 per type	Thermal protectors	all	Thermal protectors	all
Crankcase heaters	1 per type	Crankcase heaters	all	Crankcase heaters	all
Reversing valves	1 per type	Reversing valves	1 per type	Reversing valves	all
Check valves	1 per type	Check valves	1 per type	Check valves	all
Safety valves	1 per type	Safety valves	1 per type	Safety valves	all
Sight glasses	1 per type	Sight glasses	1 per type	Sight glasses	all
Fans	1 per type	Fans and motors	1 per type	Fans and motors	all
		Electronic components	all	Electronic components	all
		Compressors	1 per type	Compressors	all
				Heat exchangers	1 per type

## 7.7 Improper use

The unit is projected and built up to grant the maximum safety in its proximity, as well as to resist to the aggressive environmental conditions. The fans are protected by grilles.

Residual risks are indicated with warning labels.

### SAFETY SYMBOLS



**DANGER:**  
General danger



**DANGER:**  
Temperature



**DANGER:**  
Handling parts



**DANGER:**  
Cut off voltage

## System maintenance

### 7.8 Ordinary maintenance

#### Programmed maintenance

Activities list	week	Month (1)	Year (2)
<b>General:</b>			
Data collection operation (3)	X		
Visually inspect the unit for any damage and / or looseness		X	
Verifying the integrity of the thermal insulation			X
Clean and paint where needed			X
Water Analysis (6)			X
<b>Electric:</b>			
Check the correct operation of the equipment on the unit			X
Check the wear of contactors - Replace if necessary			X
Check tightness of all electrical terminals - Tighten if necessary			X
Clean the inside of the electrical panel			X
Visual inspection of the components for signs of overheating		X	
Check the operation of the compressor and the electric resistance		X	
Measurement using a Megger insulation of the compressor motor			X
<b>Refrigerant circuit:</b>			
Perform a test of refrigerant leaks		X	
Check through the sight glass coolant flow - Full Indicator	X		
Check the pressure drop of the filter drier		X	
Carry out the analysis of the vibrations of the compressor			X
Carry out the analysis of the acidity of the oil of the compressor (7)			X
<b>Condensing section:</b>			
Cleaning the condenser coils (4)			X
Check that the fans are tightened			X
Check the fins of coils – comb it if necessary			X

#### Notes:

- 1) The monthly activities include all those weekly.
- 2) The annual activity (or earlier in the season), include all activities weekly and monthly.
- 3) The values of the unit should be recorded each day for a high level of observation.
- 4) The coil cleaning may be required more frequently in areas with a high percentage of particles in the air.
- 6) Check for dissolved metals.

7) TAN (Total Acid Number):	≤ 0.10:	No action
	From 0.10 to 0.19:	Repositioning filters antacid and occurs after 1000 hours of operation. Continue to replace the filters until the TAN not falls below 0.10.
	> 12:19:	Changing the oil, oil filter and the filter drier, Refer to regular intervals.

## System maintenance

### 7.9 Dehydration filter repositioning

It is recommended the repositioning of filter cartridges Dryer in the case of high pressure drop across the filter same or in case with the value of the subcooling within the limits of acceptability, occurs the passage of bubbles through the sight glass.

It suggests the repositioning of the cartridges when the pressure drop across the filter reaches 50 kPa with the compressor at full load.

The cartridges must also be replaced when the humidity indicator inside the sight glass changes color and highlight excessive humidity, or the periodic oil analysis indicates the presence of acidity (TAN excessive).

#### Repositioning Procedure

##### WARNING!

Ensure proper water flow through the evaporator throughout the intervention period. The interruption of the flow water during this procedure would result in the freezing of the evaporator resulting in rupture of its internal pipes.

1. Switch off the compressor by turning the corresponding switch in the Off.
2. Wait until the compressor has stopped and close the valve located on the liquid line.
3. Start the compressor by turning the corresponding switch to On.
4. Verify on the display of the microprocessor, the evaporation pressure corresponding.
5. When the vapor pressure reaches 100 kPa rotate the switch again to switch off the compressor.
6. Once the compressor is stopped by putting a label on the switch for starting the compressor maintenance to prevent unwanted ignitions.
7. Close the suction valve of the compressor (if any).
8. With a recovery unit to remove the remaining refrigerant from the filter of the liquid, until the atmospheric pressure. The refrigerant must be stored in a suitable container and clean.

##### WARNING!

To protect the environment, do not release the refrigerant into the atmosphere removed. Always use a device recovery and storage.

9. Balance the internal pressure with the outside by pressing the vacuum valve installed on the filter cover.
10. Remove the cover from the filter drier.
11. Remove the filter elements.
12. Install the new filter elements within the filter.
13. Replace the cover gasket. Do not oil the filter gasket with mineral oil to non-contamination in the circuit. Use for this purpose only compatible oil (POE).
14. Close the filter cover.
15. Connect the vacuum pump to the filter and evacuate up to 230 Pa.
16. Close the valve on the vacuum pump.
17. Recharge the refrigerant recovered in the filter during its emptying.
18. Open the valve on the liquid line.
19. Open the suction valve (if any).
20. Start the compressor by turning the switch.

### 7.10 Disposal

The unit disposal must be performed by qualified personnel.

Pay attention not to disperse harmful liquid or gases.

Recover as much refrigerant gas as possible from the unit and any freezing solution in the water circuits.

At disposal, heat exchangers, finned coils, fans or motors may be recovered if working.

All non-recoverable materials are to be disposed of in accordance with current standards and regulatory requirements.



# Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol.

Type of refrigerant: R410A

GWP (1) 2088

(1) GWP = global warming potential

Refrigerant charge values are not binding. Refer to the quantity of refrigerant shown on the unit nameplate.

CMAC SE	Refrigerant charge (kg)	CMAC HE	Refrigerant charge (kg)
50	13	50	26
55	13	60	26
65	13	70	26
85	19	90	38
110	19	120	38
140	25	130	39
155	25	145	38
175	38	165	58
210	40	180	58
260	58	220	58
305	60	260	77
350	79	320	80
370	79	355	105
435	80	375	105
495	123	455	131
525	123	500	165
		535	165
		575	166
		600	166
		660	166
		710	211
		755	211
		800	211
		840	211
		880	211

Mandatory refrigerant leakage inspections apply to stationary equipment (refrigeration, air conditioning and heat pump equipment) in accordance with the EU F-gas Regulation (EU) N 517/2014.

This Regulation does not prevent Member States from introducing more stringent measures at national level. This may apply as well.

The frequency of leakage inspections depends on the amount of tonnes of CO<sub>2</sub> equivalent contained in the refrigerant circuit.

This is calculated by multiplying the refrigerant charge (in kg) and the GWP value of the used refrigerant.

For more detailed information, contact your local dealer.


## Additional Refrigerant Emission Control

Refrigerant conservation and emission reduction can be accomplished by following recommended Trane operation, maintenance, and service procedures, with specific attention to the following:

1. Refrigerant used in any type of air-conditioning or multi-pipe units should be recovered and/or recycled for reuse, reprocessed (reclaimed). **Never release refrigerant into the atmosphere.**
2. Always determine possible recycle or reclaim requirements of the recovered refrigerant before beginning recovery by any method.
3. Use approved containment vessels and safety standards. Comply with all applicable transportation standards when shipping refrigerant containers.
4. To minimize emissions while recovering refrigerant, use recycling equipment. Always attempt to use methods that will pull the lowest possible vacuum while recovering and condensing refrigerant into containment.

# Plant sketches

## 9.1 Standard version

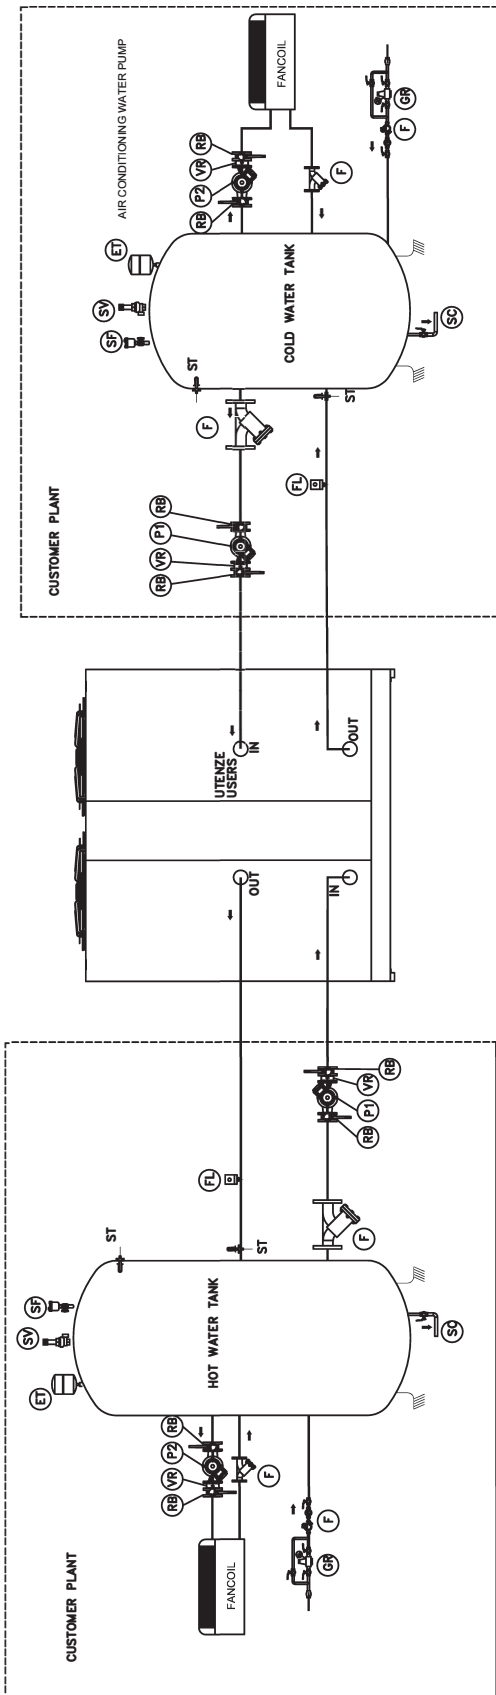

Flow switches and water strainers are separate and mandatory accessories which must be installed by the contractor/building owner, close to the unit, in both the hot and chilled inlet water pipes.

The flow switch signal prevails the build-in delta P switch signal to prevent unit failure in case of lack of water flow.

**Important for flow switches:**

Install the flow switch upright, with a minimum of 5 pipe diameters of straight horizontal run on each side.

Do not install close to elbows, orifices, or other valves.


**Important for water strainers:**

Install the water strainer in the inlet water pipes. Failure to do so can result in heat exchanger tube damage.

- P1 = Primary pump
- P2 = Secondary pump
- ST = Temperature probe
- FL = Flow switch
- SC = Drainage
- SF = Vent valve
- ET = Expansion vessel
- GR = Filling group
- R = Steel mesh strainer
- VR = Check valve
- SV = Safety valve
- RB = Interception valve

## Plant sketches

### 9.2 Single pump version

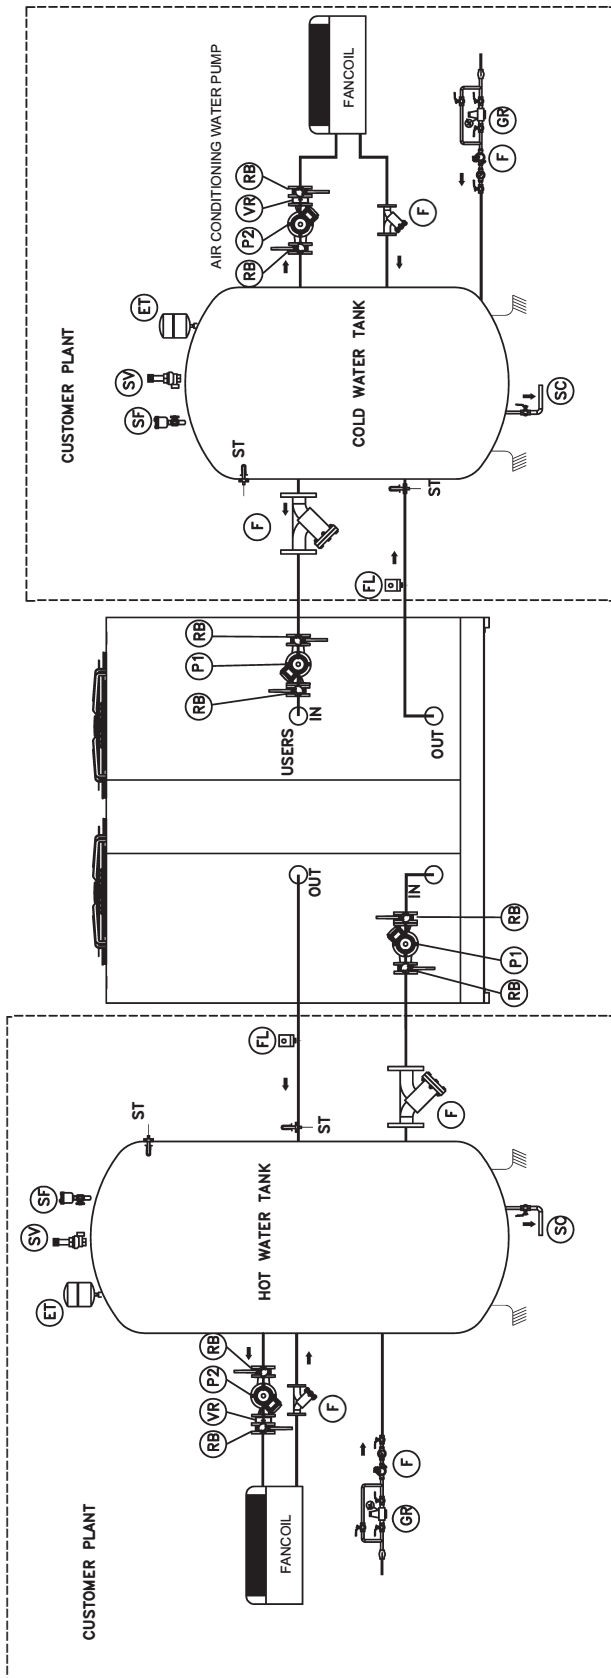

Flow switches and water strainers are separate and mandatory accessories which must be installed by the contractor/building owner, close to the unit, in both the hot and chilled inlet water pipes.

The flow switch signal prevails the build-in delta P switch signal to prevent unit failure in case of lack of water flow.

#### Important for flow switches:

Install the flow switch upright, with a minimum of 5 pipe diameters of straight horizontal run on each side.

Do not install close to elbows, orifices, or other valves.


#### Important for water strainers:

Install the water strainer in the inlet water pipes. Failure to do so can result in heat exchanger tube damage.

- P1 = Primary pump
- P2 = Secondary pump
- ST = Temperature probe
- FL = Flow switch
- SC = Drainage
- SF = Vent valve
- ET = Expansion vessel
- GR = Filling group
- R = Steel mesh strainer
- VR = Check valve
- SV = Safety valve
- RB = Interception valve

## Plant sketches

### 9.3 Single pump + stands by pumps version

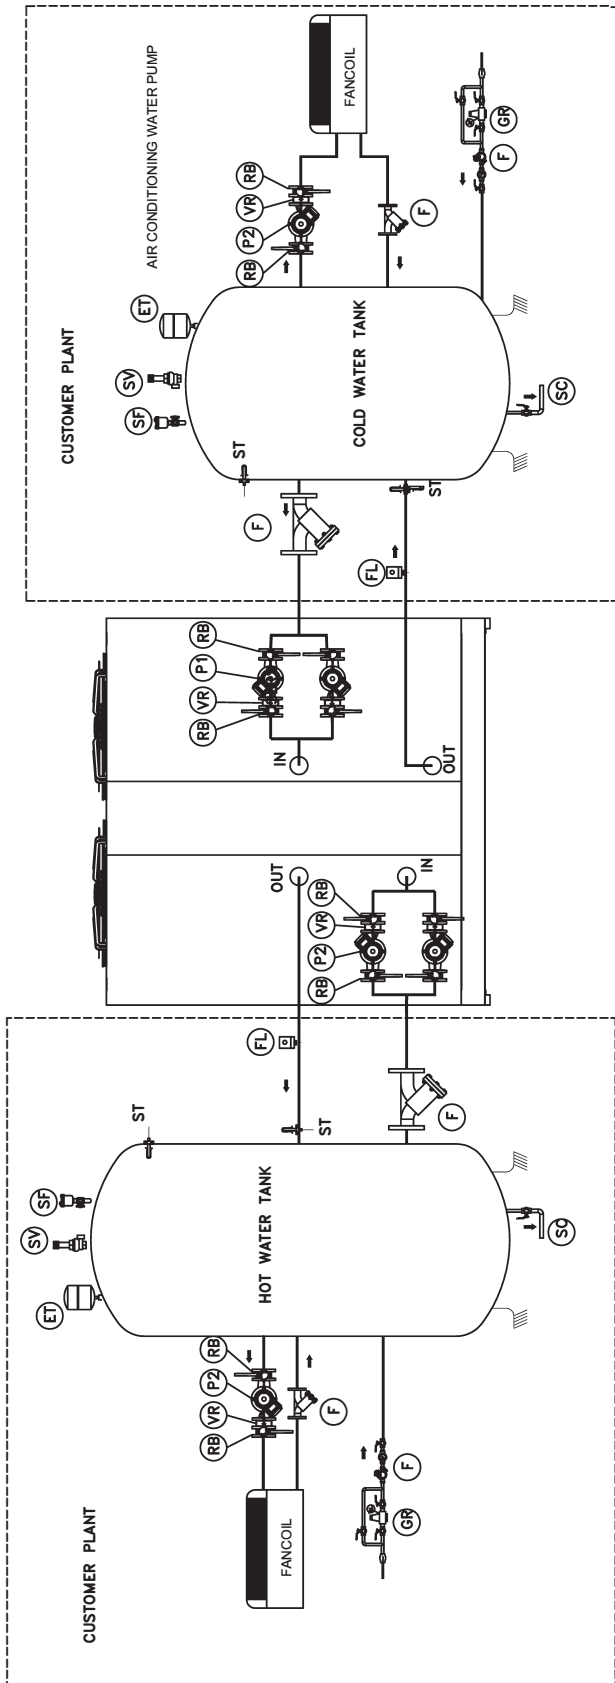

Flow switches and water strainers are separate and mandatory accessories which must be installed by the contractor/building owner, close to the unit, in both the hot and chilled inlet water pipes.

The flow switch signal prevails the build-in delta P switch signal to prevent unit failure in case of lack of water flow.

#### Important for flow switches:

Install the flow switch upright, with a minimum of 5 pipe diameters of straight horizontal run on each side.

Do not install close to elbows, orifices, or other valves.

#### Important for water strainers:

Install the water strainer in the inlet water pipes. Failure to do so can result in heat exchanger tube damage.

- P1 = Primary pump
- P2 = Secondary pump
- ST = Temperature probe
- FL = Flow switch
- SC = Drainage
- SF = Vent valve
- ET = Expansion vessel
- GR = Filling group
- R = Steel mesh strainer
- VR = Check valve
- SV = Safety valve
- RB = Interception valve

## Plant sketches

Check for hot and cold accumulation, and their proper installation according to the diagrams above.

Before a stationary unit with temperatures close to 0 °C, to provide compressed air to evacuate the contents of the exchanger in order to prevent breakage caused by ice formation.

### 9.4 Hydraulic connections

The connecting pipes should be adequately supported so as not to burden with their weight on the system.

The installation instructions included in the statements to follow, represent a necessary condition for the validity of the guarantee.

Trane is at your disposal to examine any differing needs, which still must be approved prior to the operation of the unit.

It is necessary that the water flow to the group is compatible with that of the evaporator. It is also necessary that the water flow is maintained constant during operation.

#### **Dimensioning of the minimum water content and flow**

*To function properly, the unit needs a water content sufficient to avoid continuous changes of the cycle or shutdown and restart the compressor too frequently (refer to the contents in this manual page 20) tab p. Refer to the general technical data chapter The content can be reduced by the quantity declared 'contained in the piping distribution system as regards the only air conditioning system. Accumulations undersized reduce the useful life of the unit design.*

*For a correct unit operation, it is absolutely necessary to ensure a constant flow rate to the unit, especially in case of absence storage tanks. It is recommended to mount an automatic or manual valve by-pass between the delivery branch and the return pump and to set it during the commissioning of the unit.*

WARNING: it is recommended to mount on the side water overflow valves to prevent dangerous overpressure and / or water hammer.

#### **Apparatus for adjusting the water circuit**

Monoblock centrifugal electric pump

Ensures the scope and prevalence needed to power the evaporator shell and tube or plate, storage and utilities.

Automatic water filling

Ensures the maintenance of water pressure in the system at least 1.5 bar.

Safety valve

The safety valve is opened when the pressure of the hydraulic circuit reaches 6 bars.

Expansion vessel

Compensates for small water hammer and volume changes for different temperatures.

Shut-off valves


Provide to intercept the pump or other components for maintenance.

Non-return valves

Take steps to ensure the direction of water flow and also have the function of preventing the propagation of heat downstream of the plant when its pump is switched off. The drawing below represents an example of a schematic for lifting and installing a unit. For specific drawings and clearances, contact your local Trane sales office.

# Dimensional drawing and weight

The drawing below represents an example of lifting and installing a unit. For specific drawings and clearances, contact your local Trane sales office.

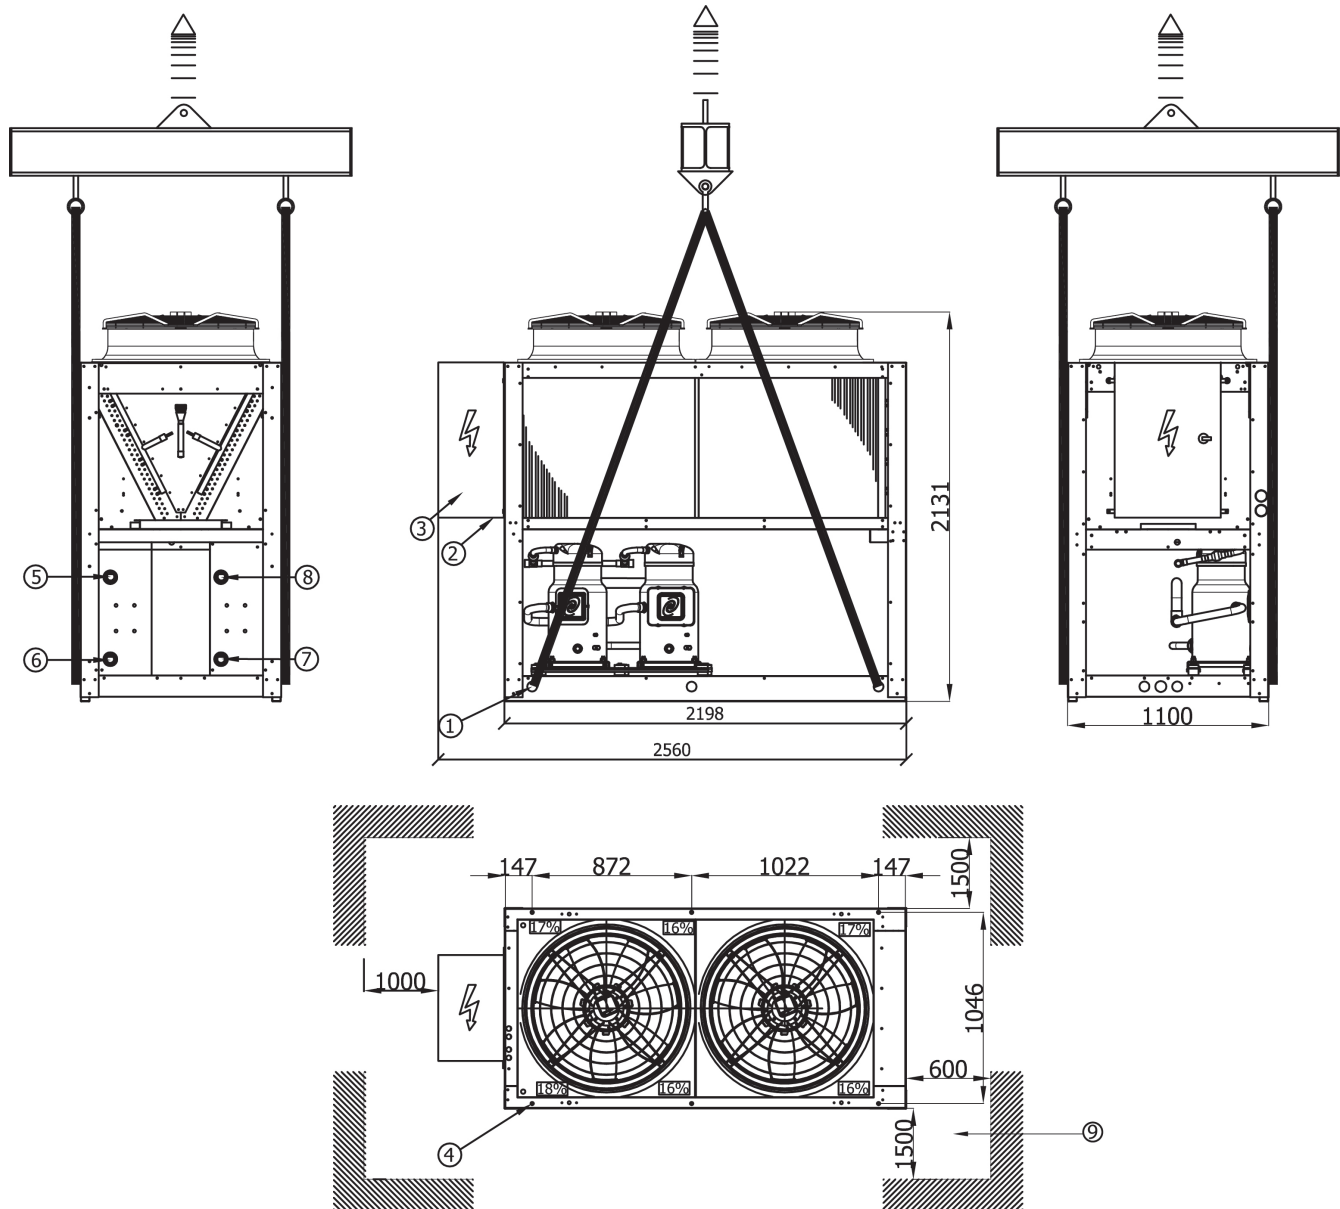

- 1 = Lifting holes
- 2 = Electric power supply
- 3 = Electric box
- 4 = A/V mounting position
- 5 = Chilled water inlet
- 6 = Chilled water outlet
- 7 = Hot water inlet
- 8 = Hot water outlet
- 9 = Minimum distance/clearance

## Dimensional drawing and weight

### Weights

<b>CMAC SE</b>																	
<b>Operating Weights</b>		<b>50</b>	<b>55</b>	<b>65</b>	<b>85</b>	<b>110</b>	<b>140</b>	<b>155</b>	<b>175</b>	<b>210</b>	<b>260</b>	<b>305</b>	<b>350</b>	<b>370</b>	<b>435</b>	<b>495</b>	<b>525</b>
Standard Version	kg	909	913	922	1117	1199	1470	1563	2038	2241	2415	2556	3136	3153	3227	4357	4379
Low Noise	kg	933	937	946	1141	1223	1494	1587	2062	2289	2463	2604	3184	3201	3275	4429	4451
Super low Noise	kg	986	990	999	1207	1289	1560	1653	2128	2421	2595	2736	3316	3333	3407	4628	4650
<b>Additional weight for Hydraulic version</b>																	
1 pump for chilled water circuit + 1 pump for hot water circuit, Low head pressure	kg	74	74	74	42	42	48	48	48	98	98	104	138	138	170	170	170
1 pump for chilled water circuit + 1 pump for hot water circuit, Medium head pressure	kg	78	78	84	44	54	54	54	54	104	104	126	170	170	170	170	170
1 pump for chilled water circuit + 1 pump for hot water circuit, High head pressure	kg	96	102	102	60	58	58	58	102	102	126	158	158	158	190	222	222
2 pumps for chilled water circuit + 2 pumps for hot water circuit, Low head pressure	kg	106	106	106	84	84	96	96	96	196	196	208	276	276	340	340	340
2 pumps for chilled water circuit + 2 pumps for hot water circuit, Medium head pressure	kg	114	114	126	88	108	108	108	108	208	208	252	340	340	340	340	340
2 pumps for chilled water circuit + 2 pumps for hot water circuit, High head pressure	kg	150	162	162	120	116	116	116	204	204	252	316	316	316	380	444	444
<b>Shipping Weights</b>																	
Standard Version	kg	899	903	912	1107	1191	1462	1553	2028	2205	2379	2504	3076	3093	3163	4299	4321
Low Noise	kg	923	927	936	1131	1215	1486	1577	2052	2253	2427	2552	3124	3141	3211	4371	4393
Super low Noise	kg	976	980	989	1197	1281	1552	1643	2118	2385	2559	2684	3256	3273	3343	4570	4592
<b>Additional weight for Hydraulic version</b>																	
1 pump for chilled water circuit + 1 pump for hot water circuit, Low head pressure	kg	74	74	74	42	42	48	48	48	98	98	104	138	138	170	170	170
1 pump for chilled water circuit + 1 pump for hot water circuit, Medium head pressure	kg	78	78	84	44	54	54	54	54	104	104	126	170	170	170	170	170
1 pump for chilled water circuit + 1 pump for hot water circuit, High head pressure	kg	96	102	102	60	58	58	58	102	102	126	158	158	158	190	222	222
2 pumps for chilled water circuit + 2 pumps for hot water circuit, Low head pressure	kg	106	106	106	84	84	96	96	96	196	196	208	276	276	340	340	340
2 pumps for chilled water circuit + 2 pumps for hot water circuit, Medium head pressure	kg	114	114	126	88	108	108	108	108	208	208	252	340	340	340	340	340
2 pumps for chilled water circuit + 2 pumps for hot water circuit, High head pressure	kg	150	162	162	120	116	116	116	204	204	252	316	316	316	380	444	444
<b>Tubes diameter</b>																	
<b>Standard Version</b>																	
⑤ - ⑥	∅	2"½	2"½	2"½	2"½	2"½	2"½	2"½	3"	3"	3"	3"	3"	3"	3"	5"	5"
		GM														VICTAULIC	
⑦ - ⑧	∅	2"½	2"½	2"½	2"½	2"½	2"½	2"½	3"	3"	3"	3"	3"	3"	3"	5"	5"
		GM														VICTAULIC	
<b>Hydraulic version</b>																	
⑤ - ⑥	∅	2"	2"	2"	2"½	2"½	2"½	2"½	3"	3"	3"	4"	4"	4"	4"	5"	5"
		VICTAULIC															
⑦ - ⑧	∅	2"	2"	2"	2"½	2"½	2"½	2"½	3"	3"	3"	4"	4"	4"	4"	5"	5"
		VICTAULIC															



## Dimensional drawing and weight

### Weights

CMAC HE														
Operating Weights		50	60	70	90	120	130	145	165	180	220	260	320	355
Standard Version	kg	1030	1034	1043	1289	1381	1466	1608	2202	2255	2401	2709	3144	3382
Low Noise	kg	1054	1058	1067	1313	1405	1490	1632	2226	2279	2449	2757	3192	3430
Super low Noise	kg	1107	1111	1120	1379	1471	1556	1698	2292	2435	2581	2889	3324	3562
<b>Additional weight for Hydraulic version</b>														
1 pump for chilled water circuit + 1 pump for hot water circuit, Low head pressure	kg	74	74	74	42	42	48	48	48	48	98	98	104	138
1 pump for chilled water circuit + 1 pump for hot water circuit, Medium head pressure	kg	78	78	84	44	54	54	54	54	54	104	104	126	170
1 pump for chilled water circuit + 1 pump for hot water circuit, High head pressure	kg	96	102	102	60	58	58	58	102	102	102	126	158	158
2 pumps for chilled water circuit + 2 pumps for hot water circuit, Low head pressure	kg	106	106	106	84	84	96	96	96	96	196	196	208	276
2 pumps for chilled water circuit + 2 pumps for hot water circuit, Medium head pressure	kg	114	114	126	88	108	108	108	108	108	208	208	252	340
2 pumps for chilled water circuit + 2 pumps for hot water circuit, High head pressure	kg	150	162	162	120	116	116	116	204	204	204	252	316	316
<b>Shipping Weights</b>														
Standard Version	kg	1012	1016	1025	1271	1381	1466	1582	2166	2219	2365	2657	3088	3326
Low Noise	kg	1036	1040	1049	1295	1405	1490	1606	2190	2243	2413	2705	3136	3374
Super low Noise	kg	1089	1093	1102	1361	1471	1556	1672	2256	2399	2545	2837	3268	3506
<b>Additional weight for Hydraulic version</b>														
1 pump for chilled water circuit + 1 pump for hot water circuit, Low head pressure	kg	74	74	74	42	42	48	48	48	48	98	98	104	138
1 pump for chilled water circuit + 1 pump for hot water circuit, Medium head pressure	kg	78	78	84	44	54	54	54	54	54	104	104	126	170
1 pump for chilled water circuit + 1 pump for hot water circuit, High head pressure	kg	96	102	102	60	58	58	58	102	102	102	126	158	158
2 pumps for chilled water circuit + 2 pumps for hot water circuit, Low head pressure	kg	106	106	106	84	84	96	96	96	96	196	196	208	276
2 pumps for chilled water circuit + 2 pumps for hot water circuit, Medium head pressure	kg	114	114	126	88	108	108	108	108	108	208	208	252	340
2 pumps for chilled water circuit + 2 pumps for hot water circuit, High head pressure	kg	150	162	162	120	116	116	116	204	204	204	252	316	316
<b>Tubes diameter</b>														
<b>Standard Version</b>		<b>50</b>	<b>60</b>	<b>70</b>	<b>90</b>	<b>120</b>	<b>130</b>	<b>145</b>	<b>165</b>	<b>180</b>	<b>220</b>	<b>260</b>	<b>320</b>	<b>355</b>
⑤ - ⑥	Ø	2"½	2"½	2"½	2"½	2"½	2"½	3"	3"	3"	3"	3"	4"	4"
		GM											VICTAULIC	
⑦ - ⑧	Ø	2"½	2"½	2"½	2"½	2"½	2"½	3"	3"	3"	3"	3"	4"	4"
		GM											VICTAULIC	
<b>Hydraulic version</b>														
⑤ - ⑥	Ø	2"	2"	2"	2"½	2"½	2"½	2"½	3"	3"	3"	3"	4"	4"
		VICTAULIC												
⑦ - ⑧	Ø	2"	2"	2"	2"½	2"½	2"½	2"½	3"	3"	3"	3"	4"	4"
		VICTAULIC												



## Dimensional drawing and weight

### Weights

CMAC HE													
Operating Weights		375	455	500	535	575	600	660	710	755	800	840	880
Standard Version	kg	3401	3836	4572	4678	4845	4882	4935	6157	6193	6228	6263	6298
Low Noise	kg	3449	3884	4644	4750	4917	4954	5007	6253	6289	6324	6359	6394
Super low Noise	kg	3581	4016	4843	4949	5116	5153	5206	6518	6554	6589	6624	6659
<b>Additional weight for Hydraulic version</b>													
1 pump for chilled water circuit + 1 pump for hot water circuit, Low head pressure	kg	138	138	170	170	170	170	190	228	228	236	236	236
1 pump for chilled water circuit + 1 pump for hot water circuit, Medium head pressure	kg	170	170	170	170	190	190	228	228	228	236	236	236
1 pump for chilled water circuit + 1 pump for hot water circuit, High head pressure	kg	158	190	222	222	222	236	236	236	236	236	236	236
2 pumps for chilled water circuit + 2 pumps for hot water circuit, Low head pressure	kg	276	276	340	340	340	340	380	456	456	472	472	472
2 pumps for chilled water circuit + 2 pumps for hot water circuit, Medium head pressure	kg	340	340	340	340	380	380	456	456	456	472	472	472
2 pumps for chilled water circuit + 2 pumps for hot water circuit, High head pressure	kg	316	380	444	444	444	472	472	472	472	472	472	472
<b>Shipping Weights</b>													
Standard Version	kg	3345	3780	4506	4612	4769	4802	4855	6045	6081	6116	6151	6186
Low Noise	kg	3393	3828	4578	4684	4841	4874	4927	6141	6177	6212	6247	6282
Super low Noise	kg	3525	3960	4777	4883	5040	5073	5126	6406	6442	6477	6512	6547
<b>Additional weight for Hydraulic version</b>													
1 pump for chilled water circuit + 1 pump for hot water circuit, Low head pressure	kg	138	138	170	170	170	170	190	228	228	236	236	236
1 pump for chilled water circuit + 1 pump for hot water circuit, Medium head pressure	kg	170	170	170	170	190	190	228	228	228	236	236	236
1 pump for chilled water circuit + 1 pump for hot water circuit, High head pressure	kg	158	190	222	222	222	236	236	236	236	236	236	236
2 pumps for chilled water circuit + 2 pumps for hot water circuit, Low head pressure	kg	276	276	340	340	340	340	380	456	456	472	472	472
2 pumps for chilled water circuit + 2 pumps for hot water circuit, Medium head pressure	kg	340	340	340	340	380	380	456	456	456	472	472	472
2 pumps for chilled water circuit + 2 pumps for hot water circuit, High head pressure	kg	316	380	444	444	444	472	472	472	472	472	472	472
<b>Tubes diameter</b>													
<b>Standard Version</b>													
⑤ - ⑥	∅	4"	4"	5"	5"	5"	5"	5"	6"	6"	6"	6"	6"
		VICTAULIC											
⑦ - ⑧	∅	4"	4"	5"	5"	5"	5"	5"	6"	6"	6"	6"	6"
		VICTAULIC											
<b>Hydraulic version</b>													
⑤ - ⑥	∅	4"	4"	5"	5"	5"	5"	5"	6"	6"	6"	6"	6"
		VICTAULIC											
⑦ - ⑧	∅	4"	4"	5"	5"	5"	5"	5"	6"	6"	6"	6"	6"
		VICTAULIC											

# Troubleshooting

In this section you will find a list of the most common problems that may cause the chiller unit to stop or malfunction. Possible remedies are shown alongside a description of easily identifiable remedies.

**Warning!** Extreme care should be taken when performing work or repairs on the unit: overconfidence can result in injuries, even serious ones, to inexperienced individuals. Operations marked with the letter “U” can be performed directly by the user, who must carefully follow the instructions provided in this manual. Operations marked with the letter “S” may be performed exclusively by specialised personnel.

Once the cause has been identified, you are advised to contact authorized service centre or a qualified technician for help.

Symptom	Who can take corrective action		Probable cause	Possible remedy	
	Cooling	Heating			U = User S = specialised personnel
<b>A</b> The unit does not start	X	X	S	Faulty connection or open contacts	Check the voltage and close contacts.
	X	X	S	Lack of external consents	Check the operation of the water pump, the pressure switch, vent the system.
	X	X	U	Anti-recycle timer active	Wait 5 minutes for the timer gives consent.
	X	X	S	Probe faulty service	Check and replace if necessary.
	X	X	U	Lack of consent of the service thermostat	Plant in temperature, lack of demand; verify calibration.
	X	X	U	Lack of consent of the frost protection thermostat	Check water temperature Check the calibration of the antifreeze alarm.
	X	X	S	Frost sensor defective	Check the operation.
	X	X	S	Tripped breaker general	Check if there are any short circuits in the wiring or in the windings of the motors of pump, fan, compressor, and the transformer.
	X	X	S	Lack of consent of the high or low pressure	See points D-E.
	X	X	S	Defective compressor	See point B.
<b>B</b> The compressor does not start	X	X	S	Compressor burnt or seized	Replace the compressor.
	X	X	S	Compressor contactor de-energized	Check the voltage across the coil of the compressor contactor and the continuity of the coil.
	X	X	S	Power circuit open	Investigate the cause of the protection, and check if there are any short circuits in the wiring or in the windings of the motors of pump, fan, compressor and transformer.
		X	S	Motor thermal protection open	The compressor has operated in critical condition or there is a lack of charge in the circuit: Make sure that working conditions are within the limits of operation. Loss of coolant: see section G.
<b>C</b> The compressor starts up and stops repeatedly	X	X	S	Intervention of the minimum	See point E.
	X	X	S	Compressor contactor defective	Check and replace if necessary.
	X	X	U	Calibration values of the set-point or differential	Modify them as reported in the tables.
	X	X	S	Lack of coolant	See point G.

## Troubleshooting

Symptom	Cooling	Heating	Who can take corrective action		Probable cause	Possible remedy
			U = User	S = specialised personnel		
<b>D</b> The compressor does not start because the maximum pressure switch has tripped	X	X	S		Pressure switch out of order	Check and replace.
	X	X	S		Overcharge of refrigerant	Download the excess gas.
	X		U		Finned coil clogged, air flow rate is too low	Remove dirt from the coil and obstructions to the airflow.
	X		S		Fan not working	See point F.
			X	U	Water circulation pump blocked	Unlock the pump.
			X	S	Water circulation pump defective	Check the pump and replace if necessary.
	X	X	S		Presence of non-condensable gases in the refrigerant circuit	Prime the circuit after it has been downloaded and put under vacuum.
	X	X	S		Refrigerant filter clogged	Check and replace.
<b>E</b> The compressor does not start because the minimum pressure switch has tripped	X	X	S		Pressure switch out of order	Check and replace.
	X	X	S		Machine completely download	See point G.
		X	U		Finned coil clogged, air flow rate is too low	Remove dirt from the coil.
	X		U		Water circulation pump blocked	Unlock the pump.
	X		S		Water circulation pump blocked defective	Check the pump and replace if necessary.
		X	S		Presence of frost on evaporator coil	See point O.
		X	S		Evaporator fan not working	See point F.
	X	X	S		Refrigerant filter clogged	Check and replace.
	X	X	S		Expansion device that is not working properly	Check and if necessary replace.
	X	X	S		The presence of moisture in the refrigerant circuit	Replace the filter and dry eventualmentem and recharge.
<b>F</b> The fans do not start	X	X	S		Fan contactor de-energized	Check the voltage across the coil of the contactor and the continuity of the coil.
	X	X	S		Lack of output voltage from the control fan speed	Check the contacts, replace if necessary.
	X	X	S		Thermal protection inside the fan	Check the condition of the fan and the air temperature during operation of the unit.
	X	X	S		Fan motor faulty	Check and replace.
	X	X	S		Loose electrical connections	Check and secure.
<b>G</b> Lack of gas	X	X	S		Loss in the refrigerant circuit	Check the cooling circuit using a leak detector after pressurising the circuit to approximately 4 bars. Repair, evacuate and refill.
<b>I</b> Frost in liquid pipe downstream from a filter	X	X	S		The liquid filter is clogged	Replace the filter.

## Troubleshooting

Symptom	Cooling	Heating	Who can take corrective action		Probable cause	Possible remedy
			U = User	S = specialised personnel		
<b>L</b> The unit works continuously without ever stopping	X	X		S	Lack of refrigerant gas	See item G.
	X	X	U		Incorrect tuning of the operating thermostat	Check the setting.
	X	X		S	Excessive thermal load	Reduce the thermal load.
	X	X		S	Compressor does not give the thermal output	Check, change or revise.
	X	X		S	The liquid filter is clogged	Replace.
<b>M</b> The unit works regularly but with an insufficient capacity	X	X		S	Low refrigerant charge	See point G.
	X	X		S	4-way reversing valve defective	Check the power supply and the coils of the valve and replace the valve.
<b>N</b> Frost in the compressor intake pipe	X	X		S	Expansion device that is not working properly	Verify replace.
	X			S	Water circulation pump blocked	Unlock the pump.
	X	X		S	Water circulation pump defective	Check the pump and replace if necessary.
	X	X		S	Low refrigerant charge	See point G.
	X	X		S	The liquid filter is clogged	Replace.
<b>O</b> The defrosting cycle is never activated		X		S	4-way reversing valve defective	Check the power supply and the coil of the valve and replace the valve.
		X		S	The defrost thermostat is worn out or has an incorrect calibration value	Check and replace if defective or change the calibration value.
<b>P</b> Abnormal noises detected in the system	X	X		S	Compressor noisy	Check and replace if necessary.
	X	X		S	The panels vibrate	Fasten properly.
<b>Q</b> THE UNIT DOES NOT START	X	X		s	phases of the supply network reversed	Invert phases.



# Notes



## Notes



## Notes

Trane - by Trane Technologies (NYSE: TT), a global climate innovator - creates comfortable, energy efficient indoor environments for commercial and residential applications. For more information, please visit [trane.com](http://trane.com) or [tranetechnologies.com](http://tranetechnologies.com).

Trane has a policy of continuous product and product data improvement and reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.

CG-SVX042C-GB July 2021  
Supersedes CG-SVX042B-GB\_0818

© 2021 Trane

Confidential and proprietary Trane information